

PROBLEM SYMPTOMS TABLE

DOUBLE LOCKING SYSTEM

Symptom	Suspect Area	See page
Double locking system does not operate	1. Double locking switch circuit	DI-660
		DI-690
		DI-708
		DI-728
	2. Double locking motor circuit	DI-658
		DI-688
		DI-710
		DI-730
	3. Double locking system	BE-18
	4. Each door ECU	IN-30
	5. Body ECU No. 1	IN-30

OTHERS

Symptom	Suspect Area	See page
Mirror retract system does not operate	1. Electrical retract switch circuit	DI-605
	2. Retract motor circuit	DI-656
	3. Body ECU No. 1	DI-686
		IN-30
DTC is not output, or is output when should not be.	1. Diagnosis circuit	DI-617
	2. Body ECU No. 1	IN-30
Unlock cannot be operated when impact sensing	1. Supplemental restraint system	DI-605
	2. Body No.1 ECU	IN-30