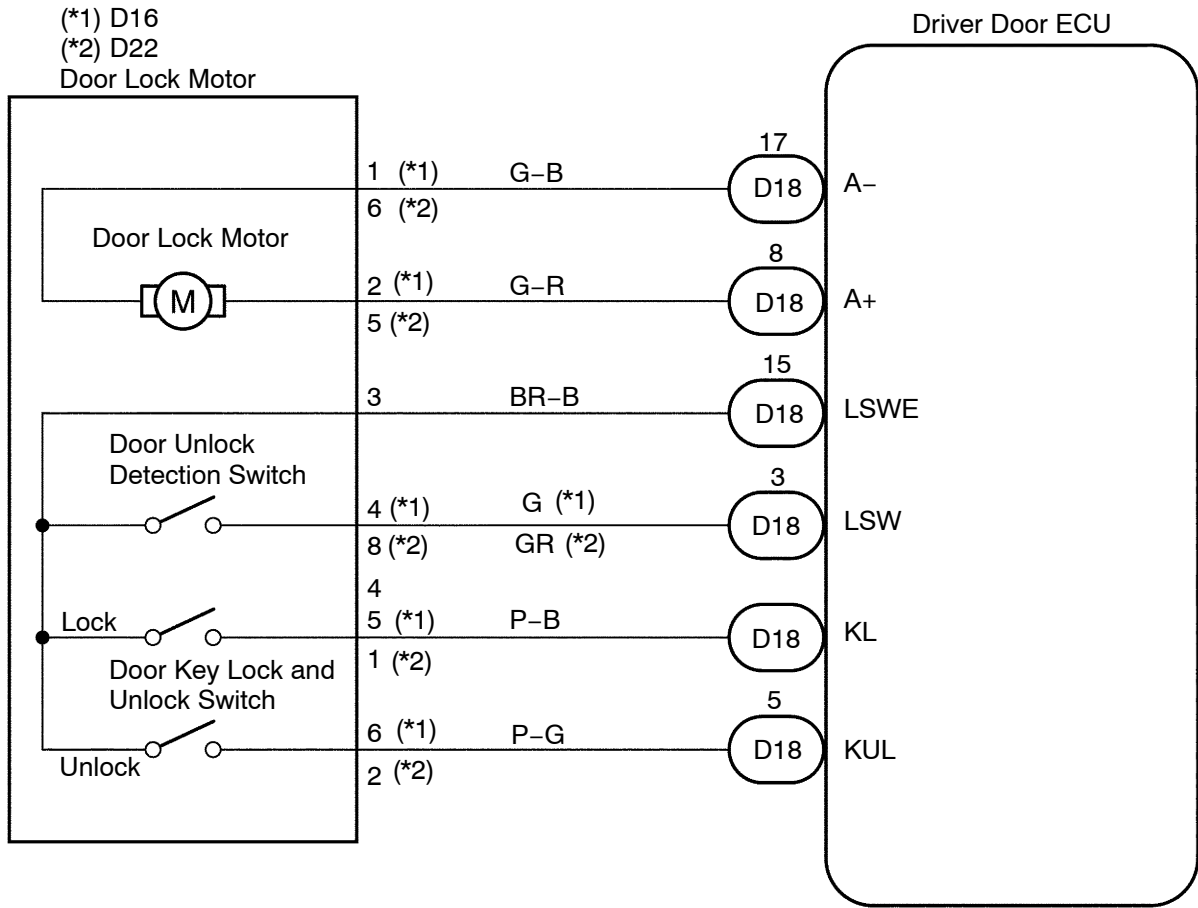


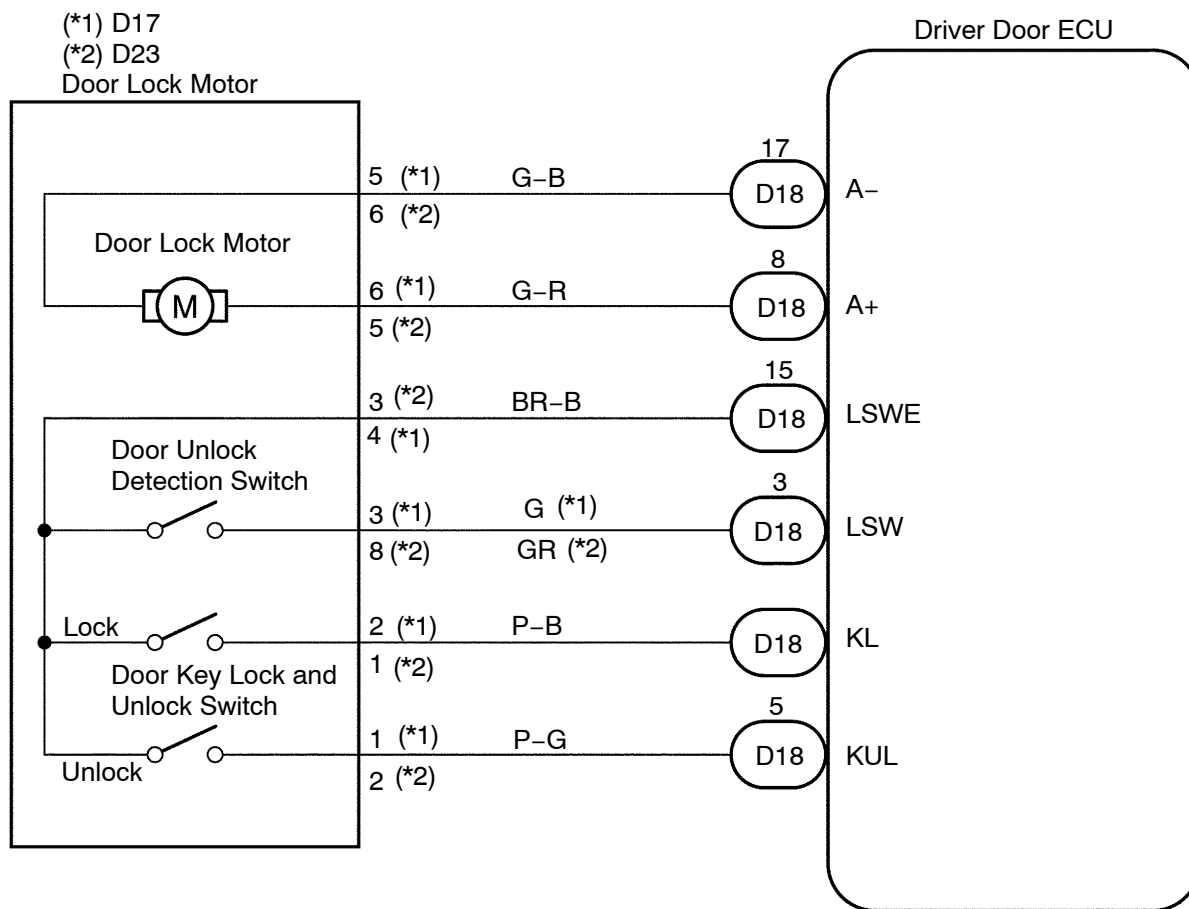
# Door lock motor circuit

## WIRING DIAGRAM

LHD models:



(\*1) : w/o Double locking system  
(\*2): w/ Double locking system

**RHD models:**

(\*1) : w/o Double locking system

(\*2): w/ Double locking system

104890

**INSPECTION PROCEDURE****HINT:**

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

**1 Check door lock motor using LEXUS hand-held tester.**

**PREPARATION:**

Connect the LEXUS hand-held tester to the DLC 3.

**CHECK:**

 
Check that the door lock motor can operate in an ACTIVE TEST.

OK

 
Proceed to next circuit inspection shown on problem symptom table. (See Pub. No. RM588E on page DI-616)

NG

- |          |                                                                                                                                                               |
|----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>2</b> | <b>Check door lock motor</b><br>(w/o double locking system: See Pub. No. RM588E on page BE-148<br>w/ double locking system: <a href="#">See page BE-12</a> ). |
|----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|

**NG****Replace the door lock motor.****OK**

- |          |                                                                                     |
|----------|-------------------------------------------------------------------------------------|
| <b>3</b> | <b>Check wireharness and connector between door lock motor and driver door ECU.</b> |
|----------|-------------------------------------------------------------------------------------|

**NG****Repair or replace wireharness or connector.****OK**

|                                                                                                             |
|-------------------------------------------------------------------------------------------------------------|
| <b>Proceed to next circuit inspection shown on problem symptom table. (See Pub. RM588E on page DI-616).</b> |
|-------------------------------------------------------------------------------------------------------------|