



Door lock motor circuit

WIRING DIAGRAM

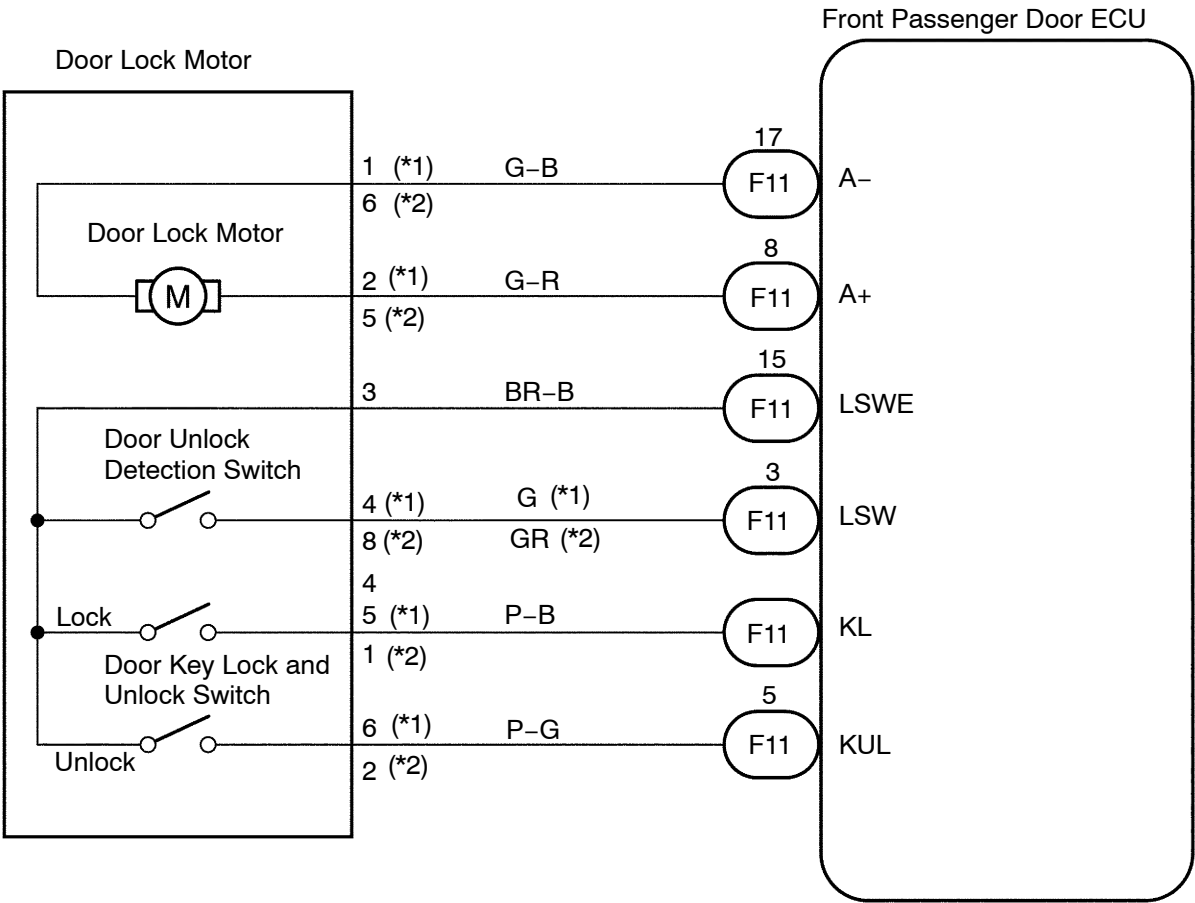

(*1) : w/o Double locking system
(*2): w/ Double locking system

RHD models:

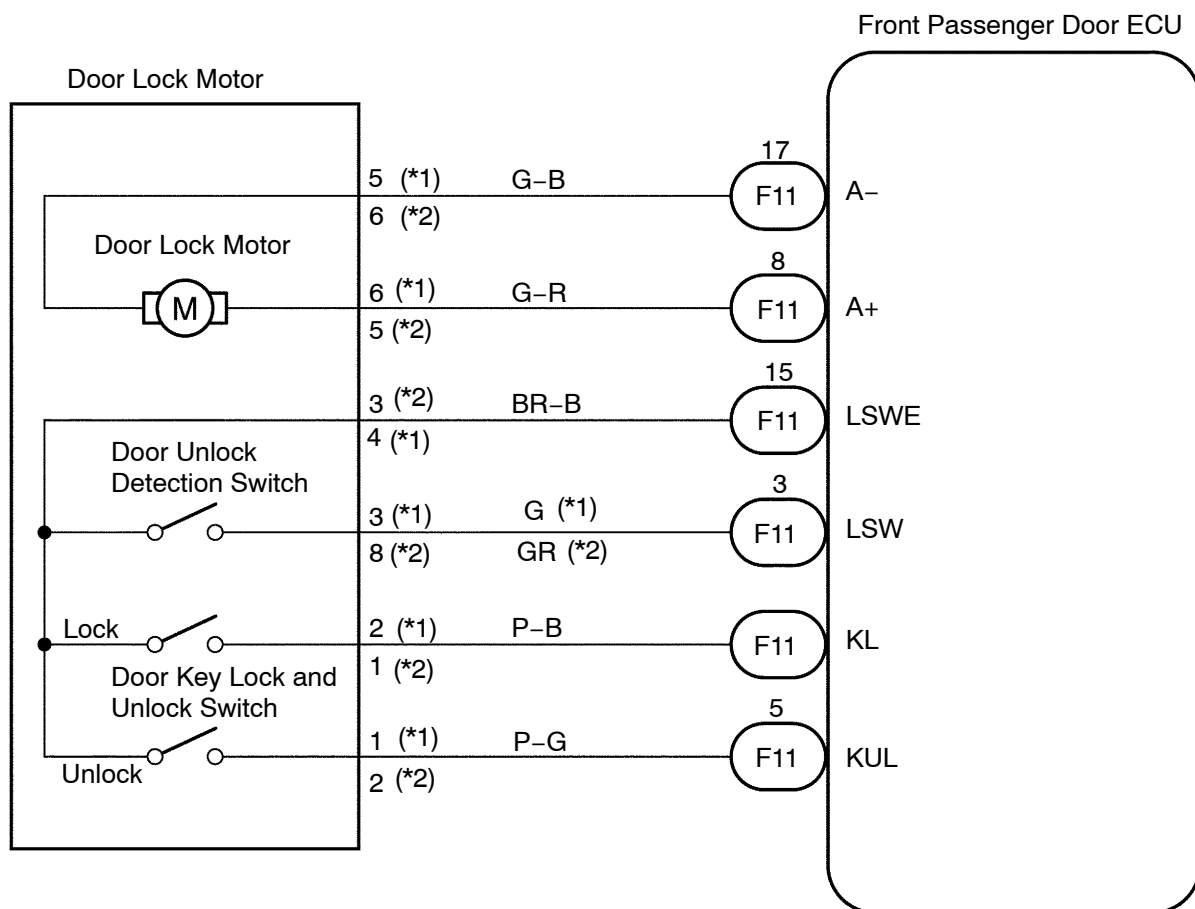

(*1) : w/o Double locking system

(*2): w/ Double locking system

104890

INSPECTION PROCEDURE

HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1	Check door lock motor using LEXUS hand-held tester.
---	--

PREPARATION:

Connect the LEXUS hand-held tester to the DLC 3.

CHECK:

Check that the door lock motor can operate in an ACTIVE TEST.

OK

Proceed to next circuit inspection shown on problem symptom table. (See Pub. No. RM588E on page DI-616)

NG

2	Check door lock motor (w/o double locking system: See Pub. No. RM588E on page BE-148 w/ double locking system: See page BE-12).
---	--

NG

Replace the door lock motor.

OK

3	Check wireharness and connector between door lock motor and Front Passenger Door ECU.
---	--

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptom table (See Pub.No. RM588E on page DI-616).