

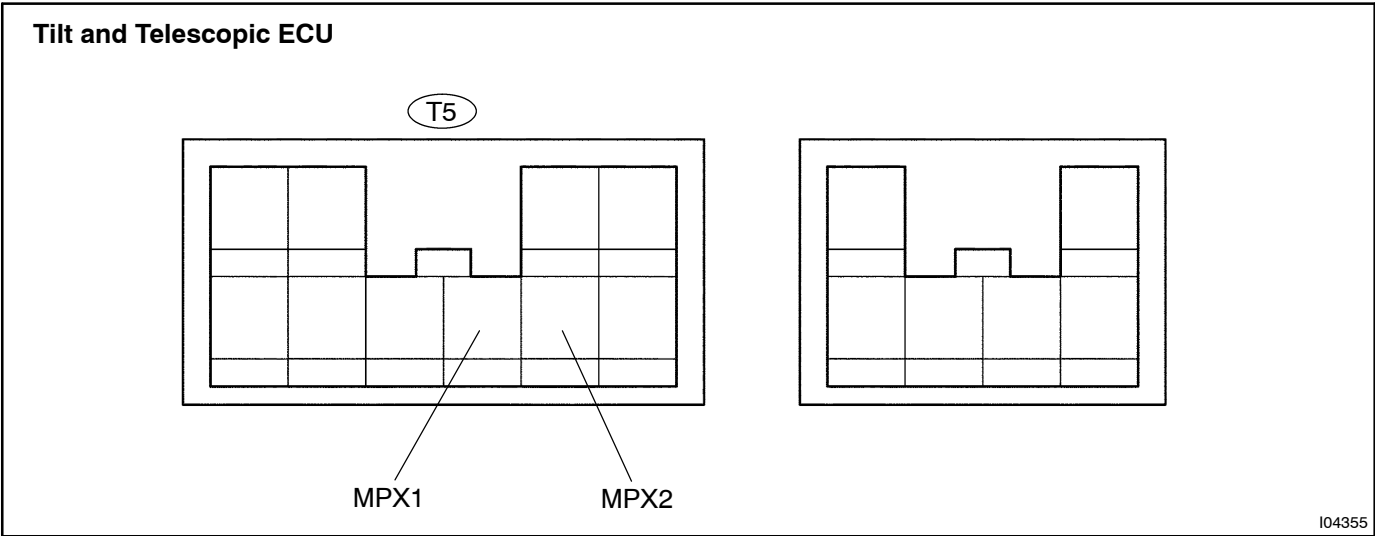
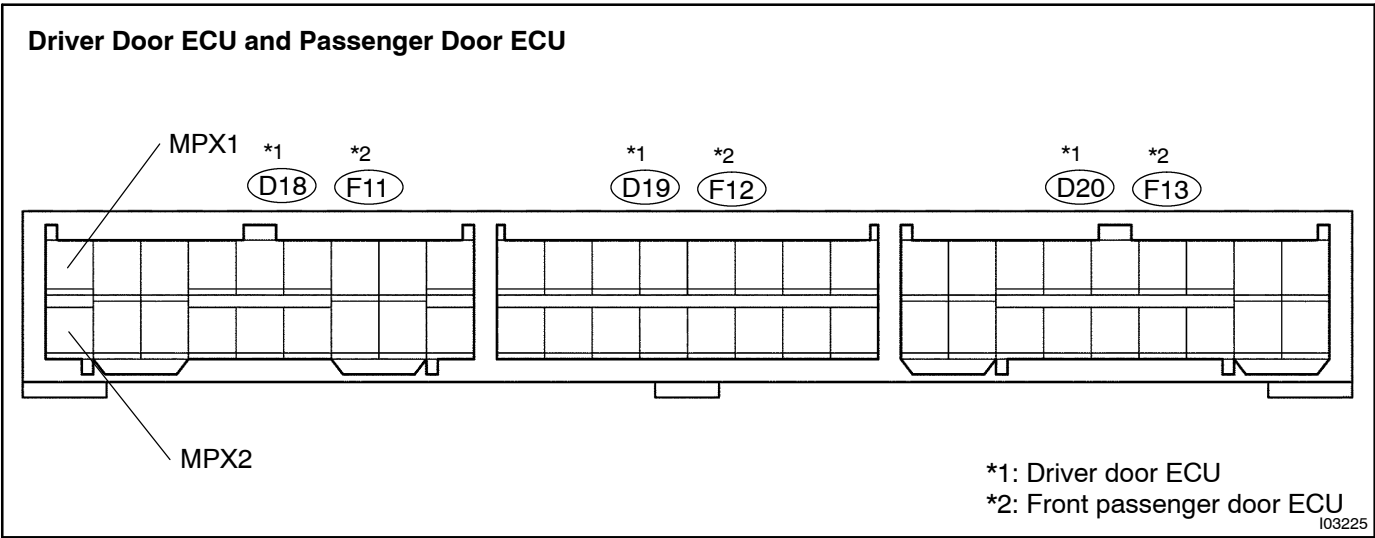


TERMINALS OF ECU

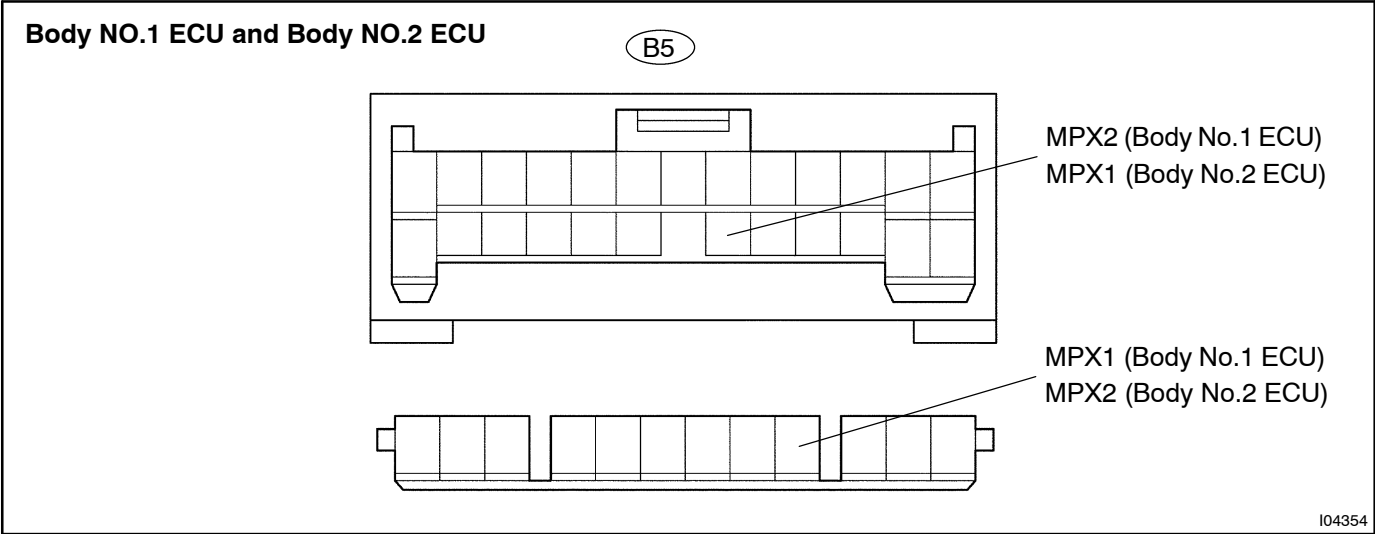


Rear Right Door ECU and Rear Left Door ECU

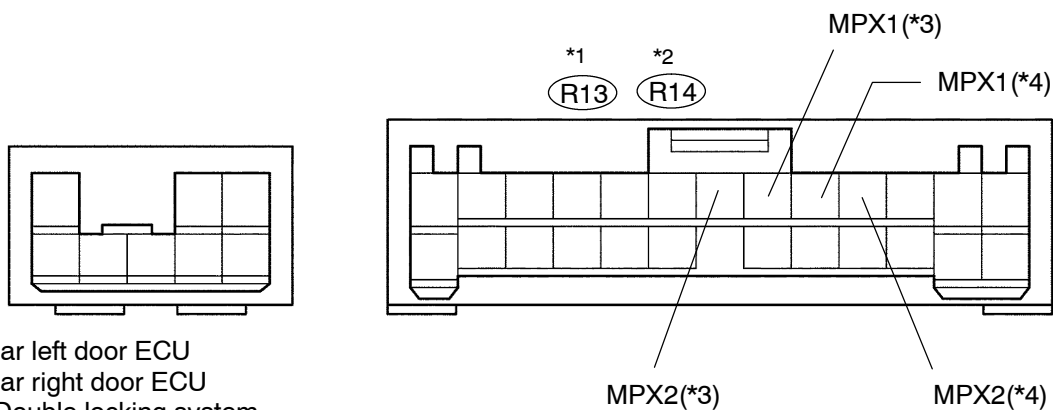

- (*1): Rear left door ECU
 (*2): Rear right door ECU
 (*3): w/Double locking system
 (*4): w/o Double locking system

I03226

Engine and ECT ECU

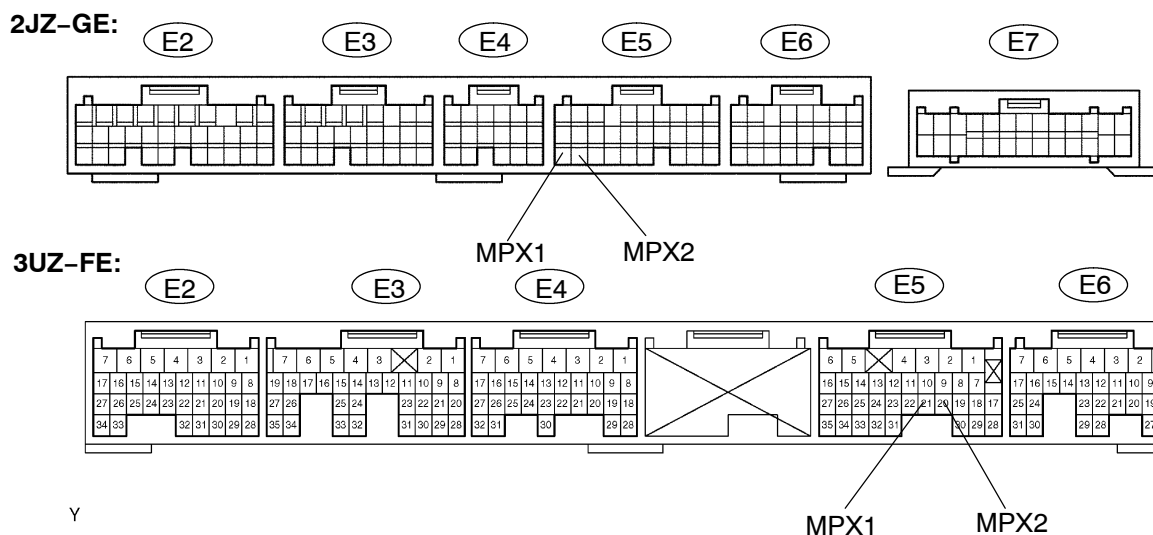


Y

I04347
 A14471


I21072

A/C Amplifier

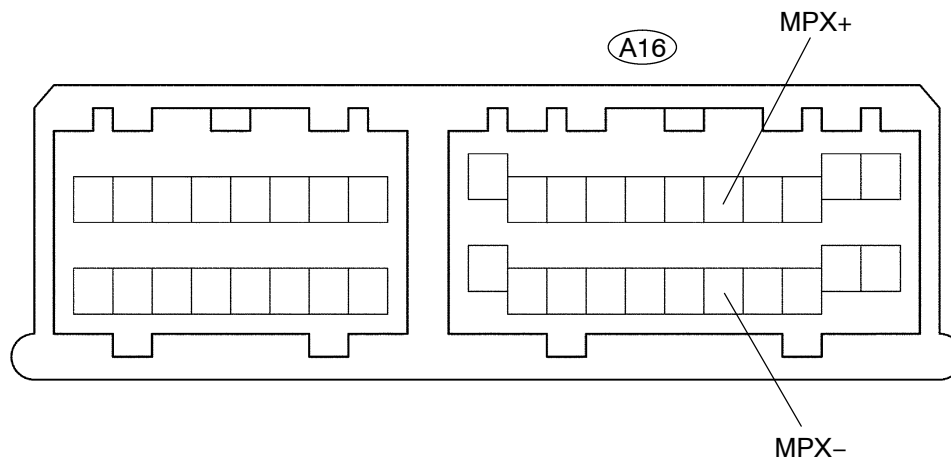


I04359

Combination Meter ECU

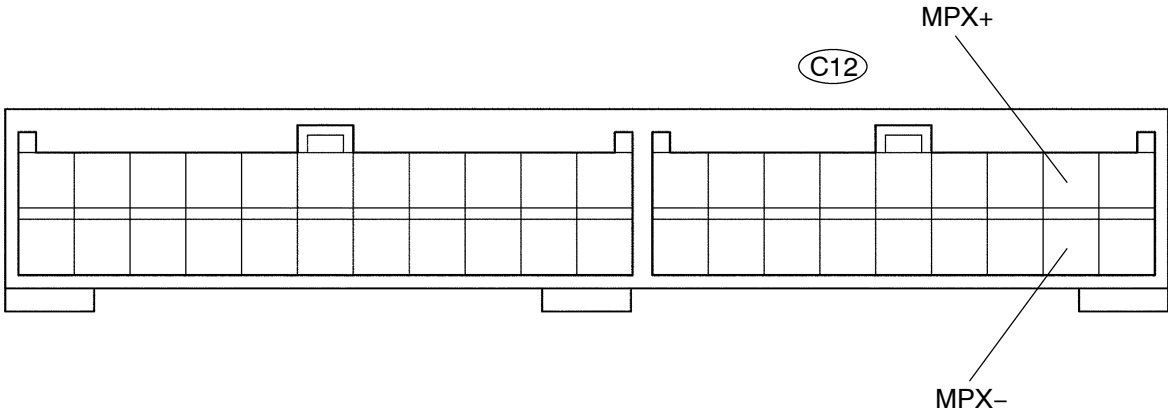


I04357

Power Seat ECU

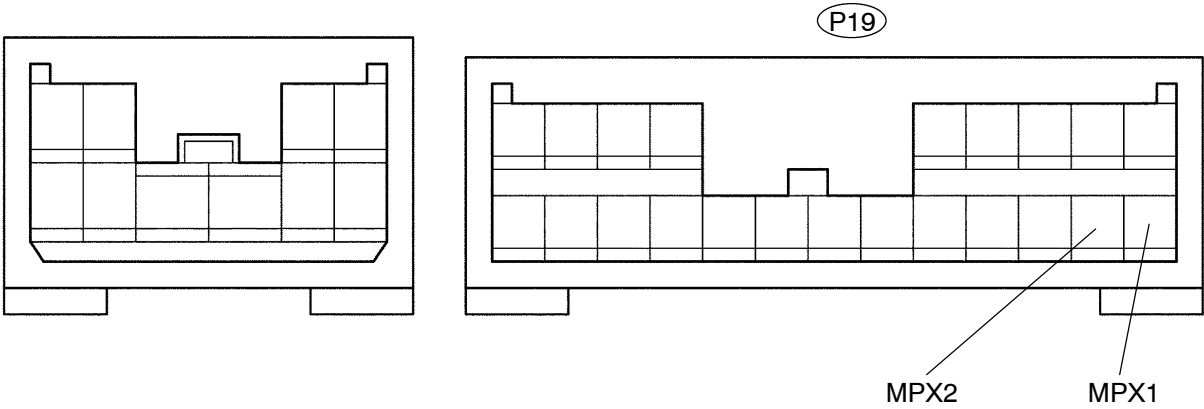


I04356

Sliding Roof ECU

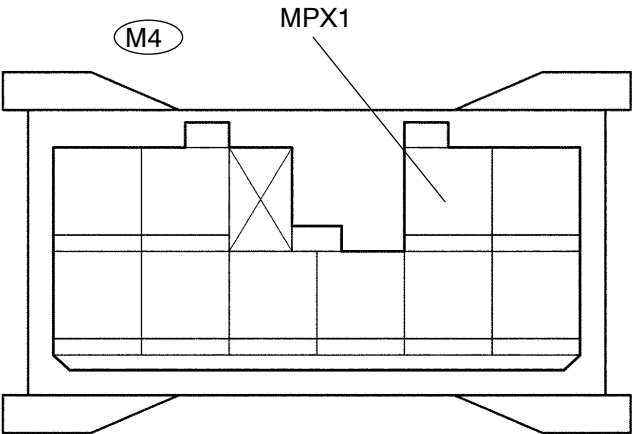


I04348

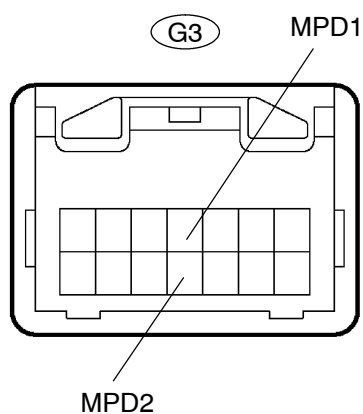Gateway ECU


N

I13684

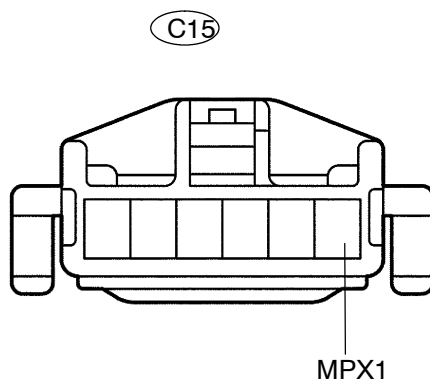Steering Pad Switch

P

I21108

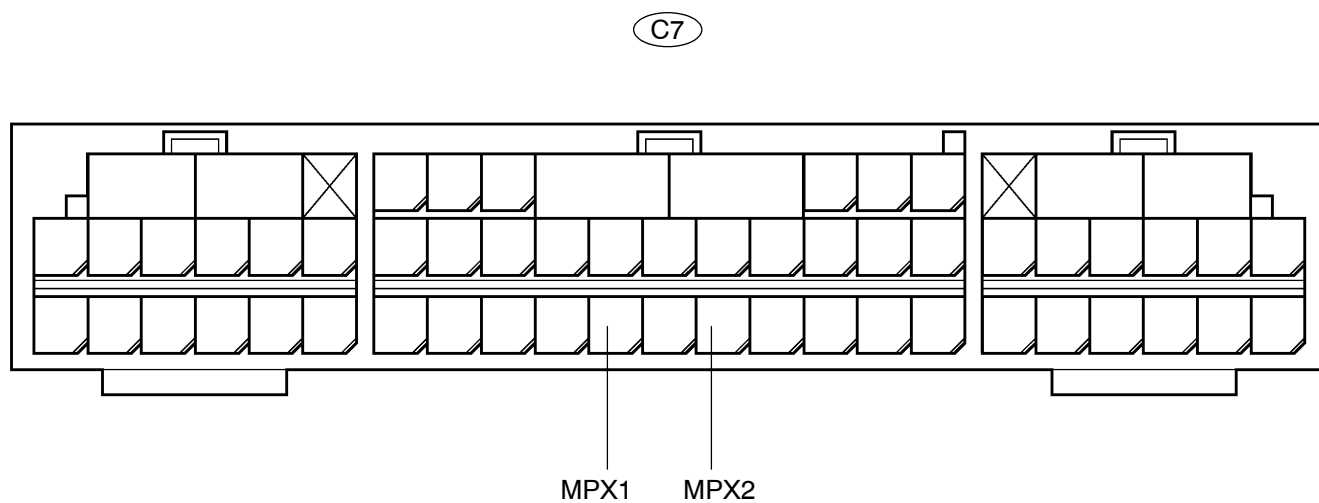Airbag Sensor Assembly

H01357