

DTC	B1285 / 85	Steering pad switch communication stop (GS 430 only)
------------	-------------------	---

CIRCUIT DESCRIPTION

This DTC is output when communication stops between steering pad switch and A/C amplifier, gateway ECU, tilt and telescopic ECU.

DTC No.	DTC Detecting Condition	Trouble Area
B1285/85	No communication from steering pad switch more than 10 seconds.	• Steering pad switch • Wireharness

WIRING DIAGRAM

See page DI-753

INSPECTION PROCEDURE

1	Check steering pad switch.
----------	-----------------------------------

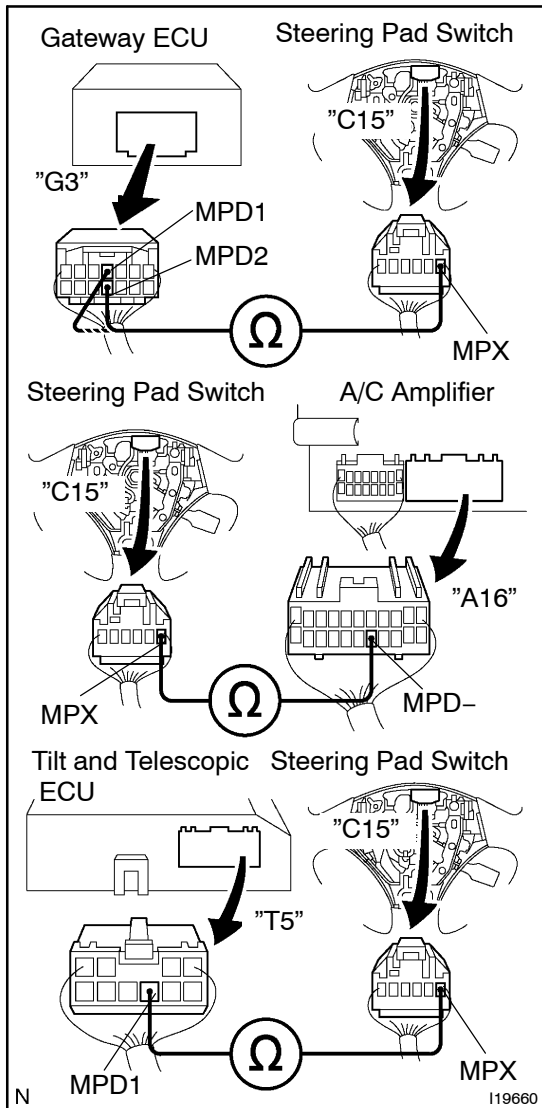
CHECK:

Turn ignition switch ON and check that the steering pad switch operate normally.

NG

Replace steering pad switch.

OK

2**Check wireharness.****PREPARATION:**

Disconnect connector "G3" of gateway ECU "A16" of A/C amplifier ECU, "T5" of tilt and telescopic ECU and "C15" of steering pad switch.

CHECK:

- Check continuity between terminals MPX of steering pad switch and MPD1, MPD2 of gateway ECU.
- Check continuity between terminals MPX of steering pad switch and MPX- of A/C amplifier.
- Check continuity between terminals MPX of steering pad switch and MPX1 of tilt and telescopic ECU.

OK:

There is a continuity in wireharness of both (a) and (b) or (a) and (c), or either (b) or (c).

HINT:

If there is OPEN in wireharness of either (a) or (b), please repair it.

NG**Repair or replace wireharness.****OK****Replace the steering pad switch.**