

## PROBLEM SYMPTOMS TABLE

| Flow chart No. | Component     | Symptom                                                                                                  |
|----------------|---------------|----------------------------------------------------------------------------------------------------------|
| 1.             | Multi display | Black screen (Nothing displayed)                                                                         |
| 2.             |               | No sound with Power switch pressed. ("AUTO OFF" on audio screen)                                         |
| 3.             |               | No navigation screen displayed when "MAP", "MENU" or "DEST" switch pressed. (Screen cannot be switched.) |
| 4.             |               | No corresponding screen displayed when "AUDIO" or "Information" switch pressed.                          |
| 5.             |               | No navigation displayed, "Audio OFF" on audio screen and no audio sound.                                 |
| 6.             |               | Screen cannot be dimmed in night time.                                                                   |
| 7.             |               | Navigation screen not stabilized. (Synchronous error)                                                    |
| 8.             |               | Color on navigation screen is unusual (RGB signal error)                                                 |
| 9.             |               | Black screen appears when "MAP", "Menu" or "DEST" switch pressed.                                        |
| 10.            |               | Sound of radio, cassette tape or CD only cannot be heard from speaker.                                   |
| 11.            |               | No sound (radio, cassette tape, CD) can be heard from driver side door speaker only.                     |
| 12.            |               | Map DISC cannot be inserted.                                                                             |
| 13.            |               | MAP screen display does not appear.<br>(Disc Caution screen does not change.)                            |
| 14.            |               | MAP is displayed in white or blue screen. (Switch and vehicle position mark is displayed.)               |
| 15.            |               | Touch switch does not function. (Navigation screen only)                                                 |
| 16.            |               | Touch switch does not function. (A/C control screen only)                                                |
| 17.            |               | Panel switch does not function. (Navigation screen only)                                                 |
| 18.            |               | Panel switch does not function. (A/C control screen only)                                                |
| 19.            |               | The screen cannot be change to night mode color.                                                         |
| 20.            |               | Vehicle position is deviated from correct point badly.                                                   |
| 21.            |               | GPS mark does not appear.                                                                                |

|     |                 |                                                                             |
|-----|-----------------|-----------------------------------------------------------------------------|
| 22. |                 | No voice navigation.                                                        |
| 23. |                 | Vehicle position rotates without control. (Map rotates without control)     |
| 24. |                 | Driving direction is opposite to moving direction of vehicle position mark. |
| 25. | Audio Head Unit | Radio reception poor.                                                       |
| 26. |                 | Cassette tape cannot be inserted.                                           |
| 27. |                 | Cassette tape cannot be ejected.                                            |
| 28. |                 | Any speaker does not work.                                                  |
| 29. | CD AUTO Changer | CD magazine cannot be inserted.                                             |
| 30. |                 | CD magazine inserted, but no power.                                         |
| 31. |                 | Power coming in, but CD auto changer not operating..                        |
| 32. |                 | Sound jumps.                                                                |
| 33. |                 | Sound quality poor. (Volume faint)                                          |
| 34. |                 | CD magazine will not be ejected.                                            |
| 35. |                 | Any speaker does not work.                                                  |
| 36. | Power Amplifier | No power coming in.                                                         |
| 37. |                 | Any speaker does not work.                                                  |
| 38. |                 | No power coming, but woofer amplifier not operating.                        |
| 39. | Noise           | Noise occurs                                                                |
| 40. |                 | Noise produced by vibration or shock while driving.                         |
| 41. |                 | Noise produced when engine starts.                                          |