

H POWER SOURCE (Current Flow Chart)

Location	Parts		Code or Location	Page Nos. of Related Systems	CB or Fuse																			238,262,288,298,316 326,336,348,362,374 386,400,416,424,432 438,444,446,450,462 528
					Parts																			
					Code or Location																			
			606	610	606	498 508	498 508	148 160 478	142	208 214 610	208 214	498 508	498 508 598	498 508 598	498 508	208 214	208 214	588	610					
			A/C Condenser Fan Motor	A/C Magnetic Clutch and Lock Sensor	A/C Triple Pressure SW (A/C Dual and Single Pressure SW)	ABS & TRC & VSC Actuator	ABS & TRC & VSC Actuator	Air Flow Meter	Alternator	A/C Control Assembly	A/T Shift Position Illumination	ABS & TRC & VSC ECU	ABS & TRC & VSC ECU	ABS & TRC & VSC ECU	ABS & TRC & VSC ECU	Ashtray Illumination Rear LH	Ashtray Illumination Rear RH	Auto Antenna Control Relay and Motor	Blower Motor Controller	Body ECU No.1				
			A2	A3	A4	A6	A7	A11	A15	A16	A21	A22	A23	A24	A25	A36	A37	A38	B4	B5				
①	5A	IGN			●									●										
	5A	SRS-B																						
	5A	STARTER																						
	7.5A	OBD																						
	7.5A	PANEL								●	●					●	●							
	10A	FUEL OPN																						
	10A	GAUGE					●		●			●	●	●	●									
	10A	HEATER		●																				
	10A	TAIL																						
	15A	CIG																						
	15A	ECU-IG											●					●						
	15A	FR FOG									●							●			●			
	15A	RADIO NO.2																						
	15A	SRS-ACC																						
	15A	STOP												●										
	20A	D FR DOOR																						
	20A	D RR DOOR																						
	20A	WASHER																						
	25A	WIPER																						
	30A	D P/SEAT																						
②	5A	ECU-B2								●								●						
	10A	DOME																						
	10A	MIR HTR																						
	10A	RR FOG																						
	15A	TV																						
	20A	P FR DOOR																						
	20A	P RR DOOR																						
	20A	SEAT HTR																						
	25A	S/ROOF																						
30A	DEFOG																							
30A	P P/SEAT																							
③	5A	ALT-S						●																
	10A	H-LP L UPR																						
	10A	H-LP R UPR																						
	10A	HORN																			●			
	10A	MPX-B																						
	15A	ETCS																						
	15A	H-LP L LWR																						
	15A	H-LP R LWR																						
	15A	TEL																						
	10A	TURN-HAZ																						
	20A	RADIO NO.1																						
	25A	EFI						●																
	30A	CDS FAN	●																					
	30A	DRL NO.1																						
	40A	H-LP CLN																						
	30A	RDI FAN																						
40A	ABS NO.2				●	●																		
50A	HEATER																	●						
60A	ABS NO.1					●					●				●									
⑤	15A	H-LP L UPR																						
	15A	H-LP R UPR																						

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ①: Driver Side J/B (See page 58)

② : Passenger Side J/B (See page 60)

④ : Engine Room No.2 R/B (See page 55) ⑤ : Engine Room No.3 R/B (See page 56)

119

H POWER SOURCE (Current Flow Chart)

Page Nos. of Related Systems			238,262,288,298,308 312,316,326,336,348 362,374,386,400,416 424,432,438,450,462	478	138,148 160,478 490,610	148,160 172,478 490,598	610	208 214	188	188	200 204	200 204	552	546	238,262,288,298 316,326,336,348 362,374,386,400 416,424,450,462
Parts															
Code or Location															
CB or Fuse			D20	E3	E5	E6	E10	E11	F1	F2	F5	F6	F7	F8	F11
①	5A	IGN			●	●									
	5A	SRS-B			●										
	5A	STARTER			●										
	7.5A	OBD													
	7.5A	PANEL						●							
	10A	FUEL OPN												●	
	10A	GAUGE		●	●	●									
	10A	HEATER			●		●								
	10A	TAIL									●	●			
	15A	CIG													
	15A	ECU-IG	●												
	15A	FR FOG							●	●					●
	15A	RADIO NO.2													
	15A	SRS-ACC													
	15A	STOP			●										
	20A	D FR DOOR													
	20A	D RR DOOR													
	20A	WASHER													
	25A	WIPER											●		
	30A	D P/SEAT													
②	5A	ECU-B2													
	10A	DOME													
	10A	MIR HTR													
	10A	RR FOG													
	15A	TV													
	20A	P FR DOOR													●
	20A	P RR DOOR													
	20A	SEAT HTR													
	25A	S/ROOF													
	30A	DEFOG													
③	5A	ALT-S													
	10A	H-LP L UPR													
	10A	H-LP R UPR													
	10A	HORN													
	10A	MPX-B	●												●
	15A	ETCS				●									
	15A	H-LP L LWR													
	15A	H-LP R LWR													
	15A	TEL													
	10A	TURN-HAZ													
	20A	RADIO NO.1													
	25A	EFI			●	●									
	30A	CDS FAN													
	30A	DRL NO.1													
	40A	H-LP CLN													
	30A	RDI FAN													
	40A	ABS NO.2													
⑤	15A	H-LP L UPR													
	15A	H-LP R UPR													

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ① : Driver Side J/B (See page 58)

② : Passenger Side J/B (See page 60)

④ : Engine Room No.2 R/B (See page 55) ⑤ : Engine Room No.3 R/B (See page 56)

121

H POWER SOURCE (Current Flow Chart)

Location			Page Nos. of Related Systems	Parts	Code or Location	CB or Fuse																					
						H22	H23	H25	H26	I11	I13	I14	I15	L2	L3	L4	L5	L7	L8	L9	M2	M4	N1	N3	N5	P4	
①	5A	IGN																									
	5A	SRS-B																									
	5A	STARTER																									
	7.5A	OBD																									
	7.5A	PANEL	●															●									
	10A	FUEL OPN																									
	10A	GAUGE																									
	10A	HEATER																									
	10A	TAIL																									
	15A	CIG																									
	15A	ECU-IG																									
	15A	FR FOG																									
	15A	RADIO NO.2																									
	15A	SRS-ACC																									
	15A	STOP			●	●																					
	20A	D FR DOOR																									
	20A	D RR DOOR																									
	20A	WASHER	●																								
	25A	WIPER																									
	30A	D P/SEAT																									
②	5A	ECU-B2																									
	10A	DOME																									
	10A	MIR HTR																									
	10A	RR FOG																									
	15A	TV																									
	20A	P FR DOOR																									
	20A	P RR DOOR																									
	20A	SEAT HTR																									
	25A	S/ROOF																									
	30A	DEFOG																									
30A	P P/SEAT																										
③	5A	ALT-S																									
	10A	H-LP L UPR																									
	10A	H-LP R UPR																									
	10A	HORN																									
	10A	MPX-B																									
	15A	ETCS																									
	15A	H-LP L LWR																									
	15A	H-LP R LWR																									
	15A	TEL																									
	10A	TURN-HAZ																									
	20A	RADIO NO.1																									
	25A	EFI																									
	30A	CDS FAN																									
	30A	DRL NO.1																									
	40A	H-LP CLN																									
	30A	RDI FAN																									
	40A	ABS NO.2																									
	50A	HEATER																									
60A	ABS NO.1																										
⑤	15A	H-LP L UPR																									
	15A	H-LP R UPR																									

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ① : Driver Side J/B (See page 58) ② : Passenger Side J/B (See page 60)
④ : Engine Room No.2 R/B (See page 55) ⑤ : Engine Room No.3 R/B (See page 56)

123

H POWER SOURCE (Current Flow Chart)

Location	Page Nos. of Related Systems	Parts	Code or Location	CB or Fuse	Rear Door RH ECU	Remote Control Mirror LH	Remote Control Mirror RH	Seat Heater SW	Shift Lock Control ECU	Step Light LH	Step Light RH	Stereo Component Amplifier	Stop Light SW	Seat Heater (Driver's Seat Back)	Seat Heater (Driver's Seat Cushion)	Seat Heater (Front Passenger's Seat Back)	Seat Heater (Front Passenger's Seat Cushion)	Tilt and Telescopic ECU	Transponder Key Amplifier	Turn Signal Flasher	Telephone Transceiver and Speaker Relay	VSV (ACIS)	VSV (EVAP)
					R14	R17	R18	S4	S5	S6	S7	S10	S12	S16	S17	S18	S19	T5	T6	T7	T8	V2	V3
①	5A	IGN											●										
	5A	SRS-B											●										
	5A	STARTER																					
	7.5A	OBD																					
	7.5A	PANEL		●				●															
	10A	FUEL OPN							●											●			
	10A	GAUGE																					
	10A	HEATER																					
	10A	TAIL																					
	15A	CIG																					
	15A	ECU-IG		●														●			●		
	15A	FR FOG																					
	15A	RADIO NO.2							●														
	15A	SRS-ACC																					
	15A	STOP											●										
	20A	D FR DOOR																					
	20A	D RR DOOR		●																			
	20A	WASHER																					
	25A	WIPER																					
	30A	D P/SEAT																					
②	5A	ECU-B2																					
	10A	DOME								●	●												
	10A	MIR HTR				●	●																
	10A	RR FOG																					
	15A	TV																					
	20A	P FR DOOR																					
	20A	P RR DOOR		●																			
	20A	SEAT HTR						●						●	●	●	●						
	25A	S/ROOF																					
	30A	DEFOG																					
③	5A	ALT-S																					
	10A	H-LP L UPR																					
	10A	H-LP R UPR																					
	10A	HORN																					
	10A	MPX-B		●																			
	15A	ETCS																					
	15A	H-LP L LWR																					
	15A	H-LP R LWR																					
	15A	TEL																					
	10A	TURN-HAZ																					
	20A	RADIO NO.1																					
	25A	EFI										●											
	30A	CDS FAN																					
	30A	DRL NO.1																					
	40A	H-LP CLN																					
④	30A	RDI FAN																					
	40A	ABS NO.2																					
	50A	HEATER																					
	60A	ABS NO.1																					
	15A	H-LP L UPR																					
	15A	H-LP R UPR																					
	15A	H-LP L UPR																					
	15A	H-LP R UPR																					

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ① : Driver Side J/B (See page 58)

② : Passenger Side J/B (See page 60)

④ : Engine Room No.2 R/B (See page 55) ⑤ : Engine Room No.3 R/B (See page 56)

208 214	498 508	238 262 288 298	238 262 288 298	552 598	552	606	238,262,288 298,316,326 336,348,362 374,386,400	188,238,262,288,298 308,312,316,326,336 348,362,374,386,400 416,424,432,438,450 462	188 238 262	188 238 262	238,262,288,298,316 326,336,348,362,374 386,400,416,424,432 438,444,446,450,462 574,610	548	238 262 574	574	148 160 172 478 490	606	138	498 508
VSC Off SW	VSC Warning Buzzer	Vanity Light LH	Vanity Light RH	Washer Level Warning SW	Washer Motor	Water Temp. SW	Wireless Door Lock ECU	Body ECU No.2	FOG Relay (Coil Side)	FOG Relay (Point Side)	Body ECU No.1	IG Relay (Coil Side)	MIR Relay (Coil Side)	Noise Filter	EFI Relay (Point Side)	ENG MAIN Relay (Coil Side)	STARTER Relay (Coil Side)	ABS MOTOR Relay (Point Side)
V4	V5	V6	V7	W1	W2	W4	W6	①			②					③		④
						●										●		
●																	●	
				●				●	●		●		●					
	●							●		●	●	●						
										●								
					●													
		●	●				●				●							
														●				
								●			●							
															●			
																		●

③ : Engine Room No.1 R/B (See page 54)

⑥ : Passenger Side R/B (See page 57)

⑦ : Driver Side R/B (See page 57)

H POWER SOURCE (Current Flow Chart)

Location	*Page Nos. of Related Systems		Parts	Code or Location	CB or Fuse	498 508	238 262 336 348 528	238 262 336 348 528	498 508	610	610	606	606	606	606	450	574	574	610	238 262 610	262 474	262 474
①	5A	IGN																				
	5A	SRS-B																				
	5A	STARTER																				
	7.5A	OBD																				
	7.5A	PANEL																				
	10A	FUEL OPN																				
	10A	GAUGE																				
	10A	HEATER																				
	10A	TAIL																				
	15A	CIG																				
	15A	ECU-IG																				
	15A	FR FOG																				
	15A	RADIO NO.2																				
	15A	SRS-ACC																				
	15A	STOP																				
	20A	D FR DOOR																				
	20A	D RR DOOR																				
	20A	WASHER																				
	25A	WIPER																				
	30A	D P/SEAT																				
②	5A	ECU-B2																				
	10A	DOME																				
	10A	MIR HTR																				
	10A	RR FOG																				
	15A	TV																				
	20A	P FR DOOR																				
	20A	P RR DOOR																				
	20A	SEAT HTR																				
	25A	S/ROOF																				
	30A	DEFOG																				
③	5A	ALT-S																				
	10A	H-LP L UPR																				
	10A	H-LP R UPR																				
	10A	HORN																				
	10A	MPX-B																				
	15A	ETCS																				
	15A	H-LP L LWR																				
	15A	H-LP R LWR																				
	15A	TEL																				
	10A	TURN-HAZ																				
	20A	RADIO NO.1																				
	25A	EFI																				
	30A	CDS FAN																				
	30A	DRL NO.1																				
	40A	H-LP CLN																				
	30A	RDI FAN																				
	40A	ABS NO.2																				
	50A	HEATER																				
⑤	60A	ABS NO.1																				
	15A	H-LP L UPR																				
	15A	H-LP R UPR																				

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ① : Driver Side J/B (See page 58) ② : Passenger Side J/B (See page 60)
④ : Engine Room No.2 R/B (See page 55) ⑤ : Engine Room No.3 R/B (See page 56)