

INSPECTION PROCEDURE

1	Check MPXB, GAUGE and DOOR(FR) fuse.
----------	---

CHECK:

Check continuity of MPXB,GAUGE and DOOR(FR) fuse.

OK:

Continuity

NG

Replace the failure fuse.

OK

2	Check voltage between terminals BDR,CPUB, SIG and GND of driver door ECU connector.
----------	--

PREPARATION:

Turn ignition switch ON.

CHECK:

Measure voltage between terminals SIG, and GND.

OK:**Voltage: 10 – 14V****PREPARATION:**

- (a) Turn ignition switch OFF.
- (b) Disconnect the driver door ECU connector.

CHECK:

Measure voltage between terminals BDR, CPUB and GND.

OK:**Voltage: 10 – 14V**

OK

Proceed to next circuit inspection shown on problem symptoms table.([See page DI-706](#))

NG

3**Check wireharness and connector between ECU and body ground.****NG****Repair or replace wireharness or connector****OK****Check and repair wireharness and connector
between ECU and battery.**