


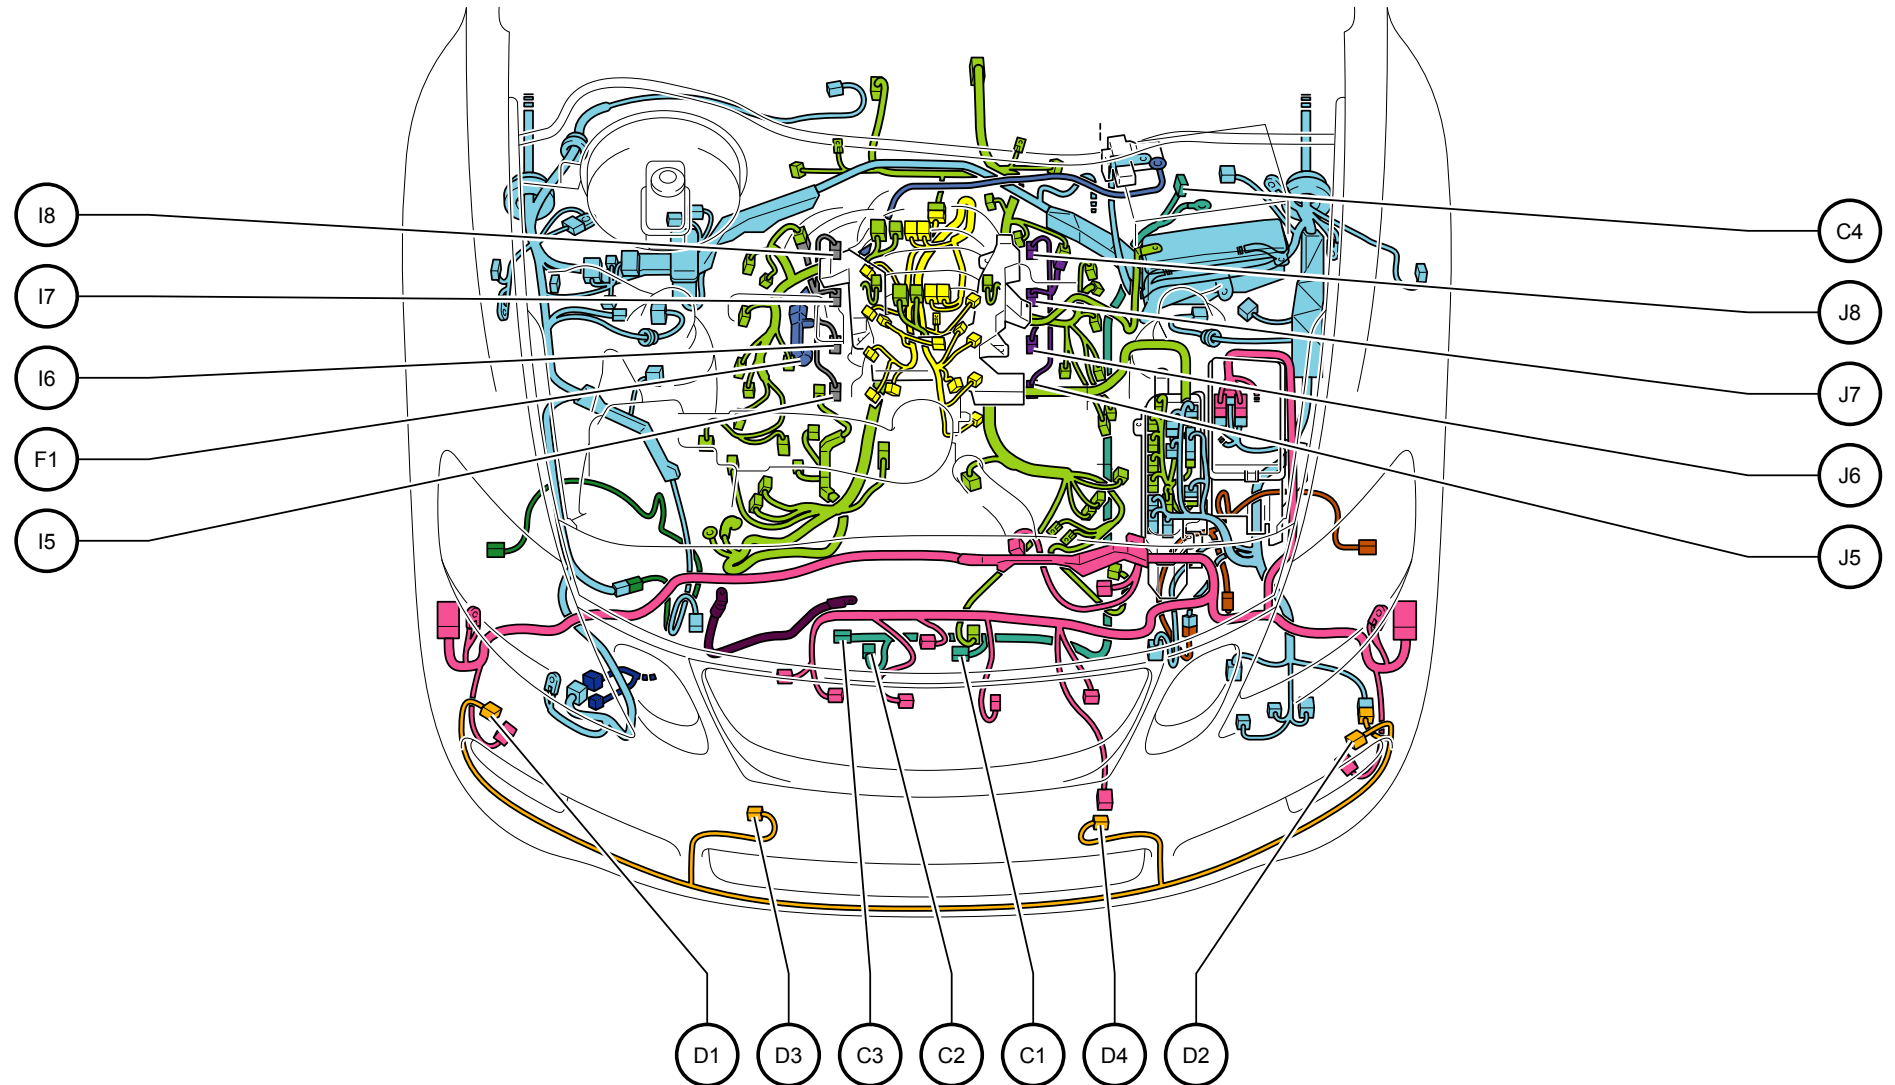


- C 1 Power Steering Motor
- C 2 Power Steering Motor
- C 3 Power Steering Torque Sensor
- C 4 Power Steering ECU

- D 1 Ultrasonic Sensor (Front Corner RH)
- D 2 Ultrasonic Sensor (Front Corner LH)
- D 3 Ultrasonic Sensor (Front Center RH)
- D 4 Ultrasonic Sensor (Front Center LH)


- F 1 Starter
- F 1 Starter

- I 5 Fuel Injector (for Port Injection No.2)
- I 6 Fuel Injector (for Port Injection No.4)
- I 7 Fuel Injector (for Port Injection No.6)
- I 8 Fuel Injector (for Port Injection No.8)

- J 5 Fuel Injector (for Port Injection No.1)
- J 6 Fuel Injector (for Port Injection No.3)
- J 7 Fuel Injector (for Port Injection No.5)
- J 8 Fuel Injector (for Port Injection No.7)

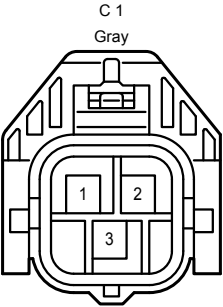

(Before Sep. 2007 Production)

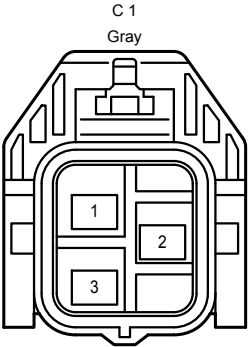

(From Sep. 2007 Production)

