


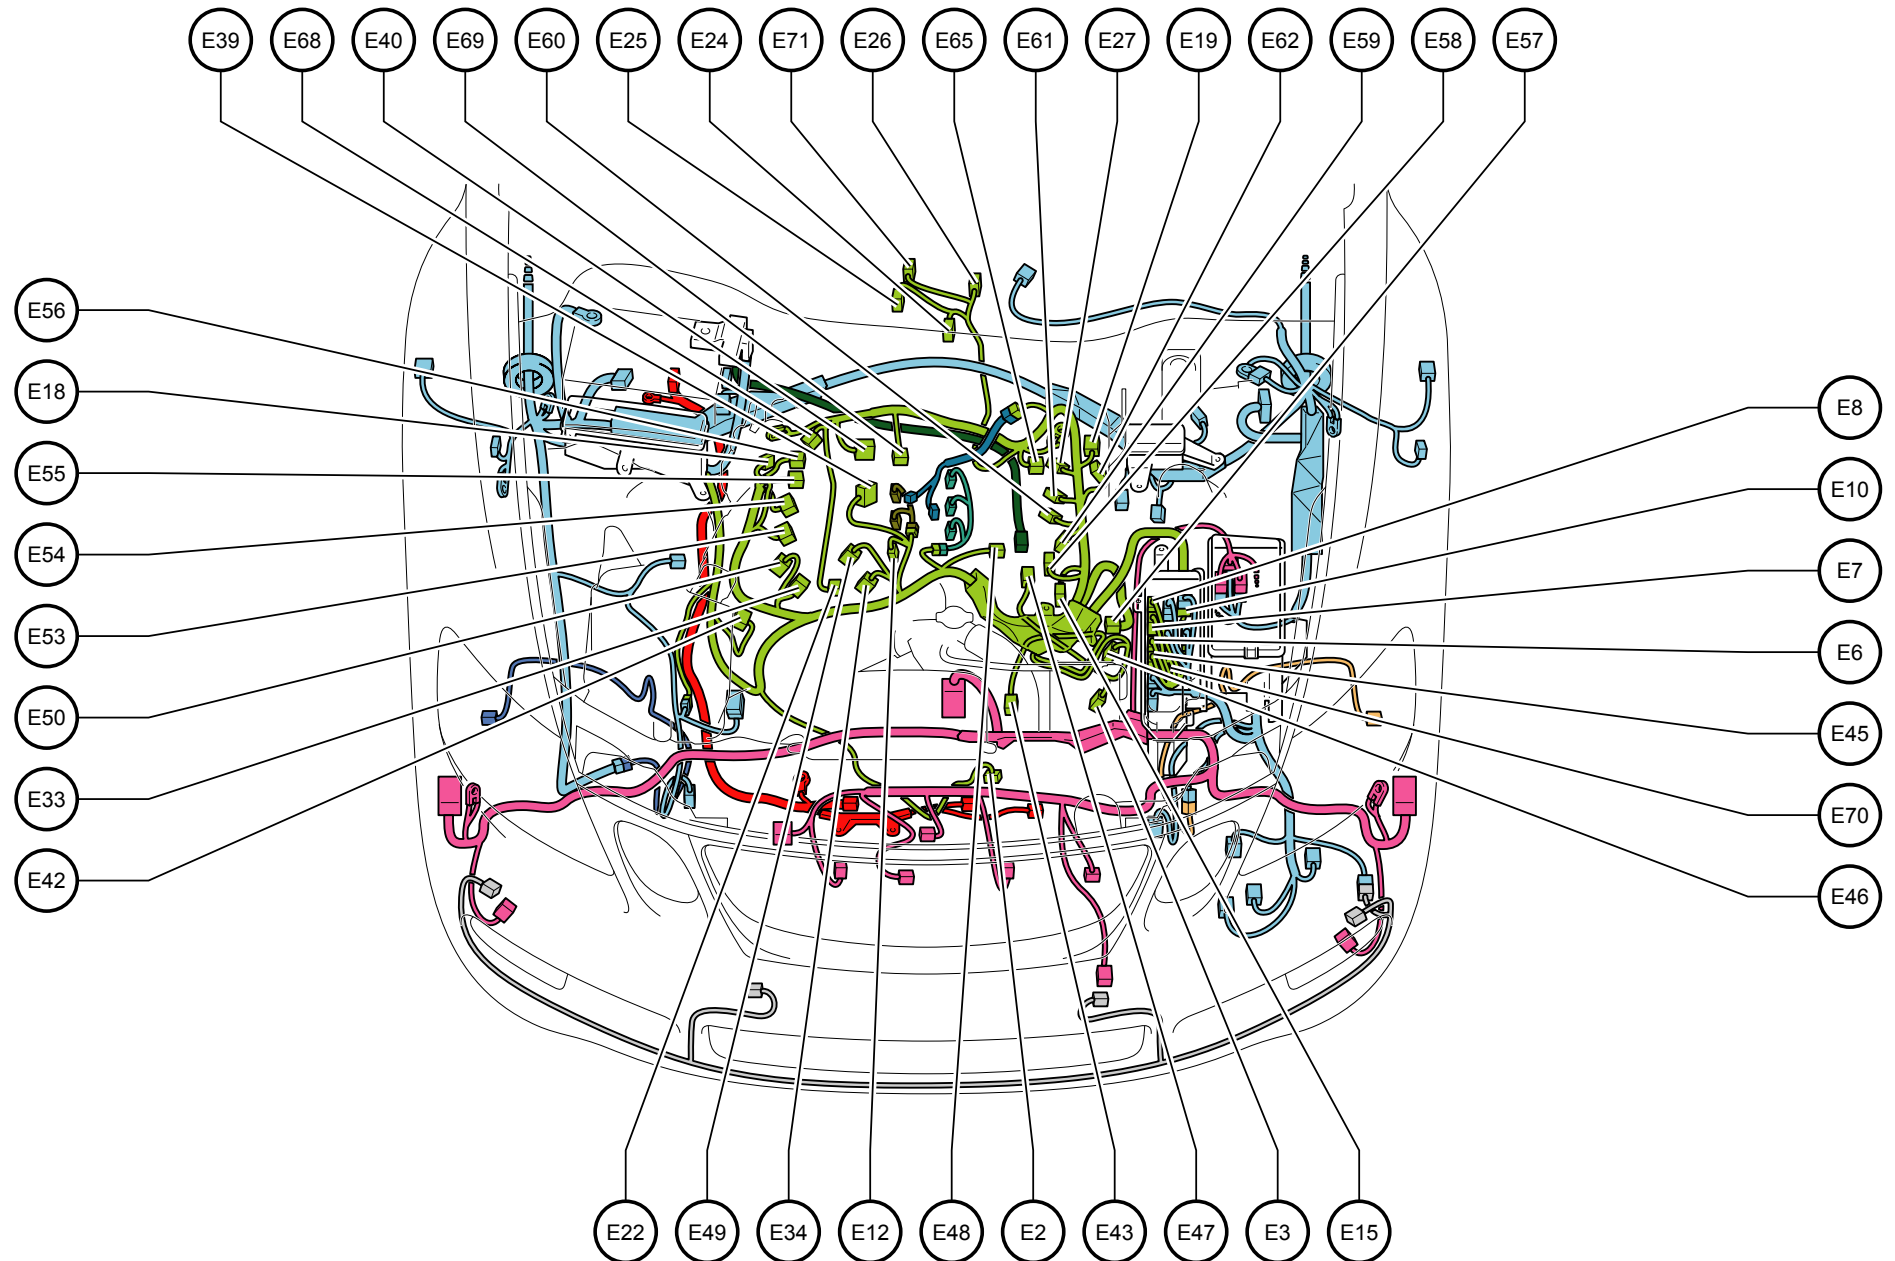

- E 2 Engine Oil Pressure SW
- E 10 Junction Connector
- E 18 VSV (Purge)
- E 19 Noise Filter (Ignition LH)
- E 22 Engine Oil Level Sensor
- E 24 Transmission Revolution Sensor (Turbine)
- E 26 ECT Solenoid
- E 27 Ignition Coil (No.6)
- E 33 Noise Filter (Ignition RH)
- E 39 Throttle Body Assembly
- E 42 Air Flow Meter
- E 46 A/C Compressor
- E 48 Camshaft Timing Oil Control Valve (LH Intake Side)
- E 49 Camshaft Timing Oil Control Valve (RH Intake Side)
- E 50 Camshaft Timing Oil Control Valve (RH Exhaust Side)
- E 53 Ignition Coil (No.1)
- E 54 Ignition Coil (No.3)
- E 55 Ignition Coil (No.5)
- E 56 VVT Sensor (Bank 1 Exhaust Side)
- E 59 Camshaft Timing Oil Control Valve (LH Exhaust Side)
- E 60 Ignition Coil (No.2)
- E 61 Ignition Coil (No.4)
- E 62 VVT Sensor (Bank 2 Exhaust Side)
- E 65 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- E 68 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- E 69 Combustion Heater Glow Plug
- E 70 Junction Connector
- E 71 Transmission Revolution Sensor (Counter Gear)

