

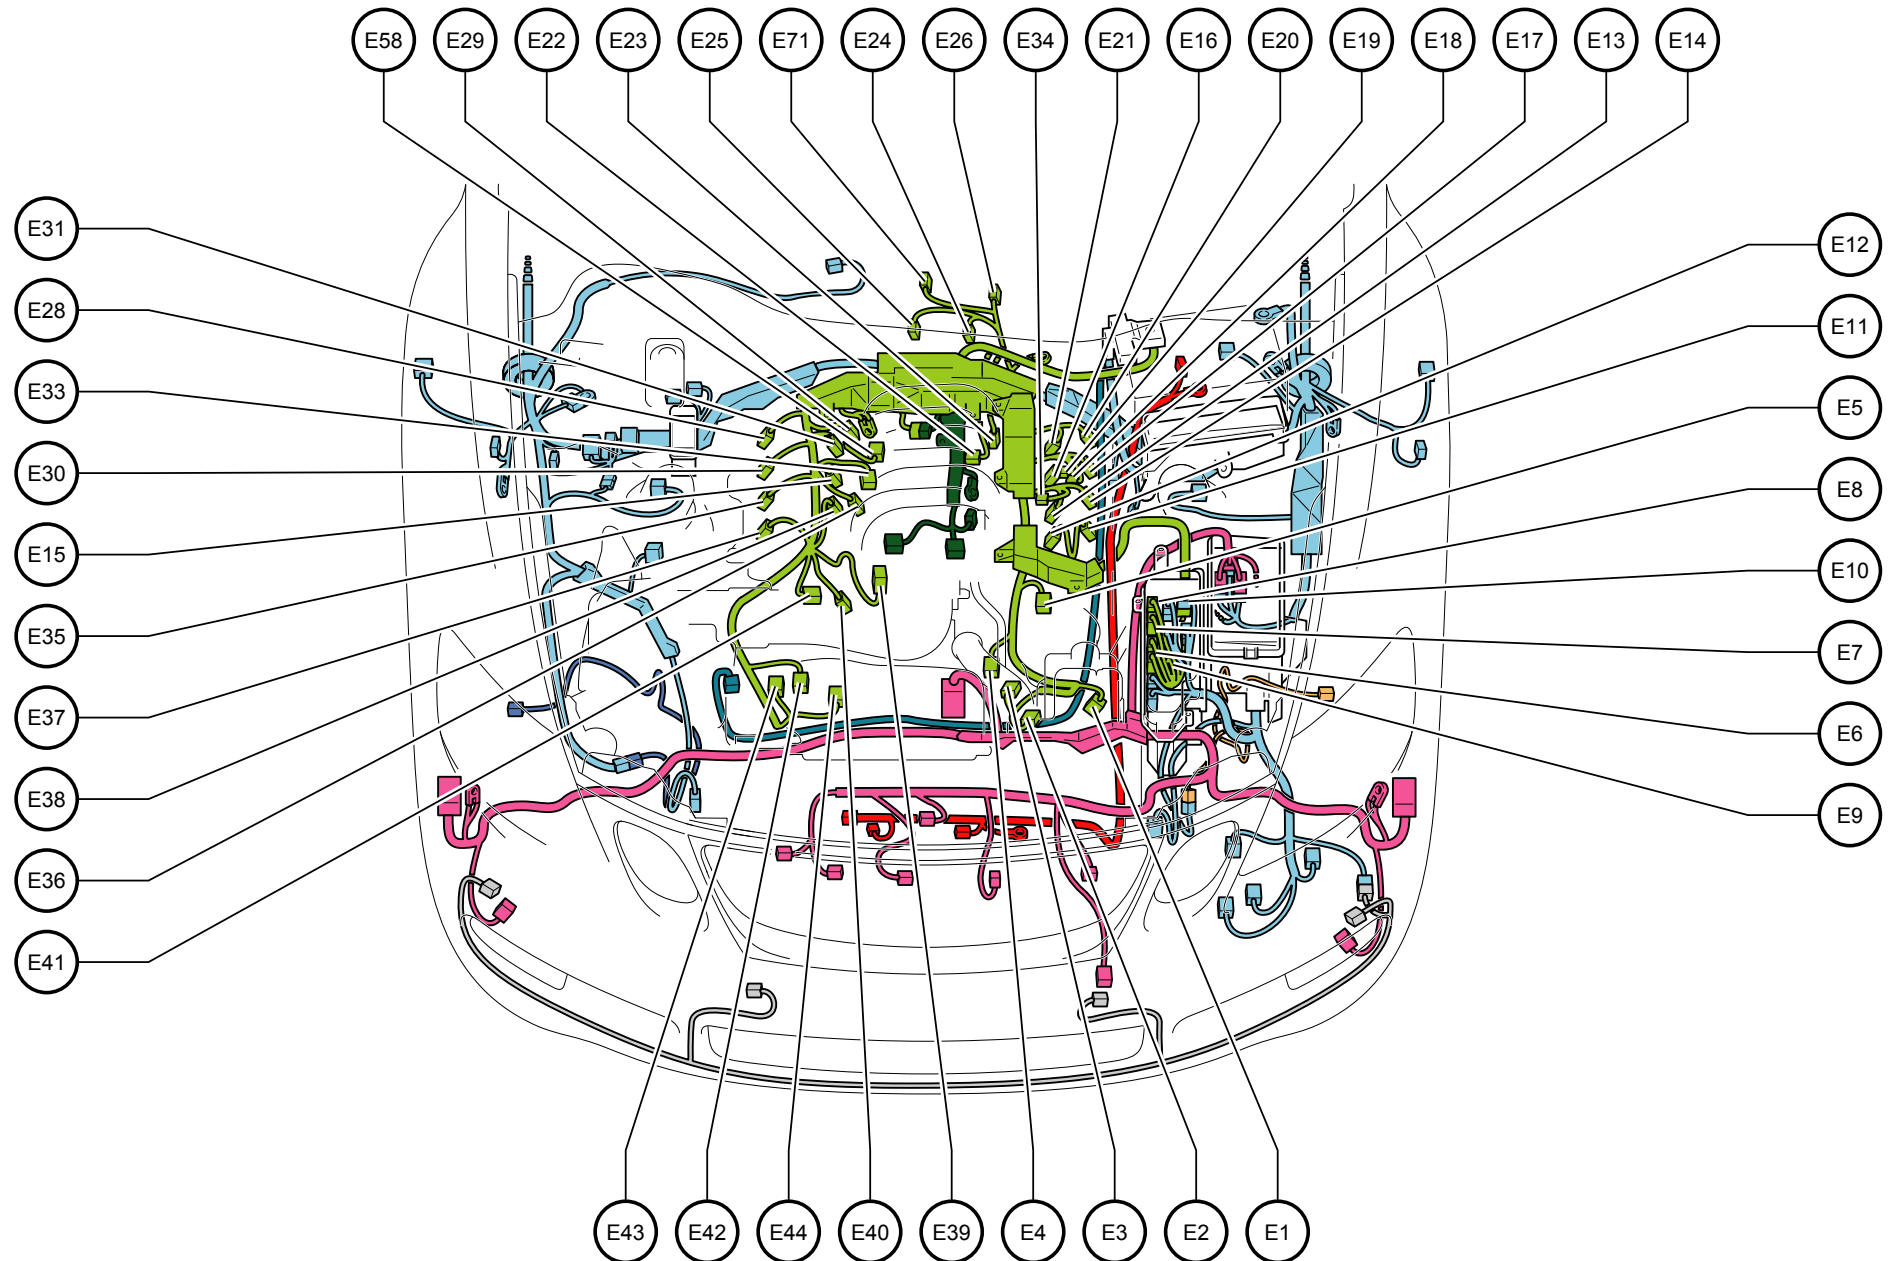
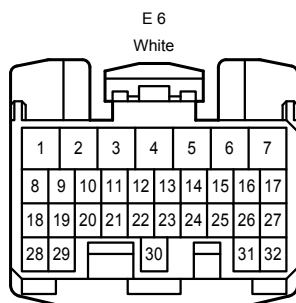
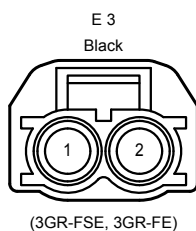


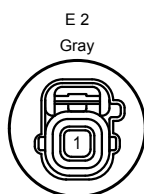


- E 1 A/C Compressor
- E 2 Engine Oil Pressure SW
- E 3 Crankshaft Position Sensor
- E 3 Crankshaft Position Sensor
- E 4 Camshaft Position Sensor
- E 5 Camshaft Timing Oil Control Valve (LH)
- E 6 Engine ECU
- E 6 Engine ECU
- E 7 Engine ECU
- E 7 Engine ECU
- E 8 Engine ECU
- E 9 Junction Connector
- E 10 Junction Connector
- E 11 Ignition Coil (No.1)
- E 12 Fuel Injector (No.1)
- E 13 Fuel Injector (No.3)
- E 14 Ignition Coil (No.3)
- E 15 VVT Sensor (Bank 2 Intake Side)
- E 16 Fuel Injector (No.5)
- E 17 Ignition Coil (No.5)
- E 18 VSV (Purge)
- E 19 Noise Filter (Ignition LH)
- E 20 Ignition Coil (No.7)
- E 21 Fuel Injector (No.7)
- E 22 Engine Oil Level Sensor
- E 23 Heated Oxygen Sensor (Bank 1 Sensor 1)
- E 24 Transmission Revolution Sensor (Turbine)
- E 25 Park/Neutral Position SW
- E 26 ECT Solenoid
- E 28 Ignition Coil (No.8)
- E 29 Fuel Injector (No.8)
- E 30 Ignition Coil (No.6)
- E 31 Fuel Injector (No.6)
- E 33 Noise Filter (Ignition RH)
- E 34 VVT Sensor (Bank 1 Intake Side)
- E 35 Ignition Coil (No.4)
- E 36 Fuel Injector (No.4)
- E 37 Ignition Coil (No.2)
- E 38 Fuel Injector (No.2)
- E 39 Throttle Body Assembly
- E 40 Water Temp. Sensor
- E 40 Water Temp. Sensor
- E 41 Camshaft Timing Oil Control Valve (RH)
- E 42 Air Flow Meter
- E 43 Alternator
- E 44 Heated Oxygen Sensor (Bank 2 Sensor 1)
- E 58 VSV (ACIS)
- E 71 Transmission Revolution Sensor (Counter Gear)


Position of Parts in Engine Compartment <RHD 3UZ-FE Before Jul. 2006 Production>

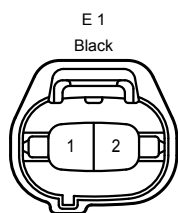


(Before Jul. 2006 Production Except 3GR-FSE)

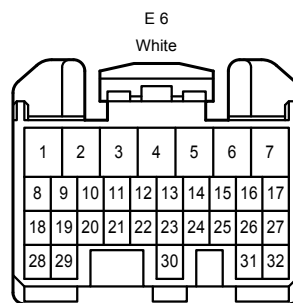


(From Jul. 2006 Production, Before Jul. 2006 Production 3GR-FSE)

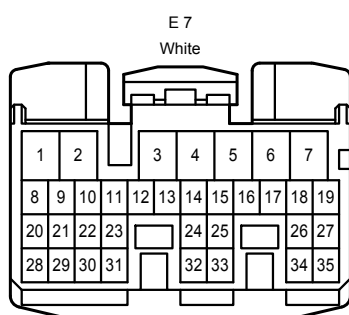











(From Jul. 2006 Production, Before Jul. 2006 Production 3GR-FSE)

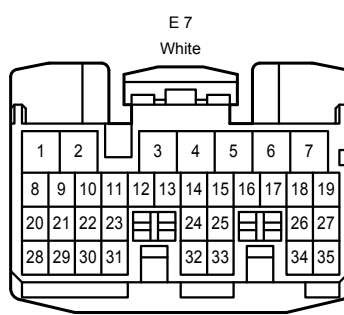

(Before Jul. 2006 Production Except 3GR-FSE)

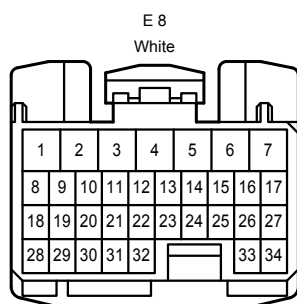

   (Before Jul. 2006 Production Except 3GR-FSE)

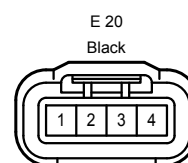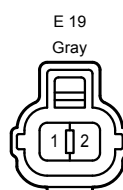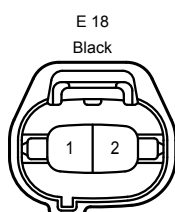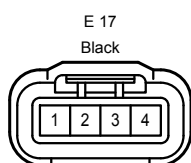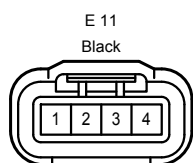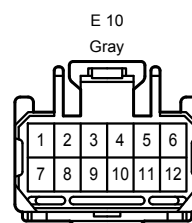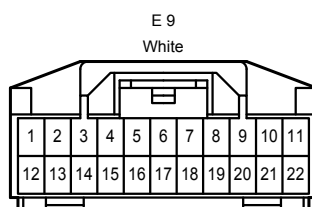

Position of Parts in Engine Compartment <RHD 3UZ-FE Before Jul. 2006 Production>

