



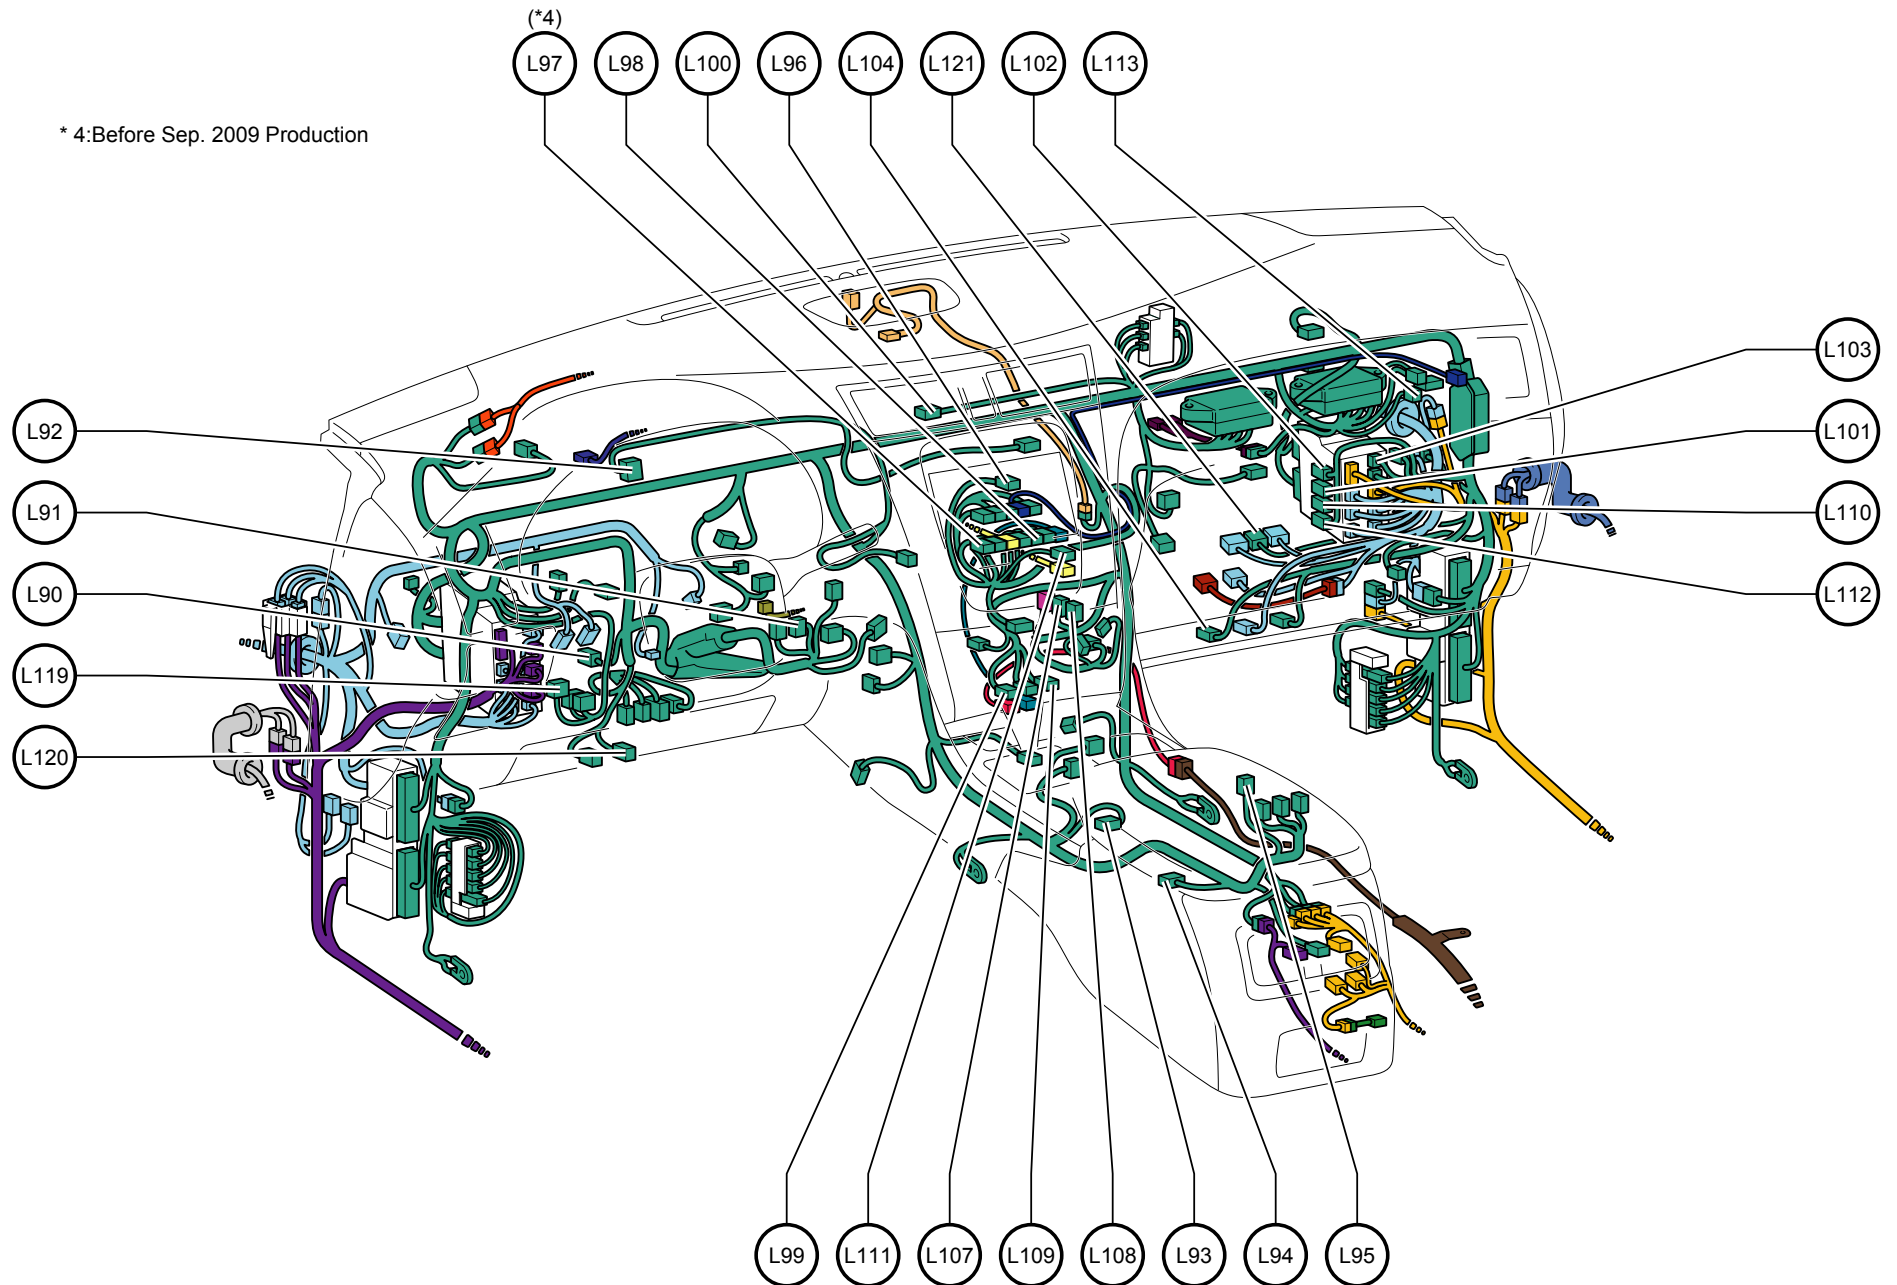


- L 90 Distance Control ECU
- L 91 Spiral Cable
- L 92 Combination Meter
- L 93 Transmission Control SW
- L 94 Shift Lock Control ECU
- L 95 Seat Heater SW
- L 96 Tire Pressure Warning ECU
- L 97 Multi-Display
- L 98 Multi-Display
- L 99 Radio Receiver Assembly
- L 100 ID Code Box
- L 101 Television Camera Controller
- L 102 Television Camera Controller
- L 103 Body ECU (Cowl Side J/B RH)
- L 104 Steering Control ECU
- L 107 A/C Amplifier
- L 108 A/C Amplifier
- L 109 Radio Receiver Assembly
- L 110 Television Camera Controller
- L 111 Multi-Display
- L 112 Television Camera Controller
- L 113 Multi-Media Module Navigation Assembly
- L 119 Outer Mirror SW Assembly
- L 120 Luggage Door Opening Switch Assembly
- L 121 Skid Control ECU

Position of Parts in Instrument Panel <LHD From Jul. 2006 Production>


L 90
White

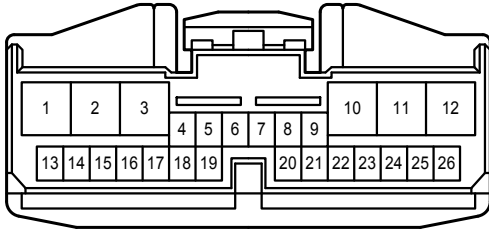


L 91
Black

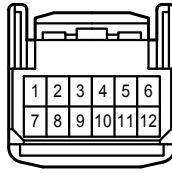


L 92
White

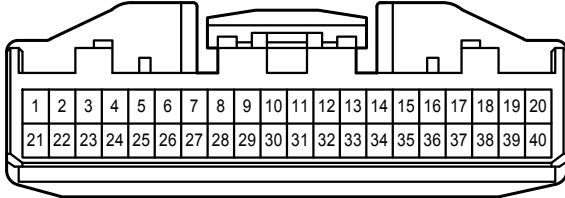


L 93
White

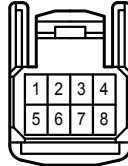

L 94
White

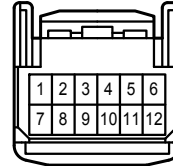


L 95
Black

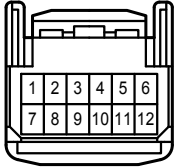


(Before Sep. 2007 Production)

L 95
White

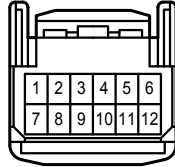


(From Sep. 2007 Production)


L 96
Black

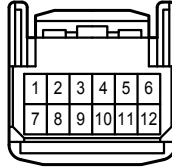


L 97
White

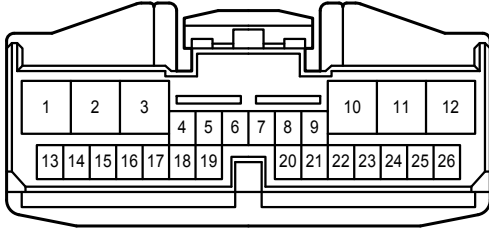


L 98
White

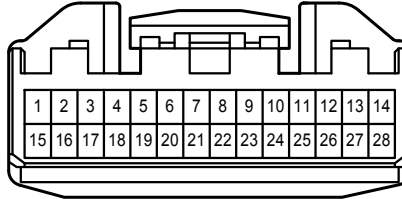


L 99
White

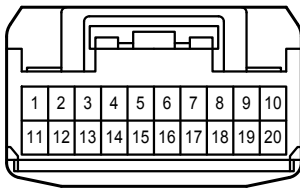

L100
White

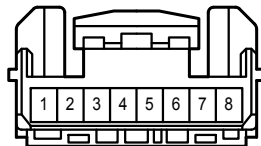

L101
Black

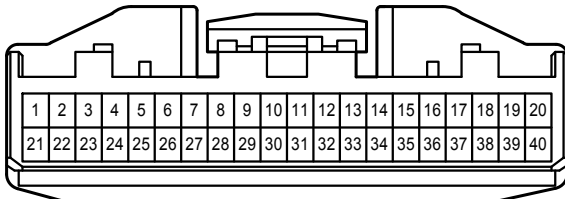

L102
Black

