


QUARTER WHEEL HOUSING OUTER PANEL (ASSY)


REPLACEMENT

With the quarter panel removed.

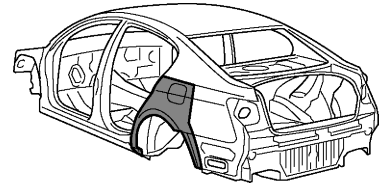

F22260A

REMOVAL

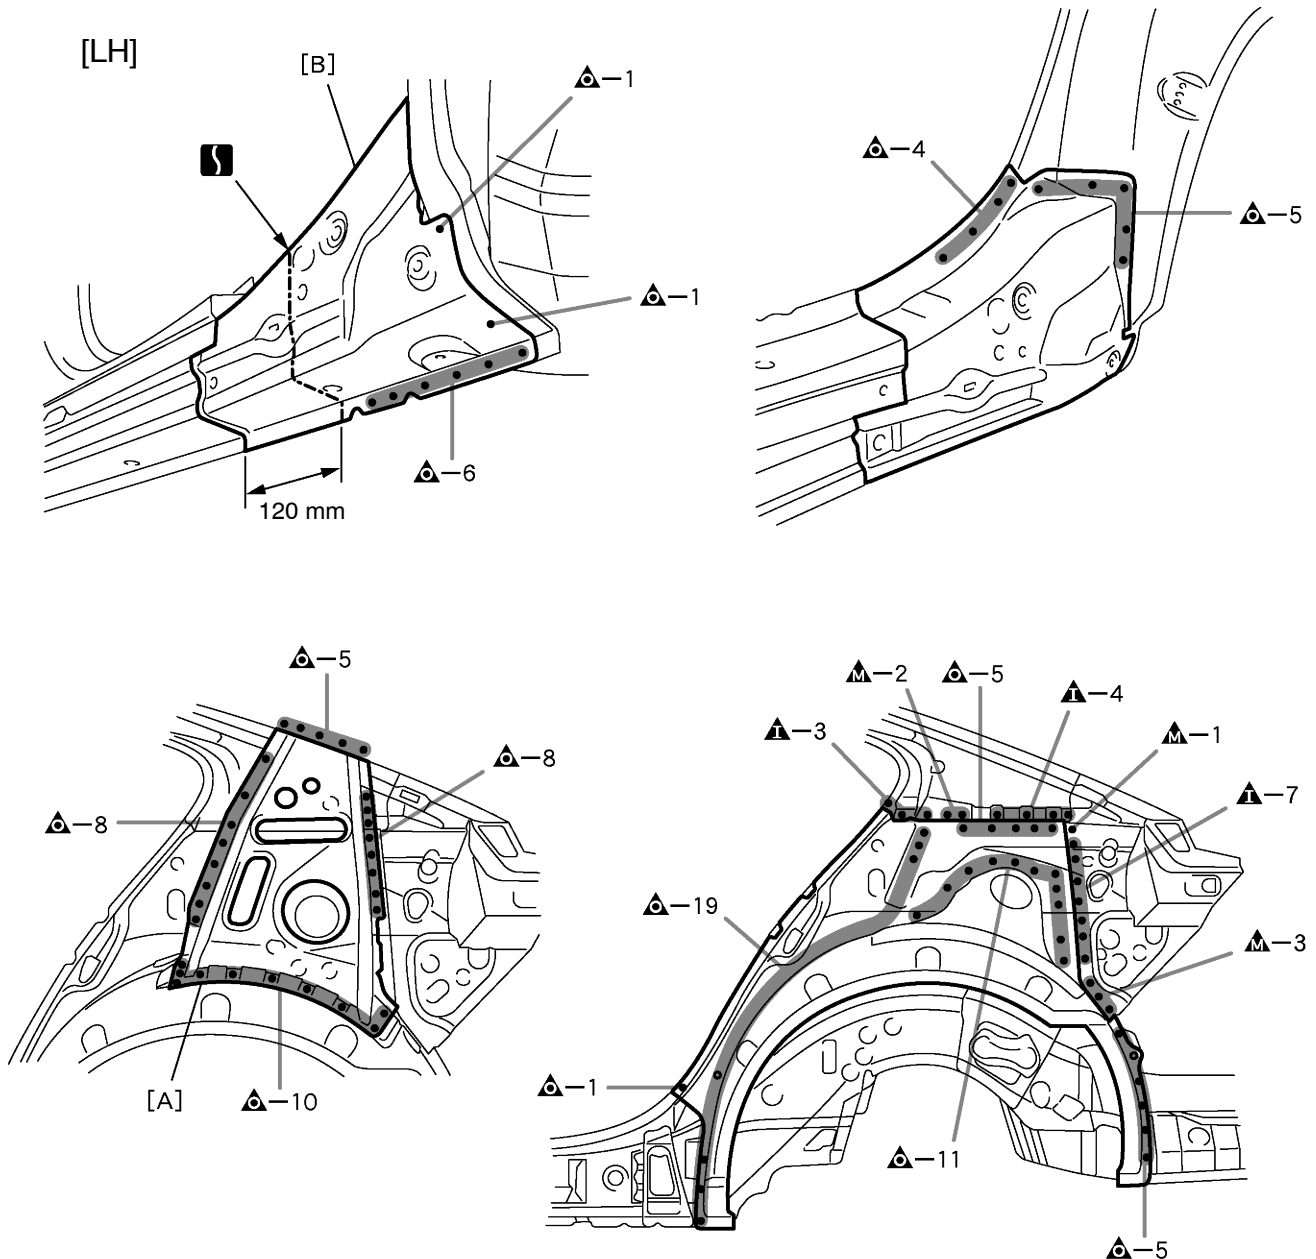

F22260





POINT

1 After removing the [A] and [B], remove the quarter wheel housing outer panel.

PART NAME

[A] Roof Side Outer Panel [B] Rocker Panel No.5 Reinforcement
120 mm (4.72 in.)

[RH]

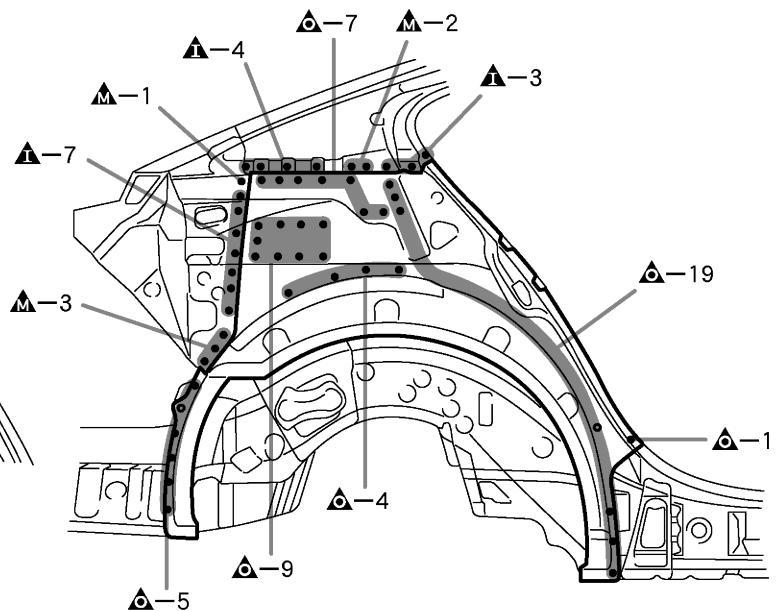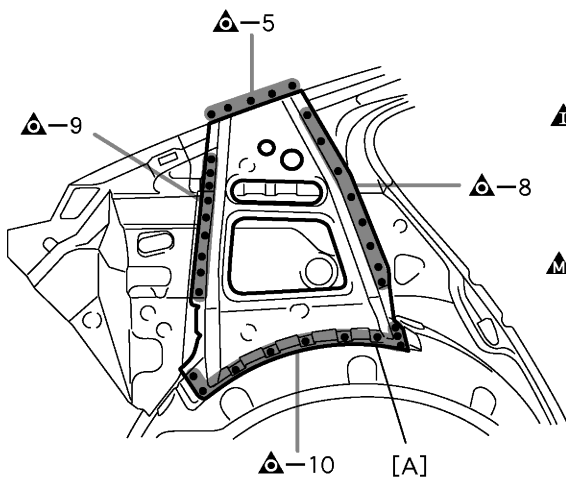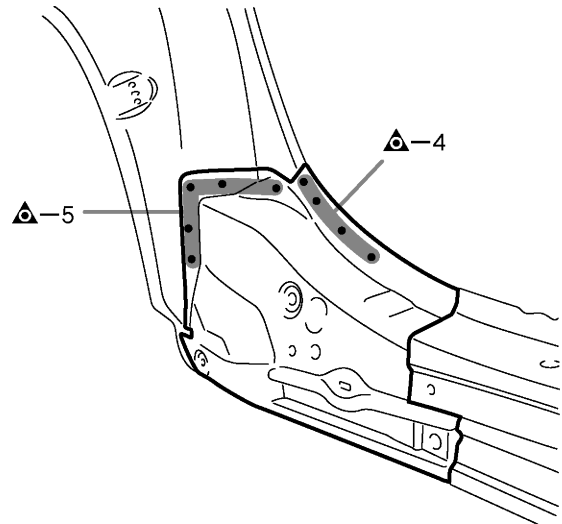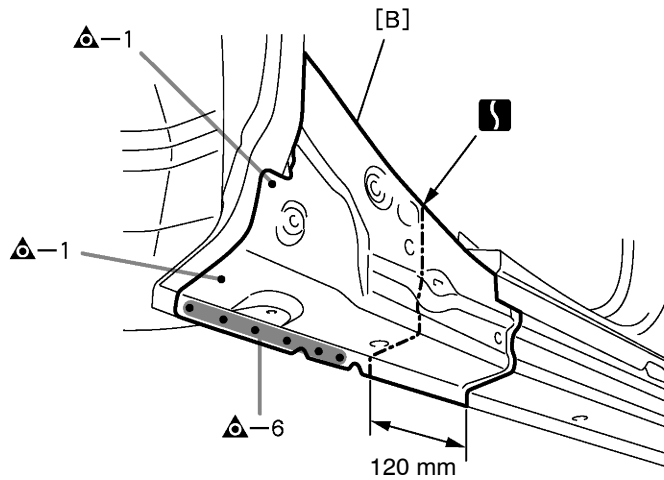

F22261

POINT


1 After removing the [A] and [B], remove the quarter wheel housing outer panel.

PART NAME

[A] Roof Side Outer Panel [B] Rocker Panel No.5 Reinforcement
120 mm (4.72 in.)

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

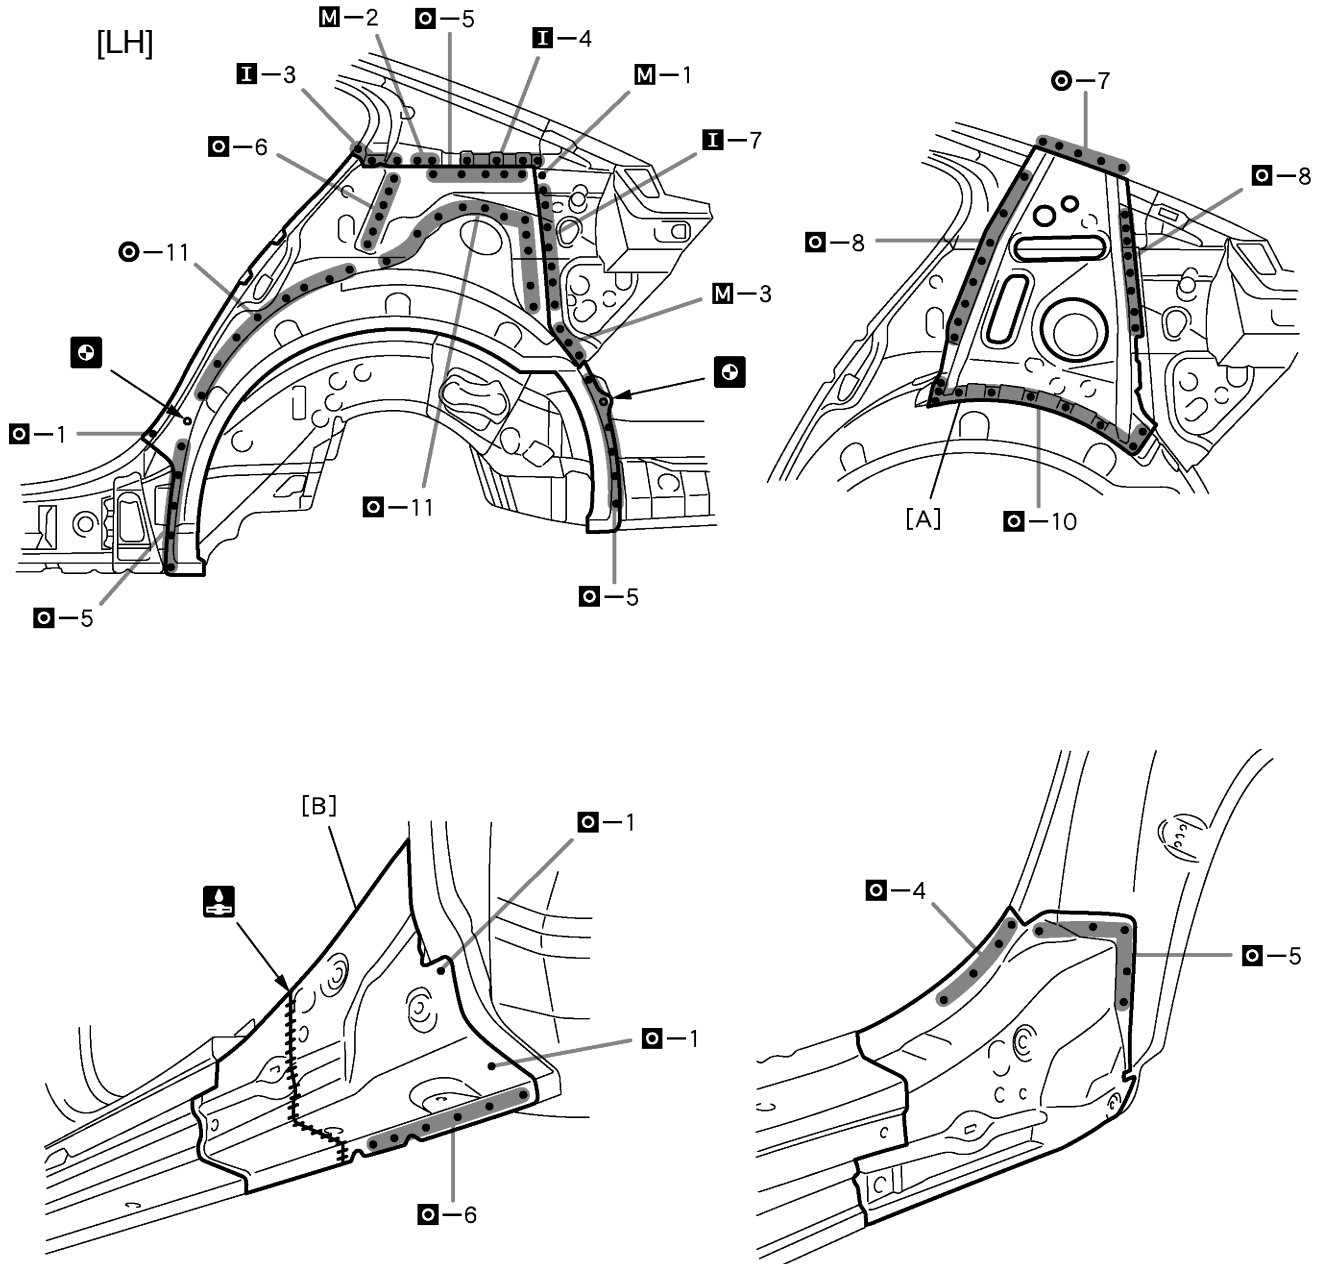


F22262

POINT

- 1 After welding the quarter wheel housing outer panel to the vehicle side, install the [A] and [B].

PART NAME

- [A] Roof Side Outer Panel [B] Rocker Panel No.5 Reinforcement

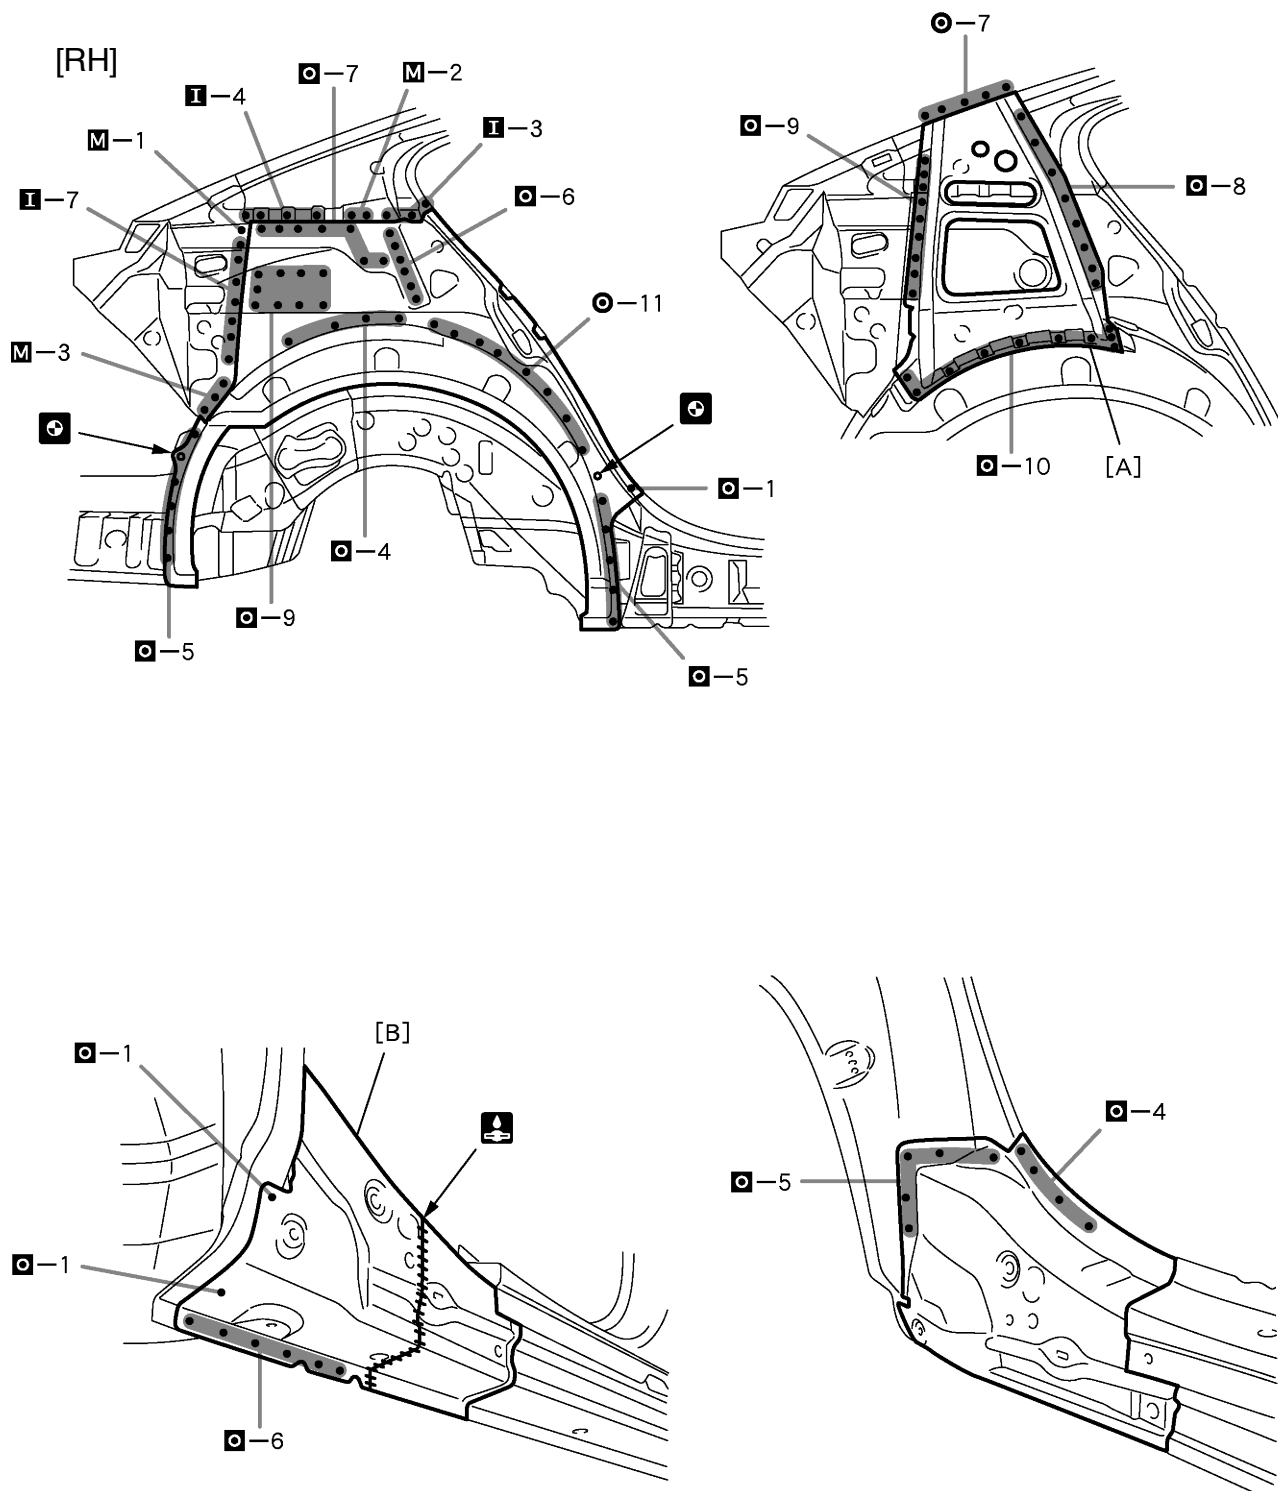

F22263

POINT

1 After welding the quarter wheel housing outer panel to the vehicle side, install the [A] and [B].

PART NAME

[A] Roof Side Outer Panel [B] Rocker Panel No.5 Reinforcement