

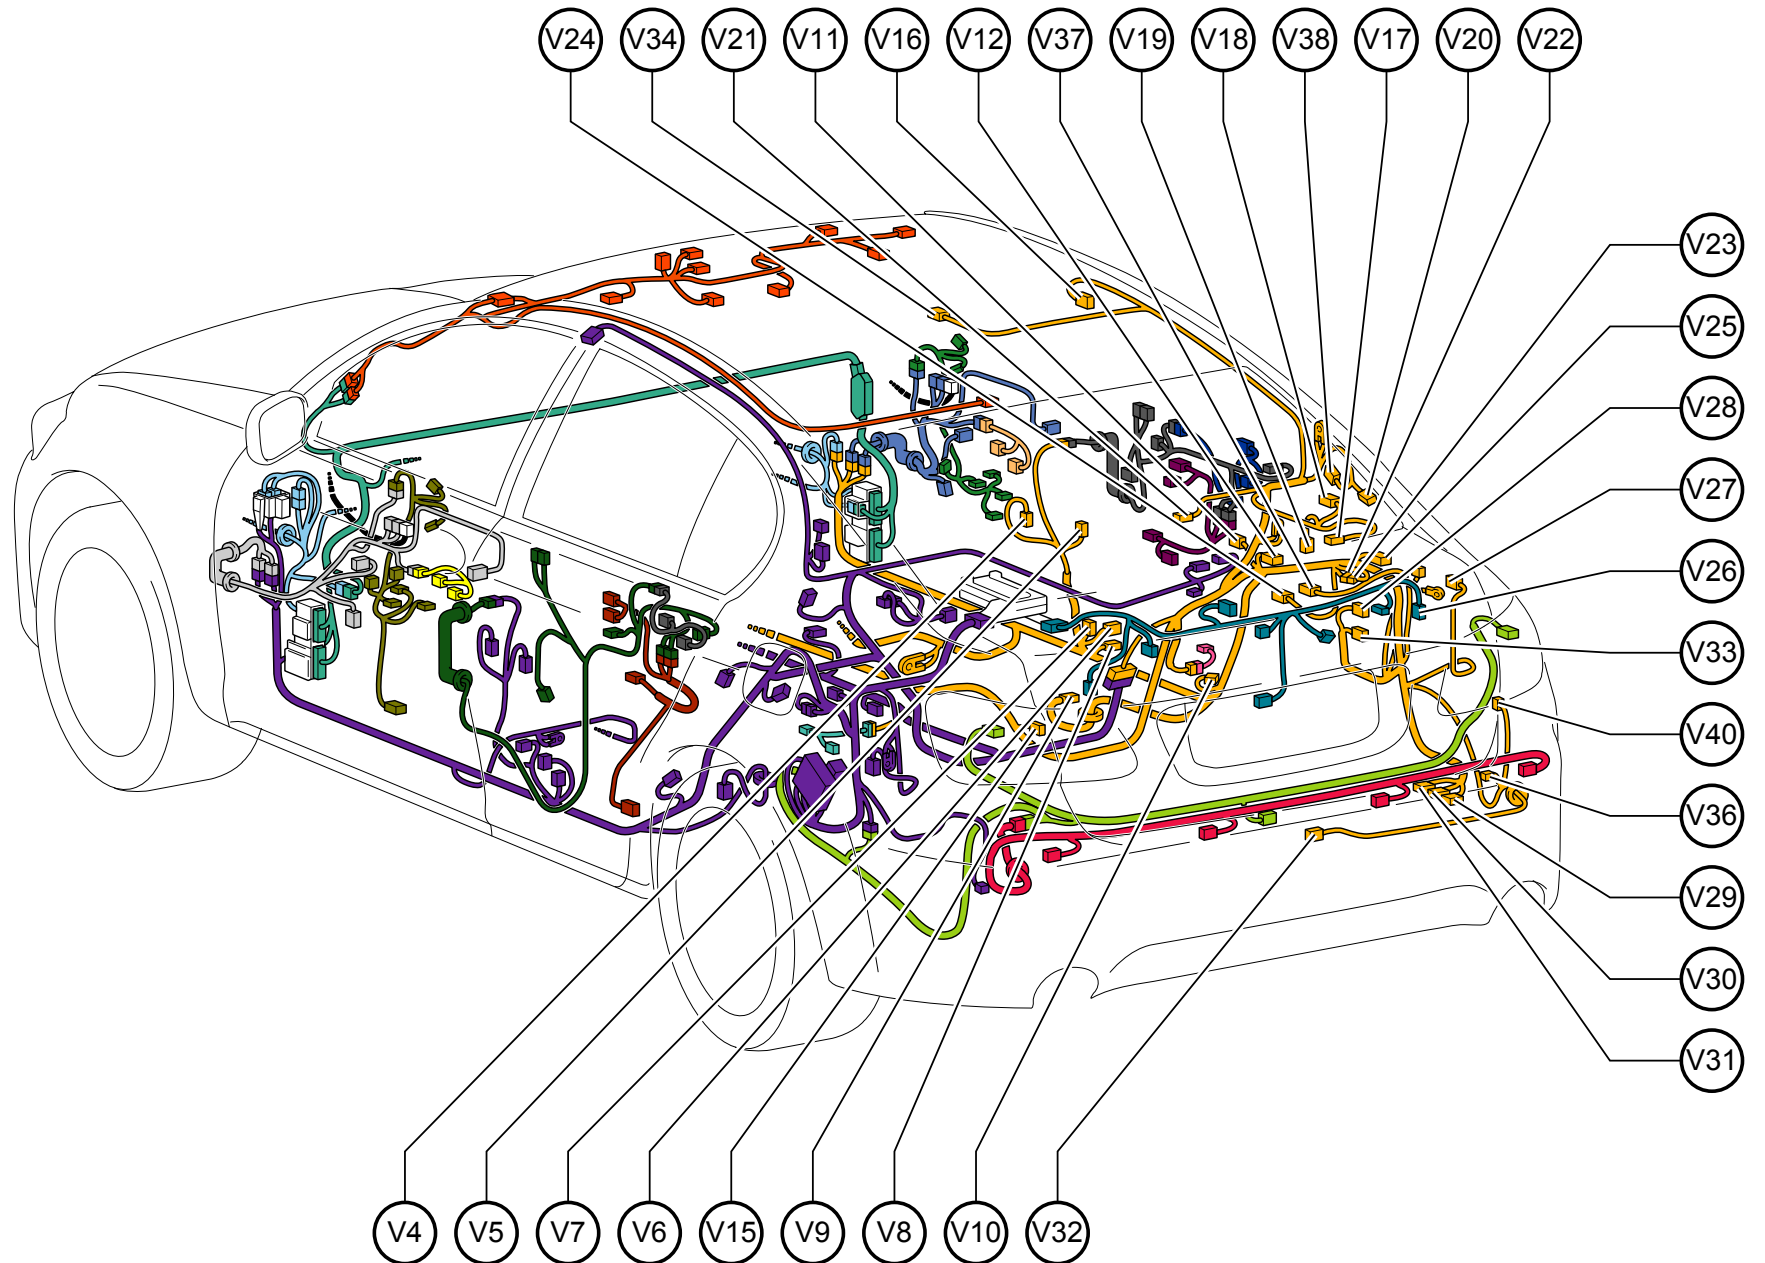
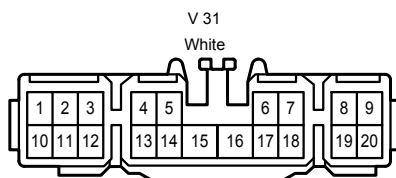
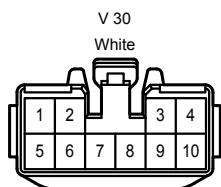
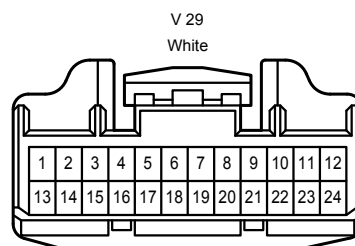
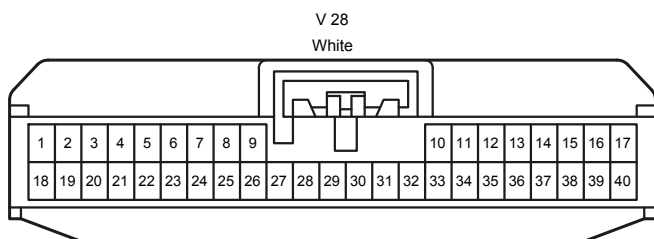
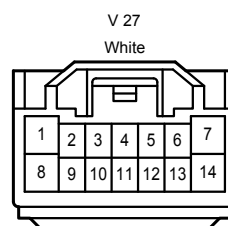
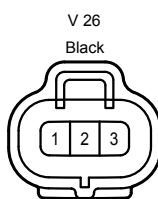
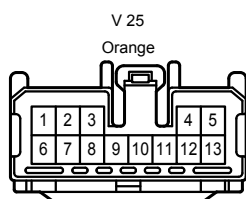
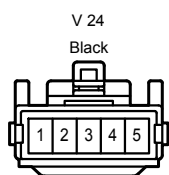
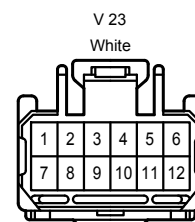
 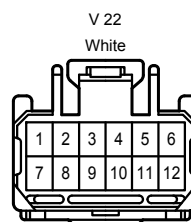
 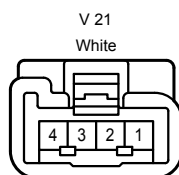
 


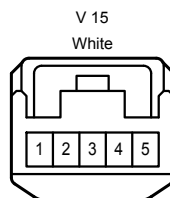
 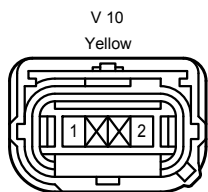
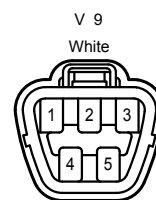
 
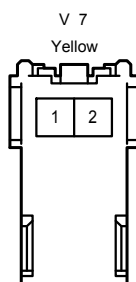




- V 4 Door Courtesy SW (Front RH)
- V 5 Side Airbag Sensor (RH)
- V 6 Front Seat Outer Belt (RH)
- V 7 Pretensioner (Front RH)
- V 8 Front Seat Outer Belt Motor (RH)
- V 9 Fuel Sender Gage
- V 10 Airbag Sensor (Rear RH)
- V 11 Door Courtesy SW (Rear RH)
- V 12 Side Airbag Squib (Rear RH)
- V 15 Rear Seat Inner Belt (RH)
- V 16 Curtain Shield Airbag Squib (RH)
- V 17 Speaker (Rear RH)
- V 18 Pretensioner (Rear RH)
- V 19 Rear Seat Outer Belt (RH)
- V 20 Rear Window Defogger
- V 21 Speaker (Woofer)
- V 22 Junction Connector
- V 23 Junction Connector
- V 24 Absorber Control Actuator (Rear RH)
- V 25 Junction Connector
- V 26 Acceleration Sensor (Rear)
- V 27 Brake Control Power Supply Assembly
- V 28 Smart Key ECU
- V 29 Stereo Component Amplifier
- V 30 Stereo Component Amplifier
- V 31 Stereo Component Amplifier
- V 32 Electrical Key Oscillator (Outside Luggage Room)
- V 33 Smart Key ECU
- V 34 Tire Pressure Monitor Receiver
- V 36 Door Control Receiver
- V 37 Theft Warning Siren
- V 38 Electrical Key Antenna (Glass)
- V 40 Room Lamp (Luggage)

Position of Parts in Body <RHD>

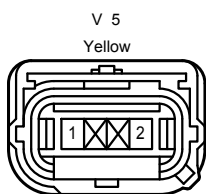

Position of Parts in Body <RHD>

