


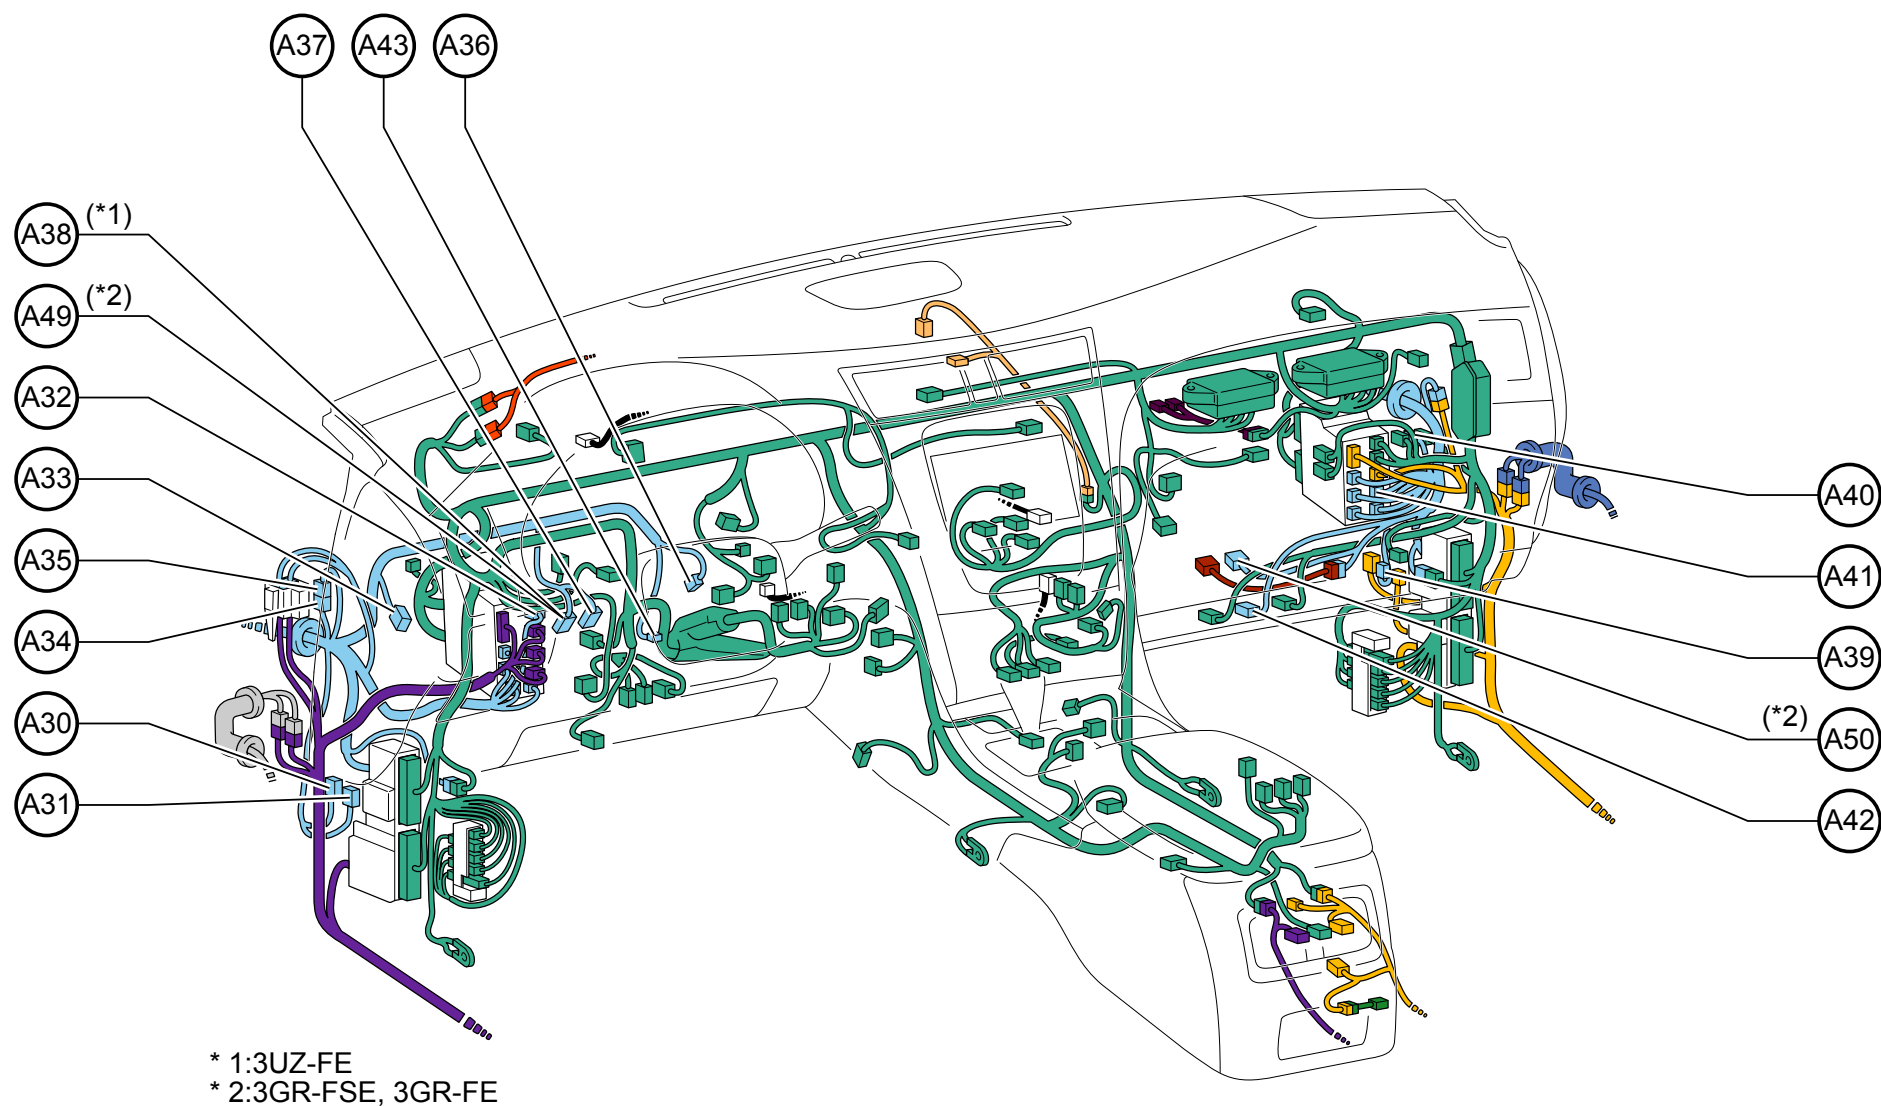

- A 30 Headlamp Swivel ECU
- A 31 Headlamp Swivel ECU
- A 32 Body ECU (Cowl Side J/B LH)
- A 33 Parking Brake SW
- A 34 Junction Connector
- A 35 Junction Connector
- A 36 Accelerator Position Sensor
- A 37 Stop Lamp SW
- A 38 Brake Pedal Stroke Sensor
- A 39 Absorber Control ECU
- A 40 Clearance Warning ECU
- A 41 Body ECU (Cowl Side J/B RH)
- A 42 Steering Control ECU
- A 43 Kick Down SW
- A 49 Brake Pedal Load Sensing SW
- A 50 Blower Motor (3GR-FSE, 3GR-FE)

Position of Parts in Instrument Panel <LHD>

