

System Function

- The system reaches an ignition judgment to deploy the driver's airbag, front passenger's airbag, knee airbag, and pretensioner based on the signals received from the front airbag sensor and deceleration sensor. In addition, the system reaches an ignition judgment to deploy the SRS side airbags and SRS curtain shield airbags based on the signals received from the side airbag sensor and rear airbag sensor. Furthermore, the system is equipped with a diagnosis function to perform self-diagnosis in case of a system malfunction.

