


Components	Functions
Seat Position Sensor(for Driver)	Detects the sliding position of the driver's seat.
Airbag Sensor Assembly	Make a deployment judgment based on the signal from the airbag sensor assembly and the front airbag sensor. A deployment judgment includes the safing sensor. It then sends a deployment signal to the SRS airbags, SRS knee airbags and seat belts with pretensioners and force limiter. During a system abnormality, malfunction diagnosis of the system can be performed by switching to diagnosis mode.

SRS Airbag for Driver

- The dual stage (two-step control type) driver's SRS airbag is built into the steering wheel pad.
- The SRS airbag, which is not disassemblable, consists of an inflator, bag, steering wheel pad, etc.

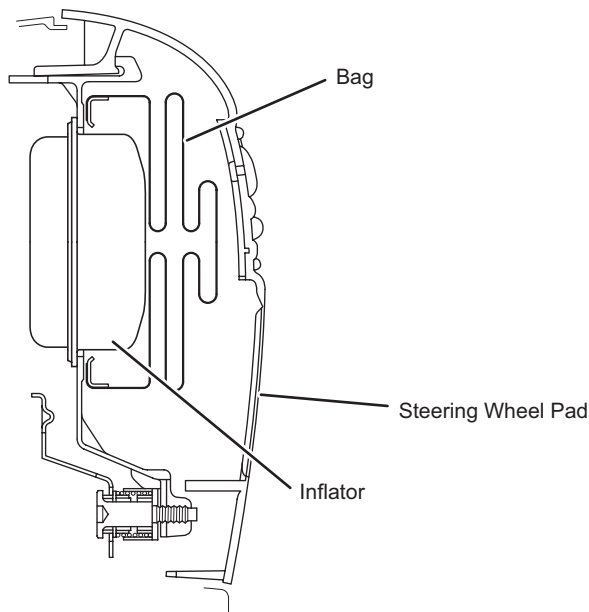

Dual Stage(two step control type)
Driver SRS Airbag

A4270180C