


SRS Airbag for Front Passenger

- The dual stage (two step control type) passenger seat SRS airbag is located in the upper part of the passenger side instrument panel.
- The SRS airbag, which is not disassemblable, consists of a case, inflator, and bag, etc.

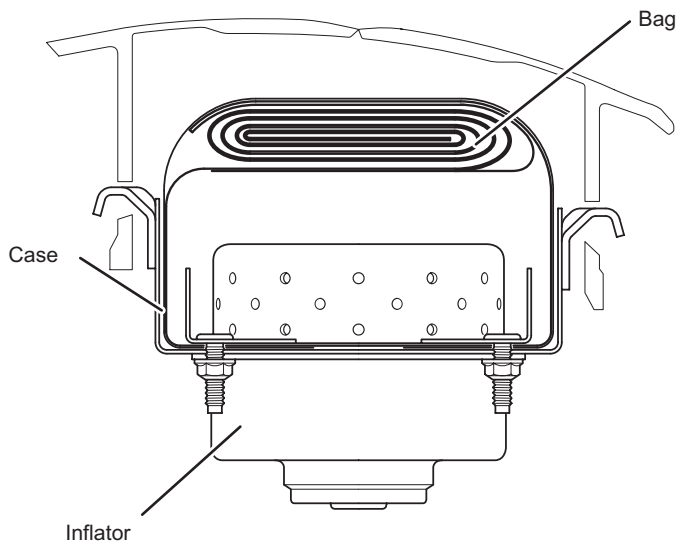


Dual Stage(two step control type)
Passenger SRS Airbag

A4270181C

SRS Knee Airbag

- The driver's and front passenger's SRS knee airbags are located in the lower part of the instrument panel in front of the driver's and front passenger's seats, respectively.
- The SRS airbag, which is not disassemblable, consists of a case, inflator, and bag, etc.

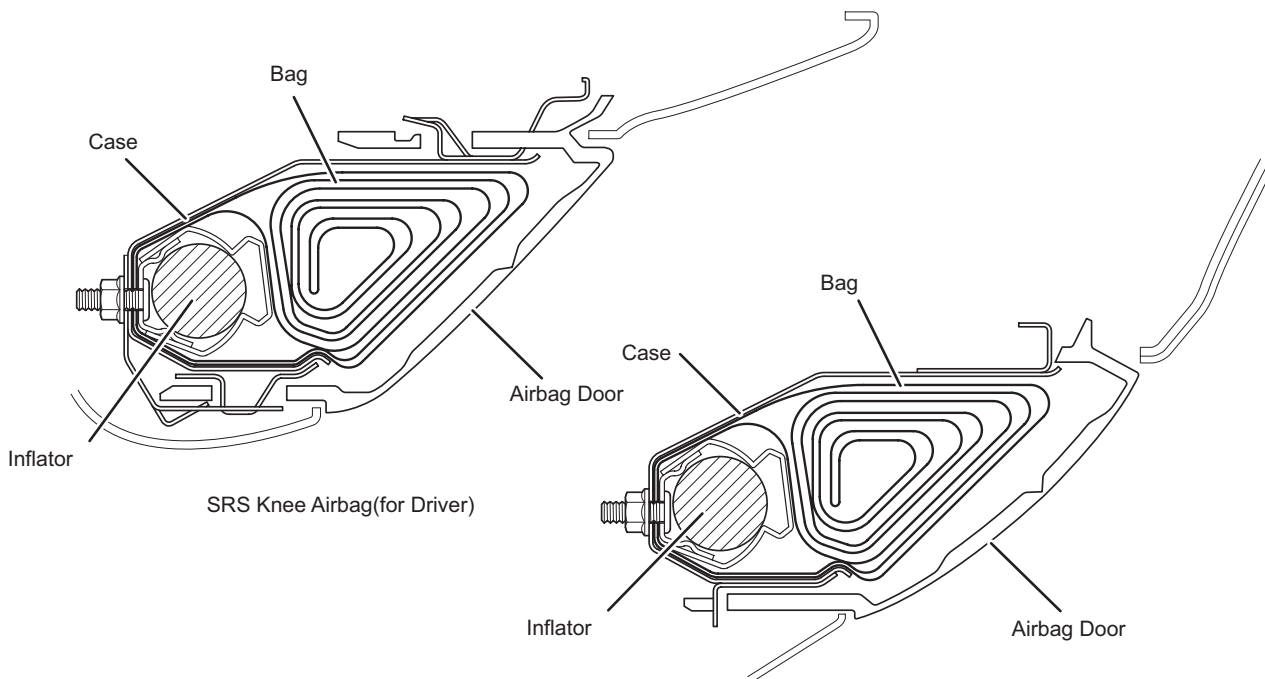

SRS Knee Airbag(for Passenger)

A4270182C