


Front Airbag Sensor

- The front airbag sensor is installed on top of the front member.
- Upon detecting a frontal impact, the front airbag sensor sends a deceleration signal to the airbag sensor assembly.

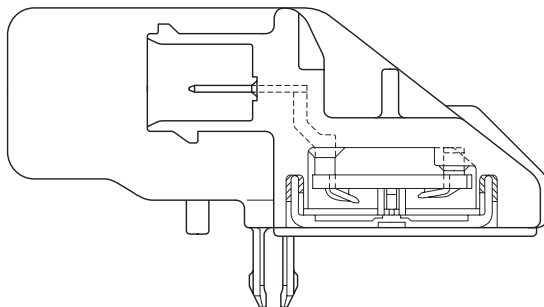


Sensor Section

A4270160C

Seat Position Sensor (for Driver)

- Along with the use of the two-step control type dual stage SRS airbag for the driver, a seat position sensor is provided inside the driver's seat.

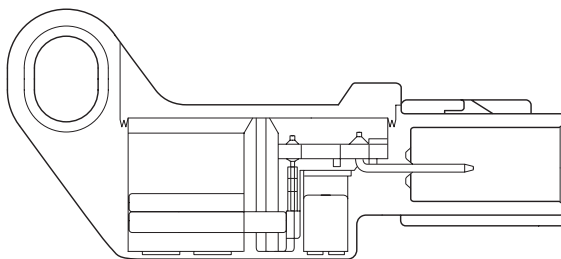

Sensor Section

A4270161C