

Airbag Manual ON-OFF Switch

- A switch to disable the deployment of the front passenger airbag and the passenger seat side airbag has been provided as standard equipment. This switch can be used if the deployment of those airbag is inconvenient, such as when the passenger is wearing a CRS seat belt.
- This switch is located in the back of the glove box. It is operated ON/OFF by a mechanical key, which is supplied with the wireless key. Once the airbag manual ON-OFF switch turned to OFF, the front passenger airbag and the passenger seat side airbag will be disabled, regardless of the collision conditions.
- If the deployment of the passenger airbag has been disabled, the passenger airbag OFF indicator light in the center cluster illuminates to inform the occupant.

