

SRS Side Airbag

- SRS side airbags are located in the driver's and front passenger's seatbacks. Moreover, SRS rear side airbags are located in the rear passenger's seatbacks.
- The SRS airbag, which is not disassemblable, consists of an inflator, bag, cover, etc.

