



SRS Curtain Shield Airbag


- SRS curtain shield airbags are located in the areas that extend from the driver's and front passenger's front pillars to the rear pillars in the rear seat areas.
- The SRS airbag, which is not disassemblable, consists of an inflator, bag, etc.

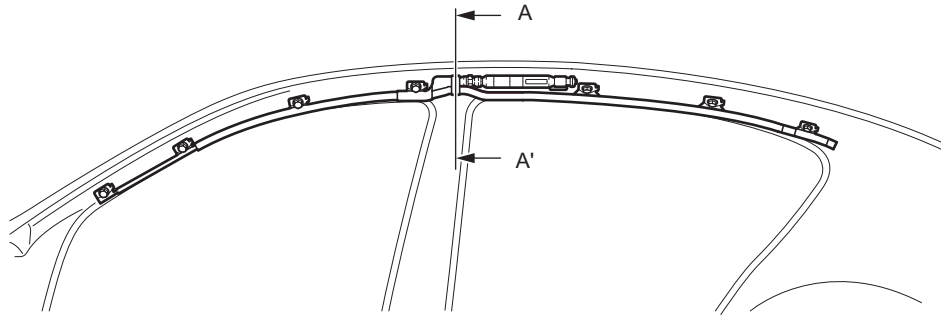

SRS Curtain Shield Airbag

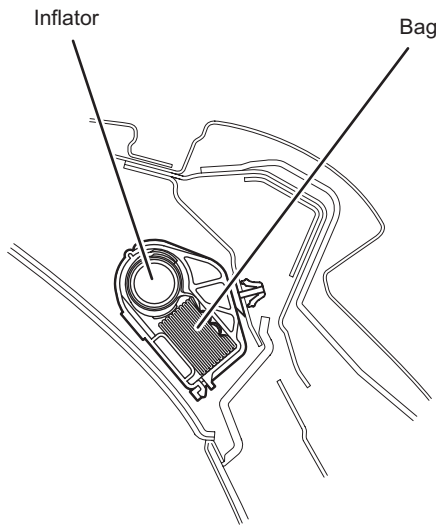

A - A' Cross Section

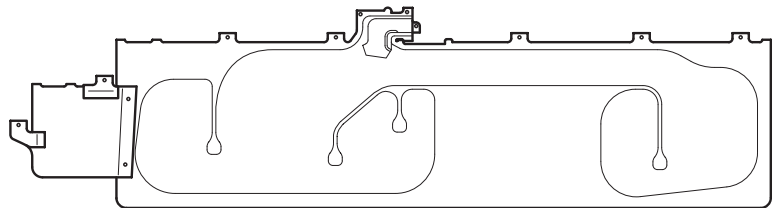

At the Time of Bag Deployment