


Side Airbag Sensor


- The side airbag sensor is installed at the bottom of the center pillar.
- The side airbag sensor, which is located at the bottom of the center pillar, consists of a semiconductor type deceleration sensor and a communication circuit. Upon detecting an impact from the side of the vehicle, it transmits an ignition signal to the airbag sensor assembly, and reaches an operation judgment for the SRS side airbag and SRS curtain shield airbag.

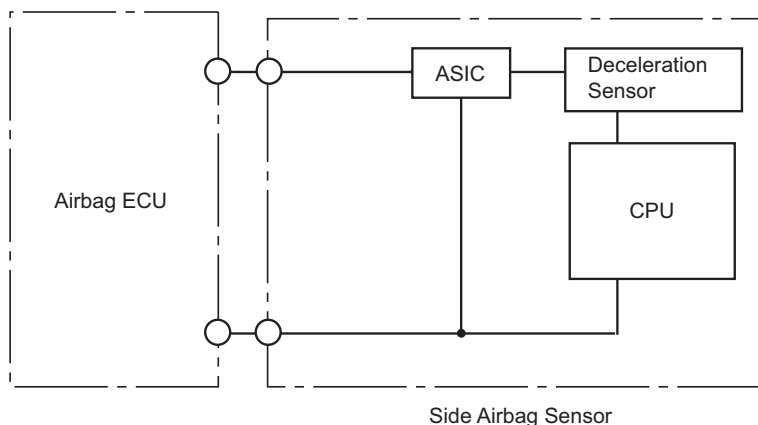

A4270166C

Side Airbag Sensor for Rear

- The side airbag sensor for rear is installed on the lower side of rear pillar.
- The components of the side air bag sensor on the lower side of rear pillar include a semiconductor type deceleration sensor and a communication circuit. It detects a side impact and sends a deployment signal to the airbag sensor assembly, which makes an operation judgment for the SRS side air bag and SRS curtain shield air bag.

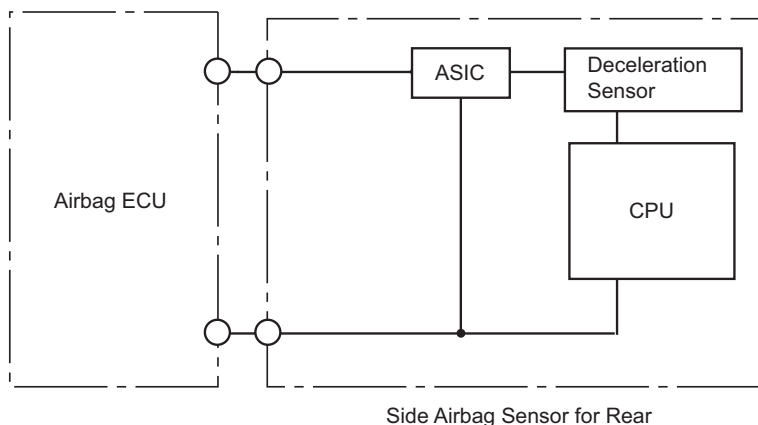

A4270167C