

Ventilation

- Fresh air enters through the inlets above the cowl, passes through the air conditioner system, and enters the cabin via the outlets in the instrument panel and other areas.
- Cabin air is routed as follows: through the clearance between the back end of the package tray trim and the back window glass to the upper back panel, via the luggage compartment, and out through the quarter vent ducts.
- The quarter vent ducts are provided with quarter vent butterflies to allow the cabin air to exit easily but inhibit outside air from entering. Thus, they prevent dust from entering the cabin.

