


Sensor Sensitivity Adjustment Switch

- The detection sensitivity of the smog ventilation sensor can be adjusted as shown below.

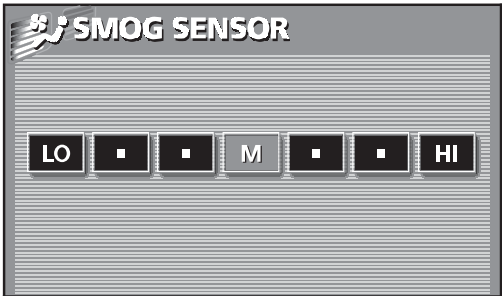

K3940132E


List of Operations

Item	Description
Operation	• Press and hold the automatic recirculation switch for approximately 1.7 seconds while the vehicle is stopped.
Display	• The multi display panel switches to the sensor sensitivity adjustment mode.
Adjustment	• Press the touch switches on the screen to adjust the detection sensitivity of the smog ventilation sensor. • The sensitivity adjustment ranges from HI to LO in 7 stages.

AC

Blower Fan

- As on the previous model, the blower motor and the blower motor controller have been integrated for space savings. In addition, a brushless motor is used, in which the brushes have been discontinued and the number of contacting parts has been reduced, thus realizing a low-noise operation.

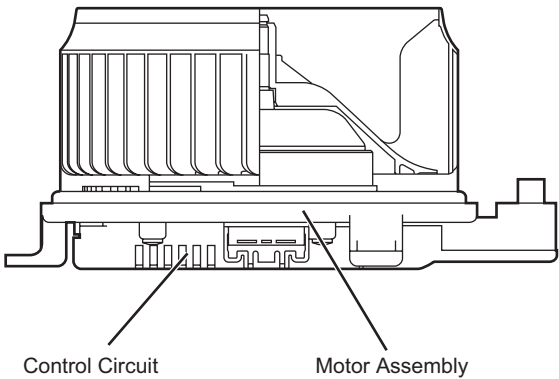

A4270022E