


Evaporator Temperature Sensor

- This sensor detects the temperature of the cool air immediately past the evaporator in the heater & cooler unit in the form of resistance changes, and outputs it to the front air conditioner ECU.
- It is installed behind the evaporator in the heater & cooler unit.

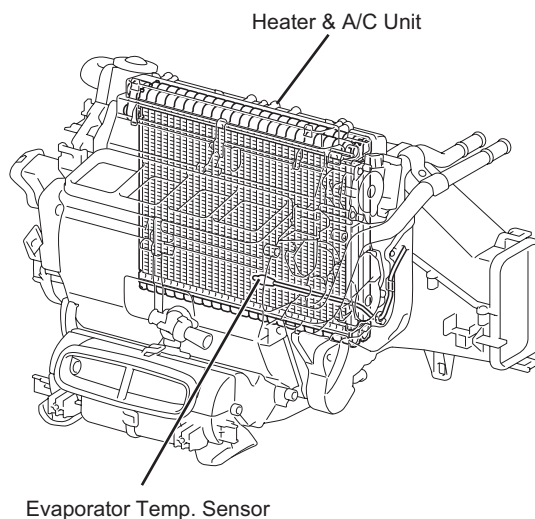


A4270016E

Ambient Temperature Sensor

- This sensor detects the changes in the outside temperature in the form of resistance changes in the thermister, and outputs them from the engine ECU via the gateway ECU to the front air conditioner ECU.
- It is installed below the bumper reinforcement.

AC

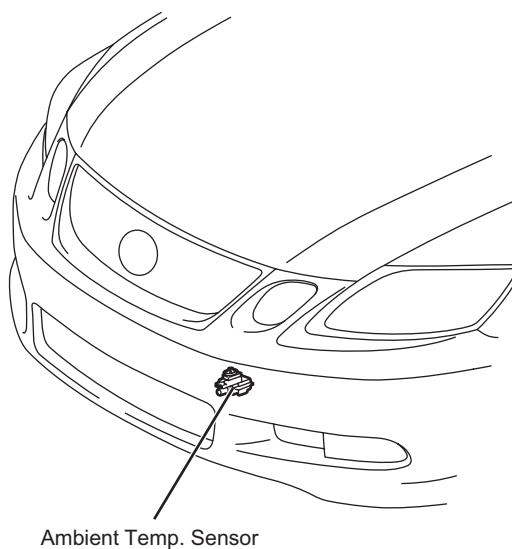

A4270015E