


Solar Sensor

- This sensor uses a scanner portion (integrated optical sensor) to detect the changes in the solar amount, and outputs them to the front air conditioner ECU in the form of frequency signals.
- A solar sensor with a built-in light control sensor is used to reduce the number of parts and improve the appearance.
- It is installed in the center of the front defroster, on top of the instrument panel.

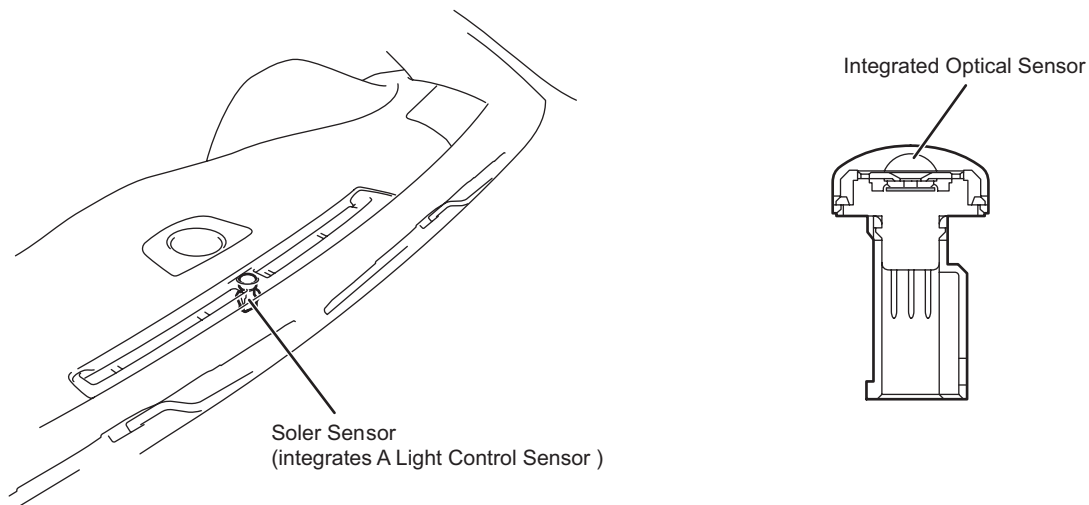


A4270012E

AC

Air Conditioner Pressure Sensor

- A pressure sensor that detects the refrigerant pressure and outputs it to the front air conditioner ECU in the form of voltage changes is used.
- It is installed on the high-pressure pipe block in front of the condenser.

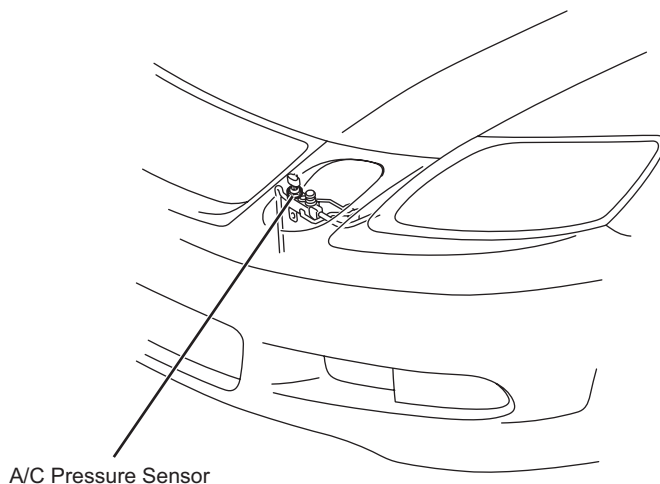

A4270013E