


Air Conditioner Control Panel

- The control switches for the air conditioner have been concentrated on the integration panel, which is located in the center of the instrument panel.
- On models equipped with the Electro Multivision, operations associated with the air conditioner are controlled by the push switches on the integration panel and the touch switches on the multi display.
- As on the previous model, a right-left independent temperature control system is used. With this system, the air conditioner control provides temperature setting switches independently for the driver and the front passenger. In addition, it provides a dual switch to switch from the linked control to the right-left independent temperature control.

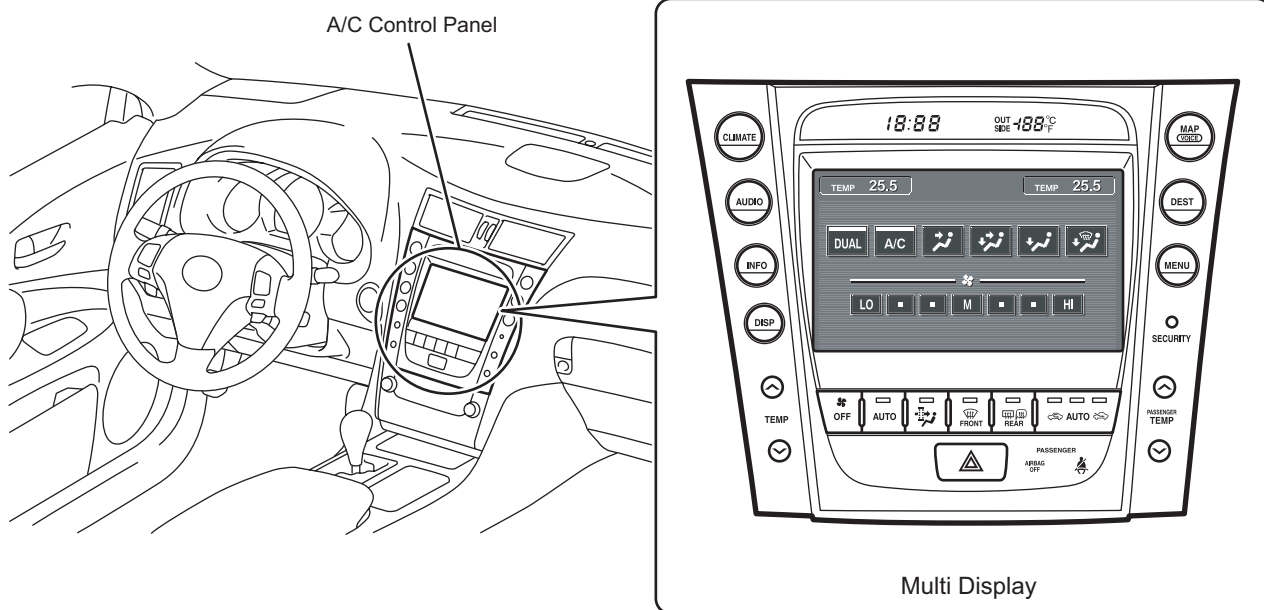

Note : The illustration gives a representative example.
and The Illustration of Multi Display excepts G.C.C. Countries Model.

A4270014E