


Description

- Rear combination lights, which consist of stop & taillights and rear turn signal lights, are located in the quarter panels. Backup lights are located on the luggage compartment door.
- LEDs are used as light sources for the stop & taillights. Two inner lenses are combined to control light distribution, thus saving electrical power (which is one of the characteristics of LEDs), and changing the dotted lights into plane lights with an unparalleled appearance.
- All models are provided with license plate lights using white LEDs.
- All models are provided with high-mount stoplight LEDs on the package tray trim as standard equipment.

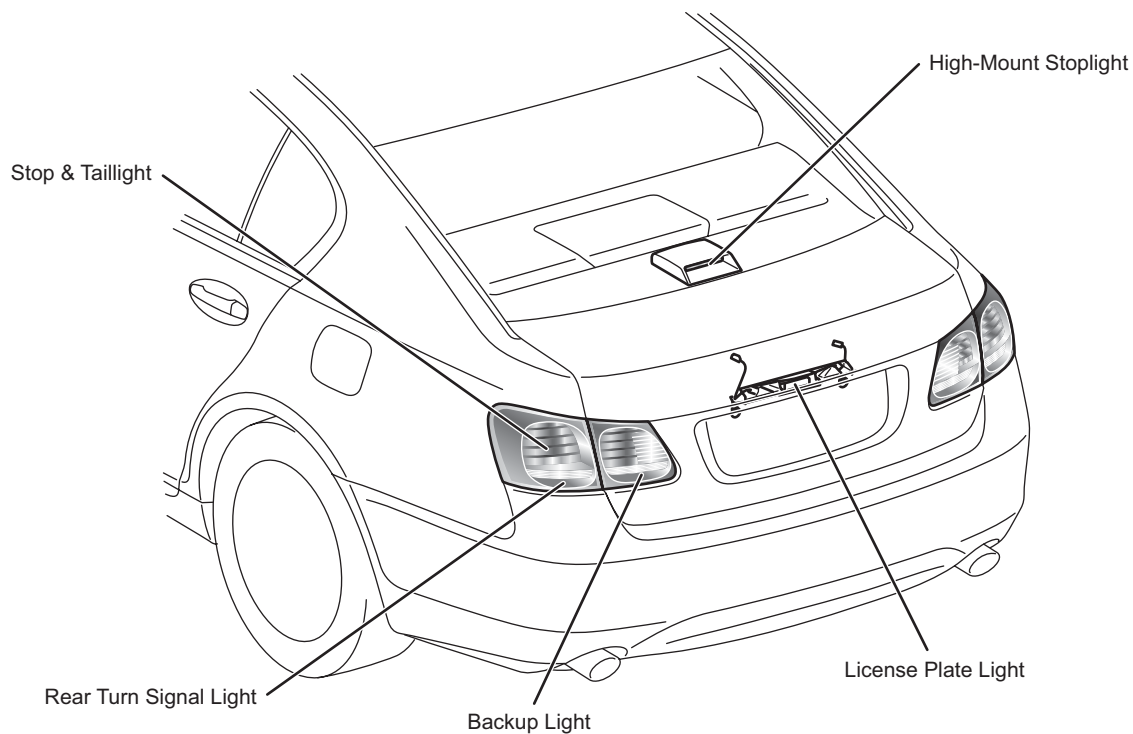

A4270096E