


Outside Air temperature Specifecation

Indication Area	Indication Configuration	Function
• -40~50°C.(1°C increments)	• Displays "E" if the meter ECU cannot receive an outside air temperature display signal. • Displays "E° C" if the meter ECU cannot receive outside air temperature data. • Displays "--°C" in case of a failure in the outside air temperature sensor.	• The front air conditioning ECU receives outside air temperature data from the engine ECU and calculates the display outside air temperature. Then, it sends the outside air temperature display signal to the meter ECU. • The meter ECU receives the outside air temperature display data from the front air conditioning ECU, and displays the outside air temperature.

Ambient Temperature Sensor

- To indicate outside air temperature on the display located in the center instrument panel, the meter ECU receives the input of a signal from the outside air sensor, which is mounted below the bumper reinforcement. This signal is input via the engine ECU in the form of the BEAN (Body Electronics Area Network).

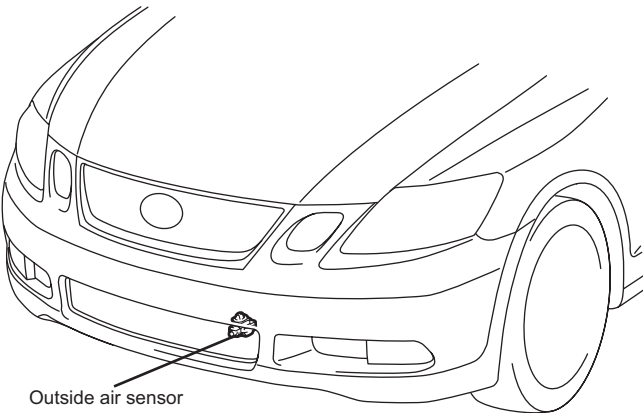

A4270353B