


Seat Belt Warning Buzzer

- With the ignition ON, and the vehicle speed exceeds approximately 10 mph(15 km/h) while the driver's or the front passenger's seat belt is unbuckled, the meter ECU will sound the multi buzzer in the combination meter to urge the occupants to buckle their seat belts.

Seat Belt Unbuckled Warning Buzzer Function

- After 1.8 seconds have elapsed with the ignition turned ON, the level 1 type will sound the buzzer for 6 seconds.
- After 13.8 seconds have elapsed with the ignition turned ON, the vehicle speed exceeds approximately 10 mph(15 km/h), and the driver's or front passenger's seat belt is unbuckled, the level 1 and level 2 unbuckled seat belt warning buzzer will sound.
- The sounding of the unbuckled seat belt warning buzzer consists of the following: During the first 9.6 seconds, approximately, level 1 emits intermittent sounds at 1.2-second intervals. Level 1 is followed by level 2, during which the buzzer emits intermittent sounds at 0.4-second intervals for approximately 20 seconds.
- While the buzzer is emitting level 1 or 2 sounds, it will stop sounding if the driver's or front passenger's seat belt is buckled.
- While the buzzer is emitting level 1 or 2 sounds, it will continue sounding even if the vehicle speed decreases below approximately 10 mph(15 km/h). After the buzzer has sounded and the vehicle speed has momentarily decreased below approximately 10 mph(15 km/h), and increased again above approximately 10 mph(15 km/h), the buzzer will continue sounding.

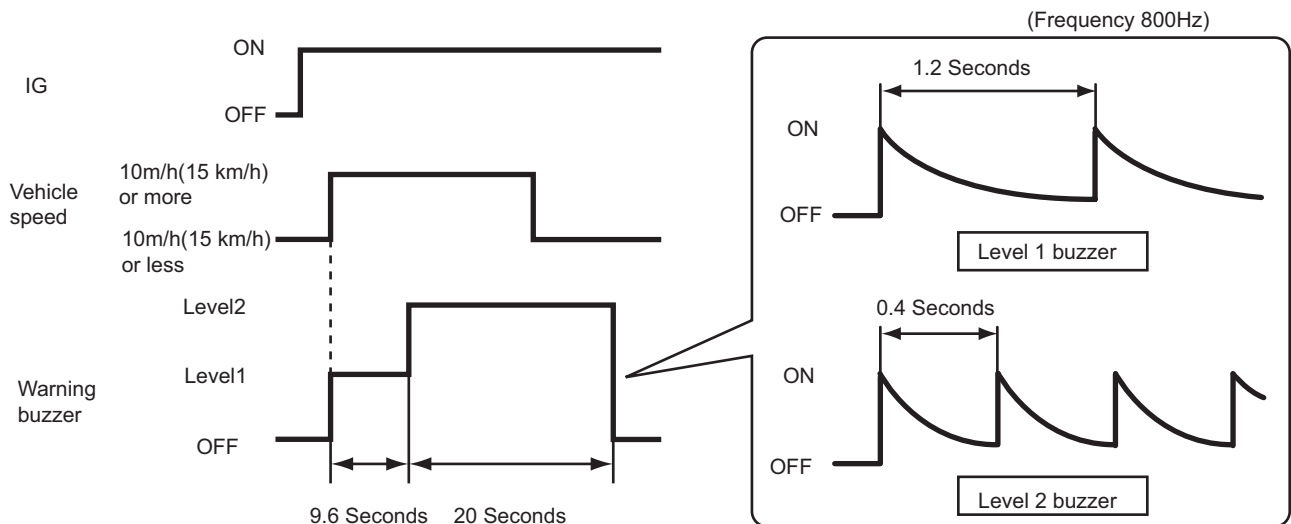

A4270112B


Seat Belt Unbuckled Warning Buzzer Operation

Driver's seat belt unbuckled warning buzzer

- The meter ECU will sound the buzzer at level 1, with approximately 1.2-second intervals, provided that the following conditions are met: With the ignition ON, the meter ECU receives the input of a driver's seat belt inner buckle switch ON signal (indicating that the driver's seat belt is unbuckled) from the center airbag sensor assembly via the BEAN (Body Electronics Area Network). And receives the input of vehicle speed signal exceeding approximately 10 mph(15 km/h) from the skid control ECU. After approximately 9.6 seconds have elapsed in this condition, the buzzer sounds at level 2, with approximately 0.4-second intervals for approximately 20 seconds.
- The buzzer that sounds with the ignition ON and the vehicle stopped, will stop when the driver's seat belt buckle switch is turned OFF (indicating that the driver's seat belt is buckled) or when the ignition is turned OFF.
- The buzzer that sounds after the vehicle is in motion will stop when both the driver's and front passenger's seat belt buckle switches are turned OFF (indicating that both the driver's and front passenger's seat belts are buckled) or when the ignition is turned OFF.

Passenger's seat belt unbuckled warning buzzer

- When the meter ECU receives the inputs of an occupant detection sensor ON signal and a front passenger seat belt buckle switch ON signal (indicating that the front passenger's seat belt is unbuckled), and the vehicle speed exceeds approximately 10 mph (15 km/h), it will sound the buzzer.

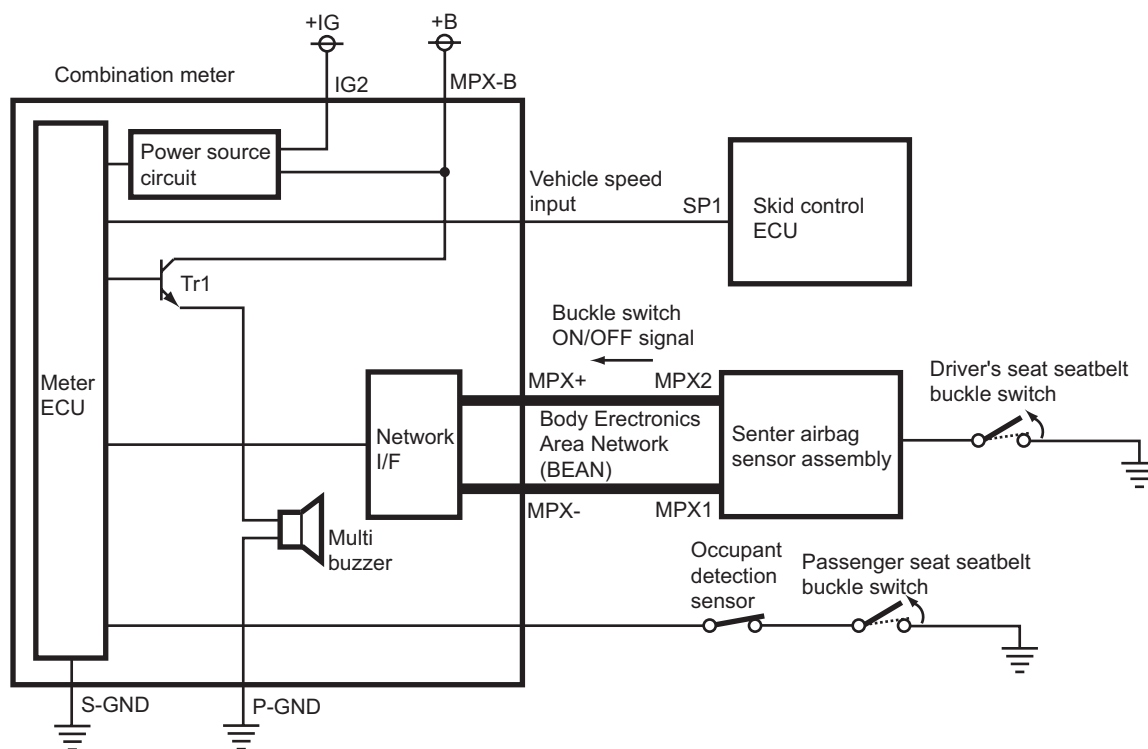

A4270113B

Seat Belt Unbuckled Warning Buzzer Cancel Function

- The buzzer can be canceled if a user has a special reason to cancel the buzzer. Only the buzzer that sounds after the vehicle is moving can be canceled. The buzzer that sounds with the ignition turned ON cannot be canceled.


Buzzer Cancellation Operation Method

- In the ODO display mode, within 6 seconds after the ignition has been turned ON, press and hold the ODO/TRIP switch for 10 seconds or more.
- Then, when the buckle switch is turned ON (by buckling the seat belt), the system will enter the cancel mode.

Enter the buzzer cancel mode

Operation switch	Function
Driver's buckle switch ON	Cancels the sounding of the buzzer for both the driver's and front passenger's seat belts
Passenger's buckle switch ON	Cancels the sounding of the buzzer for only the front passenger's seat belt

- When the system enters the cancel mode, the mode will appear on the multi-information display. The driver can press the ODO/TRIP switch to switch between ON and OFF.

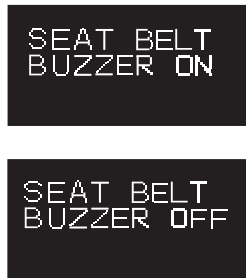

A4270532B

- The cancel mode will end if the ODO/TRIP switch is not pressed for 10 seconds.
- After a cancellation, if the system enters the cancel mode again, the buzzer is restored by the buckle switch that is turned ON.

buzzer mode

Operation switch	Function
Driver's buckle switch	The buzzer sounds ON for both the driver's and front passenger's seat belts
Passenger's buckle switch	The buzzer sounds ON only for the front passenger's seat belt