


Multi Display Information Mode Functions

- When the "information" switch is pressed on the panel switch, the screen will transfer to the information mode screen, where the user can select various information displays.

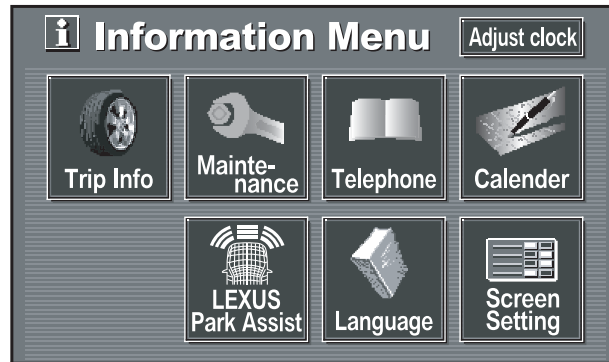

A4270056E

List of The Information Mode Function

Function Name	Main Function	Required Option Instruments
Repeat Warning Display	Repeats the vehicle warning display	—
Delete Beep	Sets beep sound (switch response sound) ON or OFF	—
Vehicle Information	Displays vehicle information such as fuel consumption, distance driven, etc.	—
TEL (telephone book display)	Displays a list of telephone numbers	—
TEL (handsfree calls)	Handsfree calls	Handsfree system
Clearance Sonar	Sets front & clearance sonars	Front & clearance sonar system
Maintenance	Inputs and displays maintenance information	—
Setting	Sets the displays for information screen, audio screen, etc.	—
Language	Sets the language	—

BE

Warning Repeat Display


- By touching "warning repeat display" on the information mode screen, the screen transfers to the vehicle warning display. Thus, it can display again the vehicle warning display that was displayed once before. For details, refer to the vehicle warning display screen.

Delete Beep

- By touching "delete beep" on the information mode screen, the user can turn the beep sound (switch response sound) that is emitted when the touch switch is operated ON or OFF. After the beep sound is set to OFF, the operation indicator light on top of the switch will turn OFF.

Vehicle Information

- By touching "Trip Info" on the information mode screen, the screen transfers to the trip information display, where various types of information can be displayed, such as average fuel consumption, or continuous drivable range. Also, by touching "Reset" on the screen shown at the right side of the driven distance , the user can reset the average vehicle speed and driven distance.

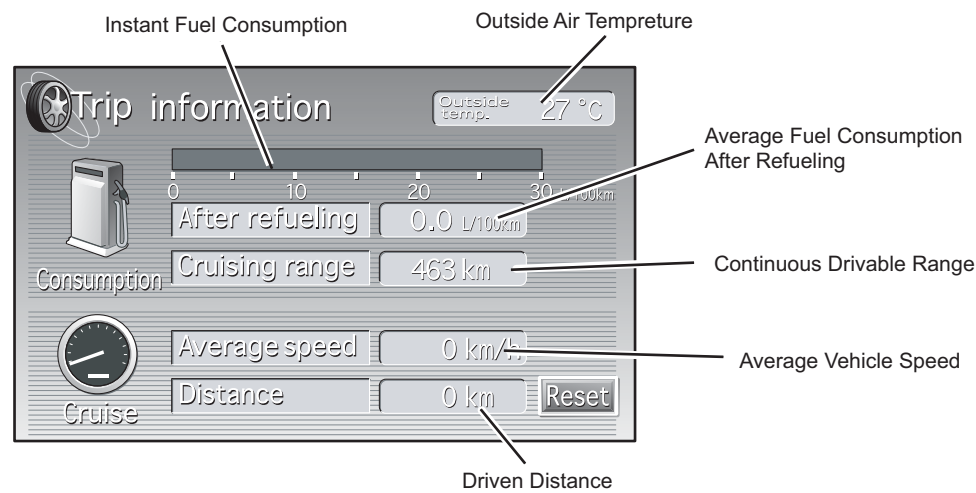

A4270385B

List of The Trip Information Display Content

Outside Air Temperature	Continuous Drivable Range
Instant Fuel Consumption	Average Vehicle Speed
Average Fuel Consumption After Refueling	Driven Distance

Telephone Directory

Telephone Book Display (when a handsfree system, which is available as a dealer installed option, is not installed, or when a mobile telephone that supports Bluetooth is not being used)

- By touching "Telephone" on the information mode screen, followed by the touching of "traffic•navi" on the telephone screen, the screen transfers to the telephone book screen. This will display a list of telephone numbers for the facilities (such as JAF or road traffic information center) that are stored on a map DVD-ROM disk.
- If telephone numbers are input at preset destinations, registered memory spots, and special memory spots, the telephone numbers for those spots can also be displayed.

Telephone (Handsfree Call)

Handsfree Call (when a handsfree system, which is available as a dealer installed option, is installed, or when a mobile telephone that supports Bluetooth is being used)

- By touching "Telephone" on the information mode screen, the screen transfers to the telephone screen. This enables the user to make a handsfree call on the user's mobile telephone. For details, refer to the handsfree call function.

Clearance Sonar

- By touching "clearance sonar" on the information mode screen, the screen transfers to the clearance sonar setting screen, where various settings related to the front & clearance sonars can be performed. For details on the clearance sonar setting screen, refer to the front & clearance sonar system.

Maintenance

- By touching "maintenance" on the information mode screen, the screen transfers to the maintenance menu screen, where various types of maintenance information, such as the oil change timing, can be displayed and input (timing, distance, dealer, etc.). Also, by touching "PERSONAL ITEMS" on the screen while the maintenance menu screen is being displayed, the screen transfers to the personal items screen. This screen can display personal information such as when to update the driver's license can be displayed and the timing can be input.

List of maintenance menu

Change engine oil	Replace wiper rubber blade
Replace oil filter	Change engine coolant (LLC)
Rotate tires	Change brake fluid
Replace tires	Change automatic transmission fluid (ATF)
Replace battery	Personal items (transfer to personal items menu)
Replace brake pads	

List of personal items menu

Procare 10	Polymer maintenance
Mileage service	Replace air purifier filter
12-month inspection	Insurance expiration
Vehicle inspection	Update driver's license
Glass coating	Personal reminder (set by placing your own title)