


Initialize Function During Part Replacement

- The initialize function must invariably be performed whenever one of the conditions indicated in the table below occurs.

List of initialize item

Parts Name	Condition	Initialize Item
Television Camera	• Camera position shifted • Removal and reassembly • Replacement • Deformed when the mounted area is struck	• Camera position adjustment – Vertical position – Horizontal position – Roll angle, pan angle, tilt angle
Television Camera ECU	Replacement	• Neutral steering point in memory • Maximum side-to-side steering angle in memory • Camera position adjustment – Vertical position – Horizontal position – Roll angle, pan angle, tilt angle
Steering Angle Sensor	• Replacement • Removal and reassembly	• Neutral steering point in memory • Maximum side-to-side steering angle in memory

- The initialize function described above is performed on the diagnosis menu screen.
- When the initialize function be performed, the VGRS system is automatically set up by CAN (Controller Area Network) communications.*
- The method for starting the diagnosis menu screen is the same as in the navigation system.

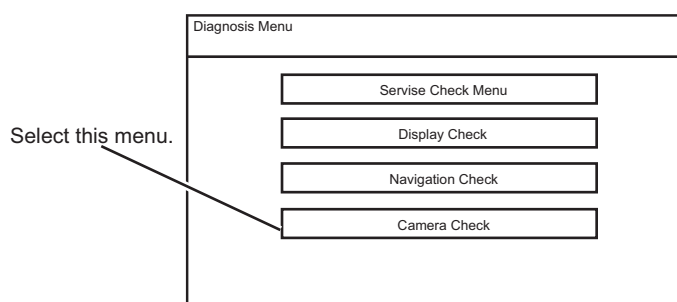

A4270206E

❖REFERENCE❖

* : Only with 3UZ-FE engine.