


Cup Holder & Ashtray


- A push-open cup holder is provided in the upper console panel. Also, a removable cup holder support is used.
- The end of the cup holder door is positioned low when it is open in order to facilitate the placement of cups. When the cup holder door is closed, the gap between it and the upper console panel has been reduced for good looks.
- A push-close ashtray is provided under the center cluster.

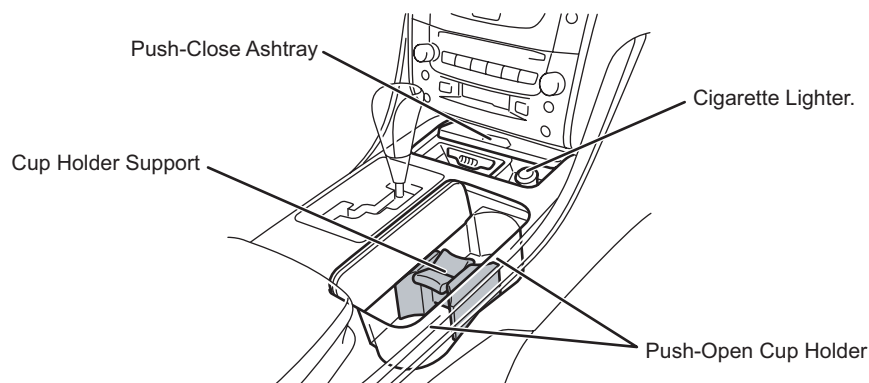

A4270269B

Console Box

- The console box is provided with an inner tray and a large box. A slide & turn console box door is provided to achieve superior ease of use.
- The ECT pattern select switch and the absorber control switch (3UZ-FE only) will appear when the console box door is slid backward.
- To use the large box located in the bottom of the console box, slide the console box door backward and turn it upward. When the door is turned, the end of the door is positioned "low and forward" for ease of operation.
- The inside of the large box and the bottom of the inner tray are covered with flocked fabric for a luxurious look.

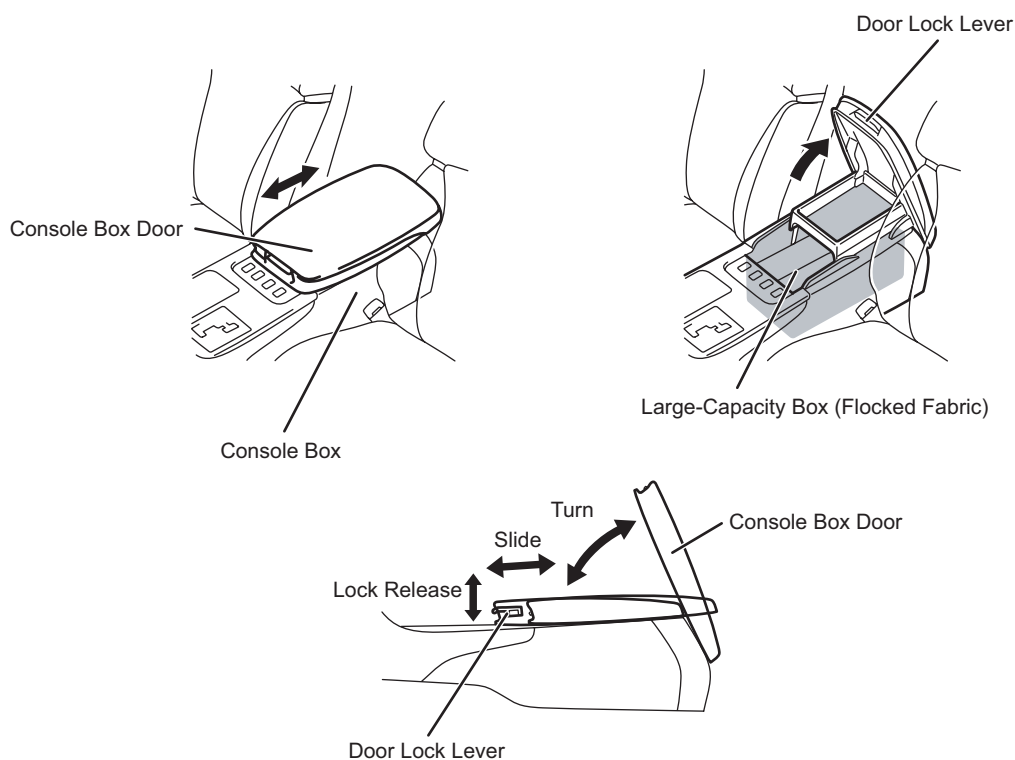

A4270270B