



Climate Control Seat System

- The front seat with the ventilation function consists of a seat heater & ventilation volume switch, seatback climate control blower, seat cushion climate control blower, etc.
- By turning the seat heater & ventilation volume switch counterclockwise from OFF in the center position, the ventilation volume can be adjusted to three levels. The indicator light illuminates green to indicate that the ventilation function is operating.
- When the user operates the seat heater & ventilation volume switch located forward of the console box, the blower motor in the seat back/seat cushion climate control blower operates to direct the air that is drawn in from behind the climate control blower to both the seatback and seat cushion pads.
- After the air is directed to both the seatback and seat cushion pads, it travels throughout the pads along the grooves that are provided in the pads. Then, it spreads to the entire seat along the slab urethane layer, and becomes discharged through the perforations in the genuine leather seat cover.

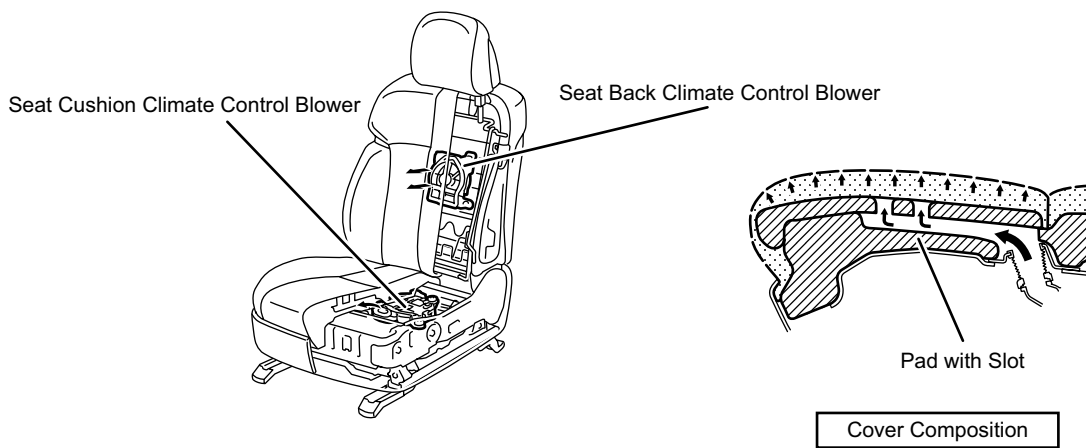

A4270334B

- A floating construction is used for installing the seat cushion climate control blower and the seat cushion spring. This construction allows the bushings to absorb the vibrations of the blower motor and the fan and suppresses their transmission to the seat cushion springs.

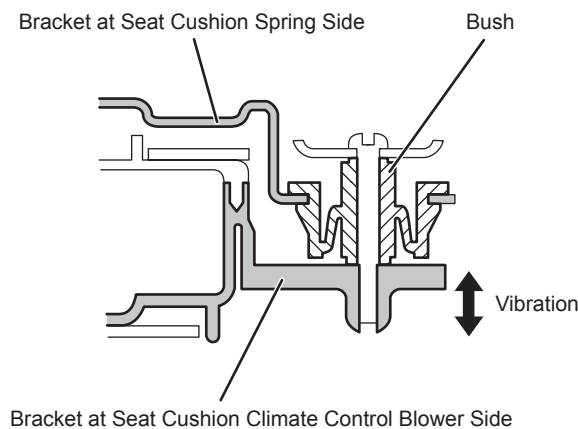

Floating Construction

A4270279B