


VSC Opeation Method

- Easing a Strong Rear Wheel Sideslip Tendency of the Vehicle

When the skid control ECU judges that the vehicle exhibits a large rear wheel sideslip tendency, it applies the brakes on the front and rear wheels on the outside of the turn in accordance with the extent of that tendency. This suppresses the rear wheel sideslip tendency by generating a moment outward of the vehicle. In addition, the vehicle speed that is reduced by the application of the brake force also contributes to ensuring vehicle stability.

- Easing a Strong Front Wheel Sideslip Tendency of the Vehicle

When the skid control ECU judges that the vehicle exhibits a large front wheel sideslip tendency, it controls the engine power output in accordance with the extent of that tendency. Then, the skid control ECU applies the brakes on the front and rear wheels to reduce the side force, in order to suppress the front wheel sideslip tendency.

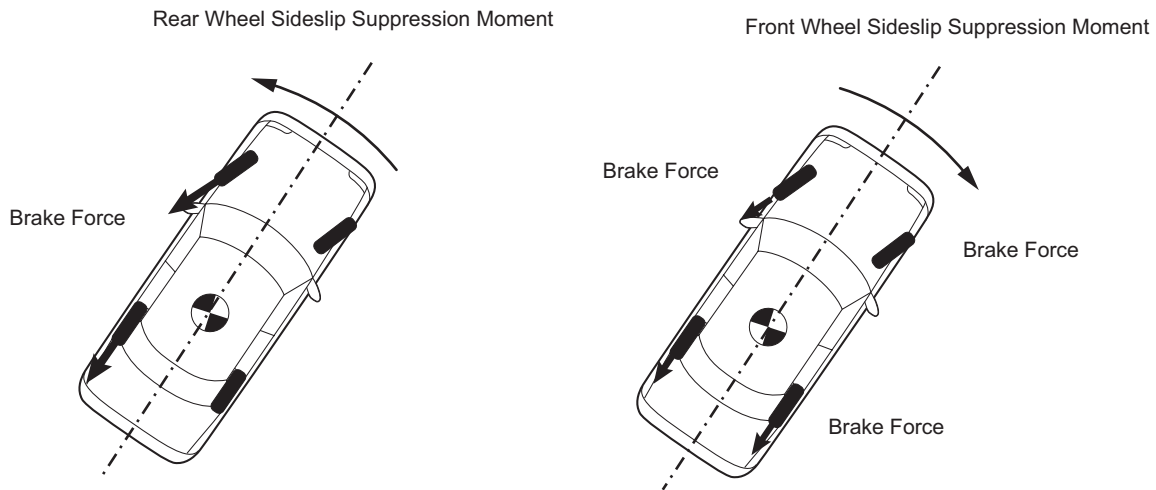


Making a Right Turn

A4270093C

Hill Start Assist Control

- When the hill start assist control detects that the vehicle is rolling backwards, it automatically applies brake hydraulic pressure to the four wheels, in order to reduce the reverse speed of the vehicle.
- This function is effective in a situation in which it is difficult to start off the vehicle, such as starting off on a steep or slippery hill, where the vehicle is likely to roll backwards as the driver switches from the brake pedal to the accelerator pedal.

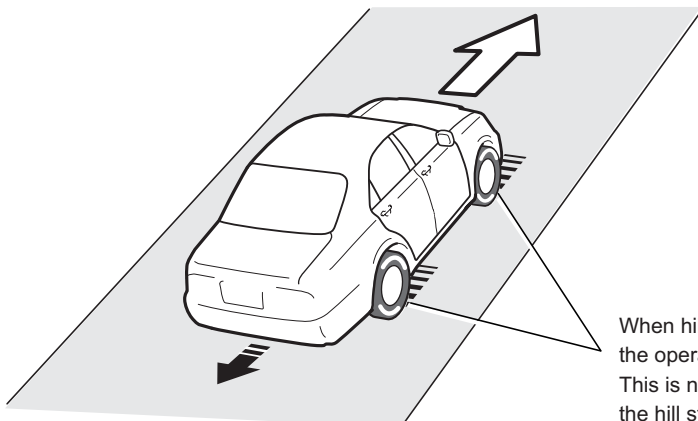

When hill start assist control operates, the operating sound may be audible. This is normal and just indicates that the hill start assist control is operating normally.

A4270096C

Operation Conditions

Shift position D, 6, 5, 4, 3, 2, or 1 selected	Operates during start-off acceleration while driving uphill. Therefore, it does not operate with the shift lever in the P or N position. It does not operate when driving uphill in reverse, with the shift lever in the R position.
Brake Pedal OFF	Prohibits the operation of the system when the driver presses the brake pedal, so as not to prevent the driver from stopping the vehicle.
Limited time operation	The hill start assist control, which is intended to assist the driver in starting off, operates only approximately 5 seconds at the maximum. After that, it gradually reduces the brake hydraulic pressure and ends the control.

Effectiveness of the Hill Start Assist Control

- Because it reduces the chance of the vehicle rolling backwards as the driver switches from the brake pedal to the accelerator pedal, it allows the driver to perform the pedal maneuver comfortably.
- Because it reduces the speed of the vehicle rolling backwards, it minimizes the wheel spin when the driver presses the accelerator pedal, thus facilitating the startoff on a slippery surface.
- Because it optimally controls the brake hydraulic pressure to the four wheels, it ensures vehicle stability without causing the wheels to lock up on slippery hills.

BR

Description of the Hill Start Control

- The skid control ECU receives the inputs of signals from various sensors that detect the shift position and the travel direction of the vehicle body (such as by way of the wheel speed sensors, which are capable of detecting the rotational direction). Then, the system determines whether the vehicle body is rolling backwards while the driver is attempting to drive it uphill.
- The acceleration sensors detect the gradient of the hill and the acceleration state of the vehicle body. The wheel speed sensors detect the locking state of the wheels and their rotational direction. Then, the skid control ECU calculates the amount of control that is needed and implements brake hydraulic pressure control to the wheels.
- When the vehicle starts to move forward, the system releases the brake hydraulic pressure and stops the control.

Precautions for Hill Start Assist Control

- The hill start assist control is not a function for keeping the vehicle stopped on a hill.
- During a hill start assist control operation, the slip indicator light blinks in the combination meter, and the brake lights illuminate.
- The hill start assist control system controls the brakes at four wheels to reduce the reverse movement of the vehicle. However, it might not be fully effective on extremely steep slopes or on icy roads or other surfaces with very low friction.
- When the hill start assist control is operating, a sound indicating its proper operation may be heard, which is normal.

Radar Cruise Control Brake Operation

- If a greater deceleration rate is required while driving in the vehicle control mode, this control generates a brake force by controlling the brake hydraulic pressure in accordance with the signals received from the distance control ECU.