


Skid Control ECU

- The skid control ECU processes the signals from the sensors and effects the brake control for the ABS, TRC, VSC, and brake assist systems. It also maintains communication with the engine ECU and outputs control signals.

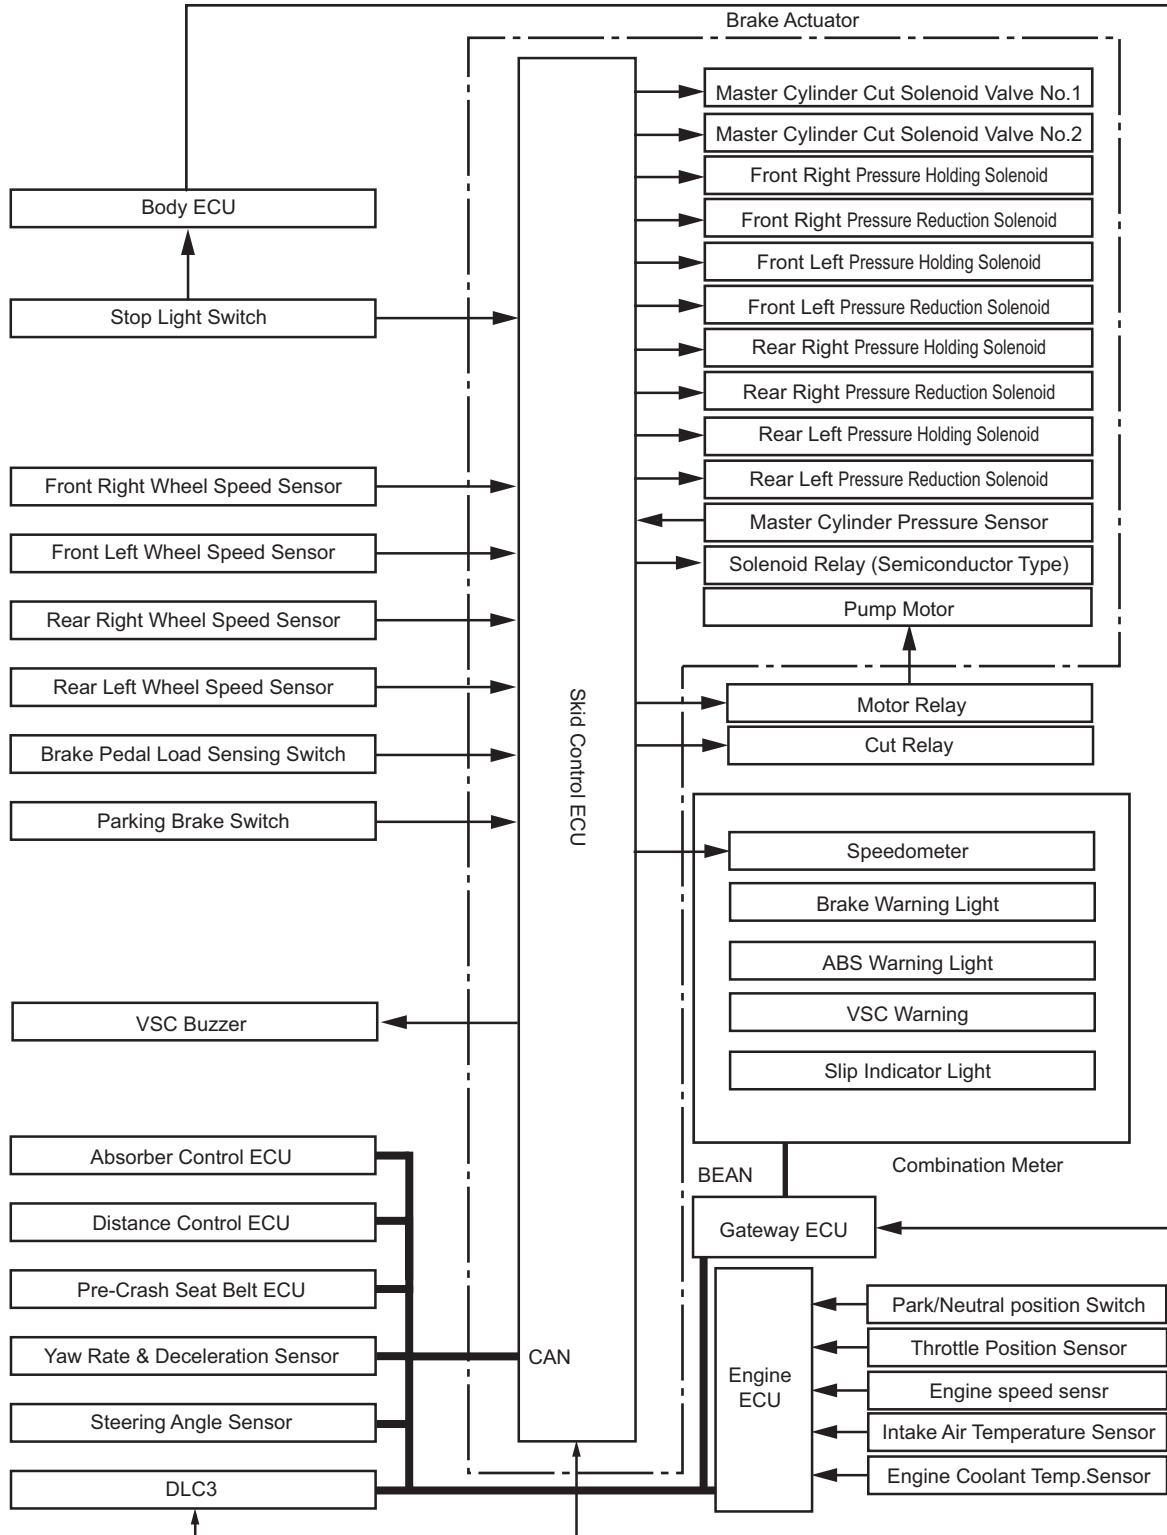

* : Displayed on The Multi-Information Display

Initial Check Function

- When the vehicle first reaches a speed of more than approximately 6 km/h after the driver turns the ignition switch ON, the system actuates the solenoid valves and the motor in the brake actuator in sequence to perform an electrical check. During the initial check, the solenoid valves and the motor will make an operating sound in the engine compartment, which is normal.