

TRC OFF Switch

- A momentary switch is used and installed on the center console. The driver can set the operation of the TRC ON and OFF by pressing the TRC OFF switch. When the driver presses TRC turns the ignition switch from OFF to ON, the system switches automatically to the normal driving mode.

