


## Power Backup Unit


- A power backup unit is used as an auxiliary source to supply stable power to the brake system, and is located on the right side of the luggage compartment.
- The unit has a built-in capacitor (high-capacity condenser), which receives the electric charge discharged by the vehicle's 12V power source.
- When there is a voltage drop in the vehicle's 12V power source, the capacitor discharges the electric charge that is stored in it in order to supply power to the brake system.

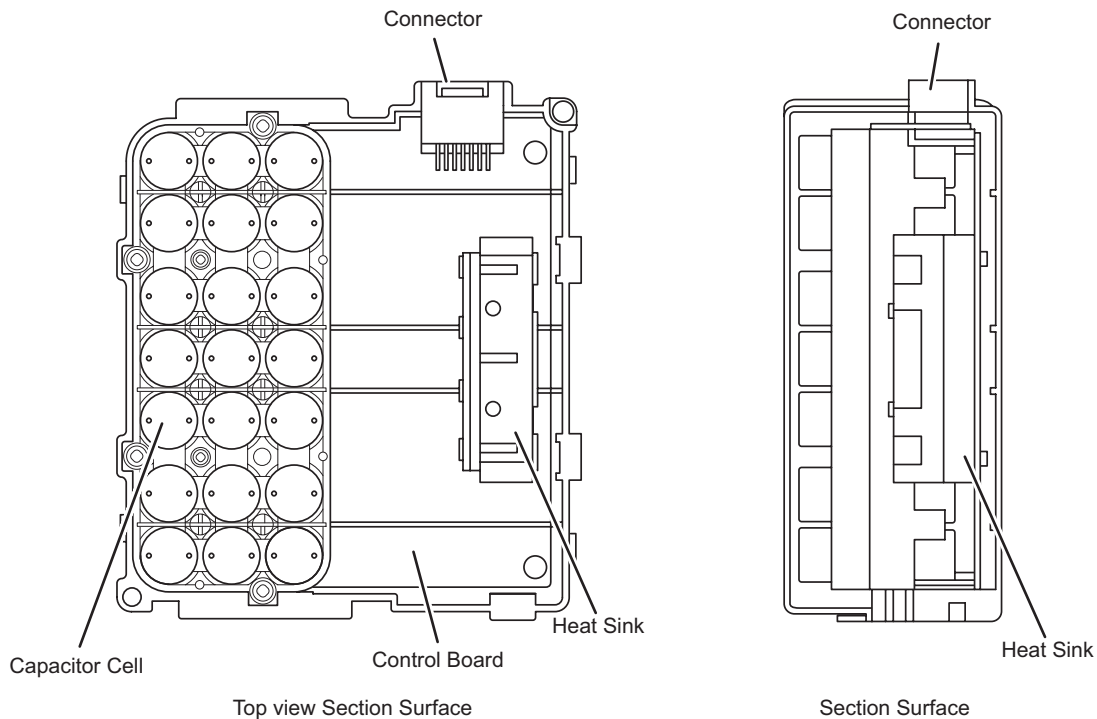

A4270101C

## Brake Pedal Stroke Sensor

- The 3UZ-FE engine models use a brake pedal stroke sensor.
- The sensor is mounted to the brake pedal to detect the amount of brake pedal effort.
- The stroke sensor is a sliding resistance type.

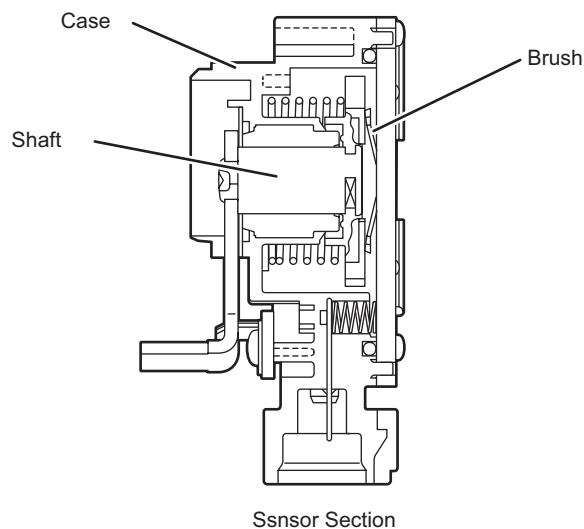

A4270102C