


Cruise Control Switch

- The cruise control switch, which is installed on the right side of the steering wheel, integrates a push-type main switch and a lever-type, three-way operation switch to ensure the ease of use. The lever-type operation switch is an auto-retract type that switches ON while it is being operated and switches OFF when it is released. The operations of this switch are valid only when the main switch is turned ON.

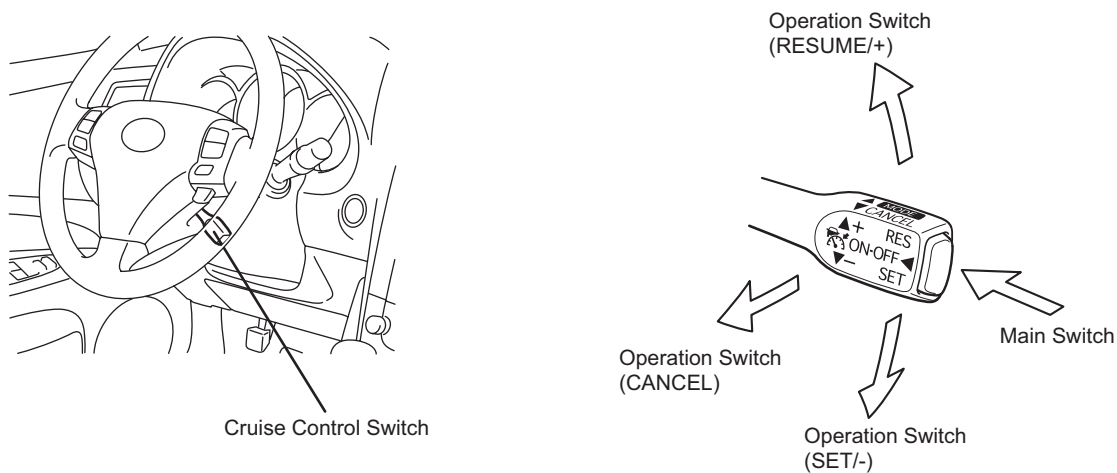

A4270422B

Cruise control switch function list

Switch name	Function
Main Switch (Push Type)	Toggles between ON and OFF to supply the main power to the cruise control system each time the driver pushes this switch.
Operation Switch (three-way lever type)	While the main switch is ON, the driver operates this switch to perform the following controls: SET/- (vehicle speed setting/deceleration control), RESUME/+ (resume control/acceleration control), and CANCEL (control cancel).

Cruise Control Cancel Function

- When the driver performs any of the cancel operations listed below, the cruise control system cancels the driving operation under its control, and the system remains in the standby mode except when the driver presses the main switch.

Release operation list

Release operation	State
Pulls the cruise control operation switch towards the driver.	Cruise control operation switch: CANCEL
Pushes the cruise control main switch.	Cruise control main switch: OFF
Presses the brake pedal.	Stoplight switch: ON
Shifts to "D" position or a gear other than 6th, 5th, or 4th in the "S" mode.	In neutral start switch, "D" position signal: OFF, or a gear other than 6th, 5th, or 4th selected in the "S" mode