


CRUISE Control Indicator Light

- Located in the combination meter, this light illuminates when the cruise control main switch is ON, and blinks when there is a failure in the cruise control system. Thus, it informs the driver of the operating condition of the cruise control system or a failure in the system.

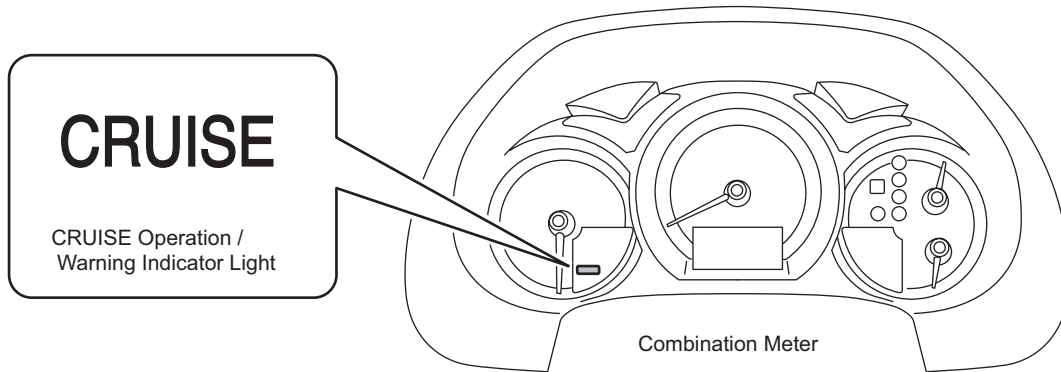

A4270423B