


Vehicle-To-Vehicle Distance Control Switch

- The vehicle-to-vehicle distance selector switch, which is installed on the right side of the steering pad, changes the vehicle-to-vehicle distance setting in three stages, long, medium, and short.
- The driver can check the vehicle-to-vehicle distance setting by looking at the indication on the multi-information display in the combination meter.

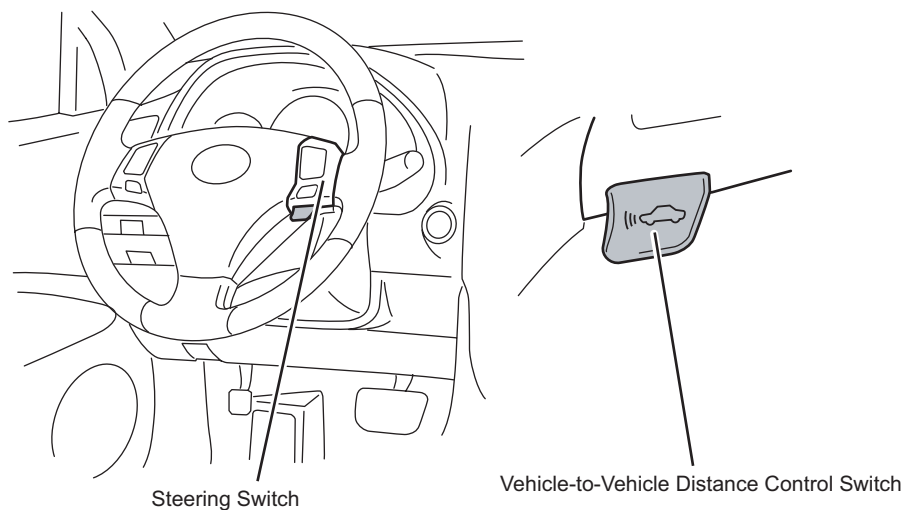

A4270427B