

Dynamic Radar Cruise Control Cancel Function

- When the driver performs any of the cancel operations listed below, the system cancels the driving operation under radar cruise control and remains in the standby mode, except when the driver presses the main switch.

Cancel operation list

Release operation	The state of a cancel switch
Radar Cruise control operation switch is pulled forward.	Radar cruise control operation switch CANCEL
Radar Cruise control main switch is pushed.	Radar Cruise control main switch OFF
Brake pedal is depressed.	Stop Light Switch ON
Shifts to "D" position or a gear other than 6th, 5th, or 4th in the "S" mode.	In neutral start switch, "D" position signal: OFF, or a gear other than 6th, 5th, or 4th selected in the "S" mode