


DIFFERENTIAL

Rear Differential Mount


- The differential is supported at 4 points : 2front and 2rear.
- The rear differential is supported by the suspension member at four points. A liquid-filled differential mount is used at the rear right of the 3UZ-FE engine models and at except the rear left of the 3GR-FSE and 3GE-FE engine models to reduce vibration and noise. (conventional mounts are used at the other three points)

3UZ-FE

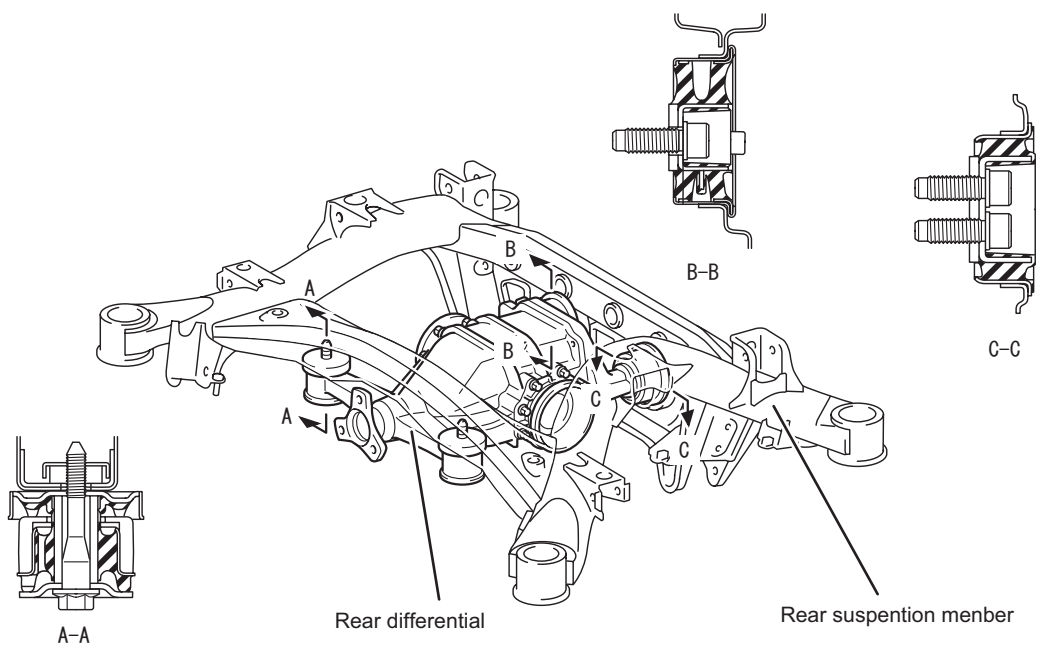

A4270312P

3GR-FSE,3GR-FE

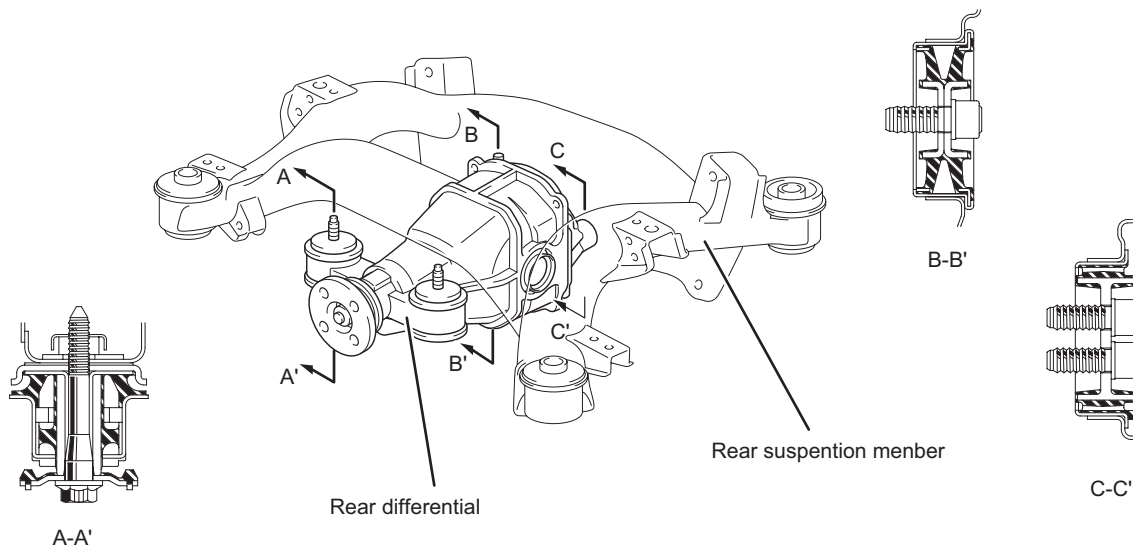

A4270321P