


Fuel Injector

Number of Orifices	4
Orifice Dimensions [mm (in.)]	0.34 (0.013)

EG**Charcoal Canister**

- Canister purge control is used to draw the fuel evaporative gas created in the fuel tank into the intake port, to be burned during combustion.
- The charcoal canister is mounted behind the fuel tank.
- An internal pressure control valve is provided at the fuel passage inlet from the fuel tank in order to maintain the proper pressure in the fuel tank.

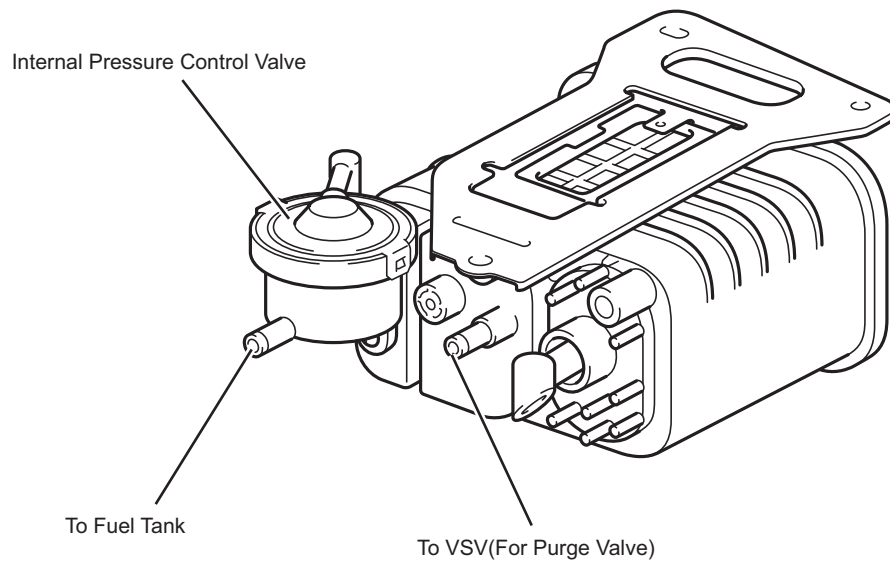

A4270164P