


Fuel Sender Gauge


- To accurately inform the driver of the residual fuel volume in the saddle-shaped tank, inline sender gauges are provided in the two chambers, A and B. These sender gauges output the residual fuel volume of both chambers to the meter ECU.
- Based on the signals received from the two sender gauges and the EFI control information received from the engine ECU, the meter ECU calculates the residual fuel volume, and activates the fuel gauge.

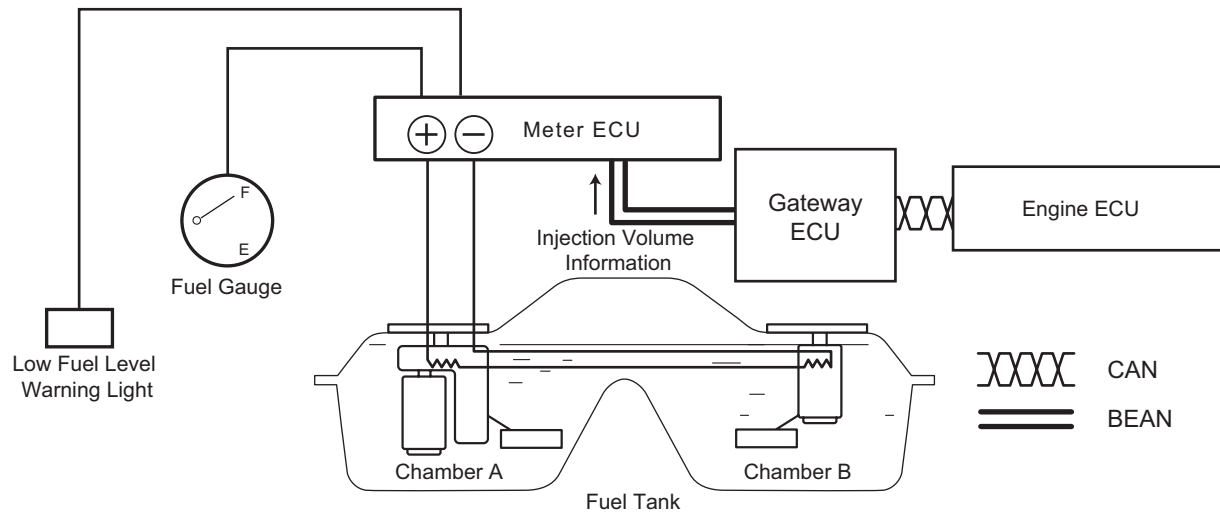

A4270193P

Delivery Pipe

- A delivery pipe made of lightweight aluminum is used.
- Pulsation dampers are provided on the right and left banks, respectively, to prevent the pulsation of the fuel.

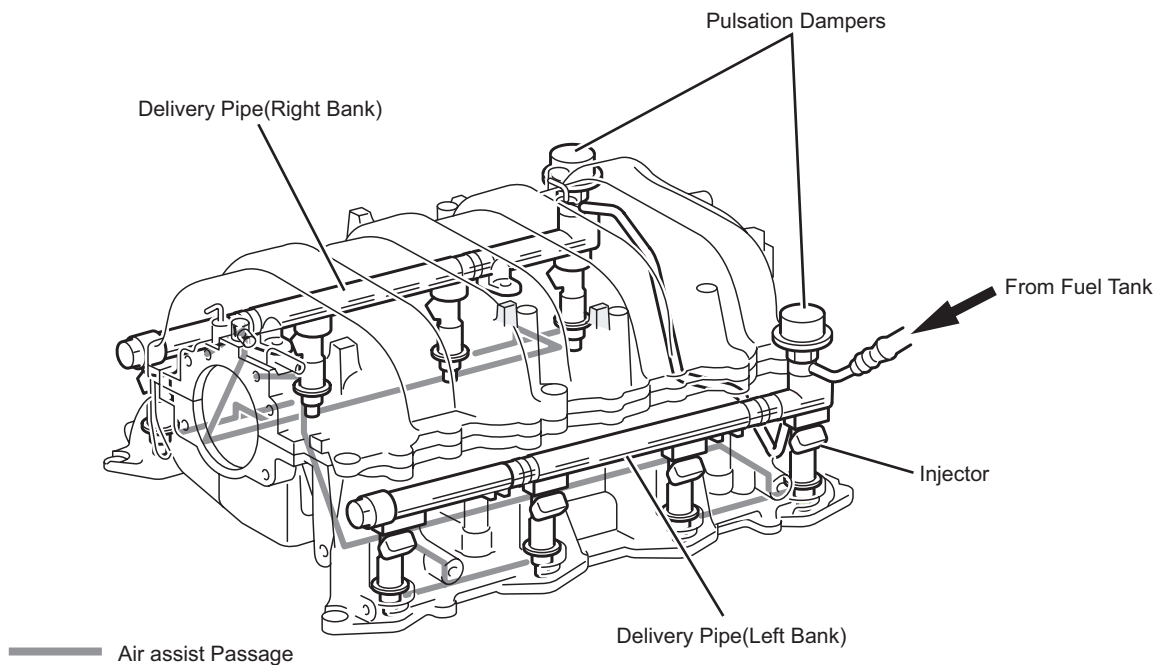

A4270118P