


Intrusion Sensor

- The intrusion sensor, which is linked to the auto alarm system, sets automatically when the system transfers to the alarm mode (and the setting of the auto alarm is completed). When the intrusion sensor detects a moving object in the vehicle interior, the system transfers to the warning mode. Then, the system sounds the horn intermittently and blinks the hazard warning light for approximately 30 seconds and performs a forced locking operation.
- The operation of the intrusion sensor can be canceled temporarily by pressing the intrusion sensor cancel switch, which is provided on the module switch. (It will set automatically the next time the setting of the auto alarm is completed.) The security indicator light blinks with short intervals during the intrusion sensor OFF mode.

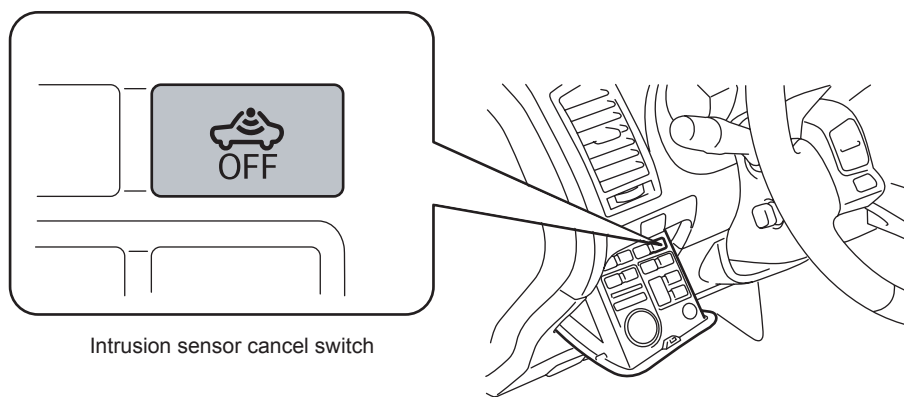

A4270636B

NOTICE

- If the vehicle is continuously exposed to abnormal shocks such as a hail or lightning, the system can improperly perform a warning operation.
- The system can improperly perform a warning operation if a mascot is suspended from the inner rearview mirror or a clothes hanger is hung in the vehicle interior.
- Set the intrusion sensor in the OFF mode before leaving a moving object, such as a pet, in the vehicle.
- Set the intrusion sensor in the OFF mode before using a high-pressure or automatic car washer.

SE

Security Horn

- The security horn, which sounds only during the auto alarm warning control, is a compact, lightweight, flat-shaped horn(excluding the Europe and China).
- It is mounted on the engine compartment room.