


Security Indicator Light

- A security indicator light is located in the right bottom area of the multi-display. This light indicates the alarm state of the auto alarm system.
- When either the auto alarm system or the engine immobilizer system is set, the security indicator light starts flashing at approximately 2.0-second cycles (0.2 seconds ON, 1.8 seconds OFF). If the auto alarm is during a set preparation or warning stage, the light will illuminate.
- The light uses an LED (Light Emitting Diode) with a lower electric power consumption.
- Right side J/B ECU controls the security indicator light for the auto alarm system. The certificate ECU controls the security indicator light for the engine immobilizer system.

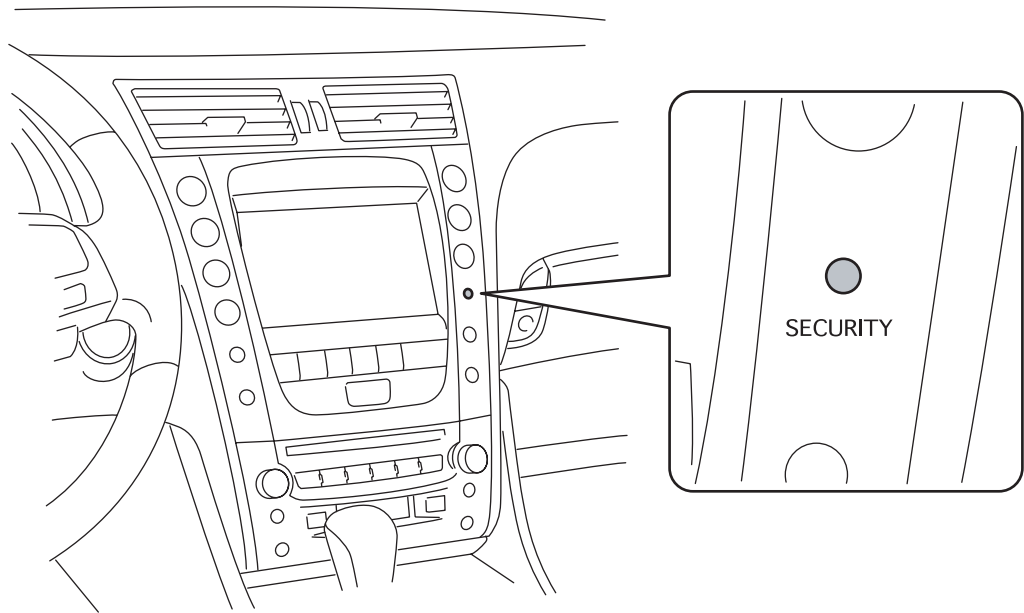

A4270416B

Security indicator lamp and auto alarm, engine immobilizer system status list

Security indicator light	Auto alarm condition
Non-Alarm Mode	OFF or blinking
Alarm Preparation Mode	ON
Alarm Mode	Blinking
Warning Mode	ON