
ENGINE IMMOBILIZER

Engine Immobilizer

- When the driver stops the vehicle and stops the engine, the security indicator light at the bottom right area of the multi-display flashes constantly at approximately 2.0-second cycles (0.2 seconds ON, 1.8 seconds OFF). This indicates that the immobilizer system is set.
- Only if the results of the check indicate that the ID codes match, the system cancels the immobilizer function. The system turns OFF the security indicator light and authorizes the engine to start. For this reason, if the system is unable to read the ID code transmitted by the key or if the ID codes do not match, the system will prohibit the engine from starting.