


Fluid Temperature Sensor

- A fluid pressure sensor for controlling the fluid pressure during shifting is installed inside the valve body.
- The Fluid temperature sensor is located at the discharge outlet of the oil pump where the temperature rise is stable, in order to directly measure the oil temperature in the oil passage. Thus, it is able to detect the oil temperature more accurately.

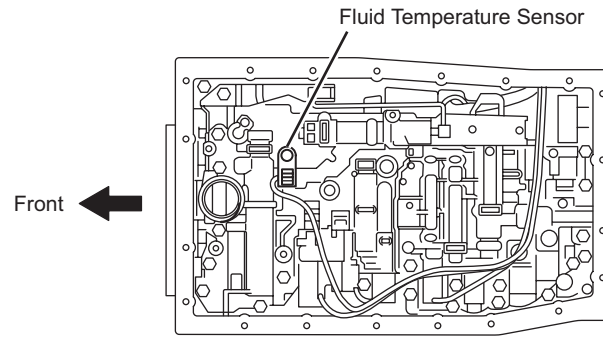


A4270331P

TM

ECT Pattern Select Switch

- An ECT pattern select switch is located behind the shift lever. The driver can select between the POWER and SNOW and NORMAL modes by turning the switch ON or OFF. (The SNOW mode is Europe model only)

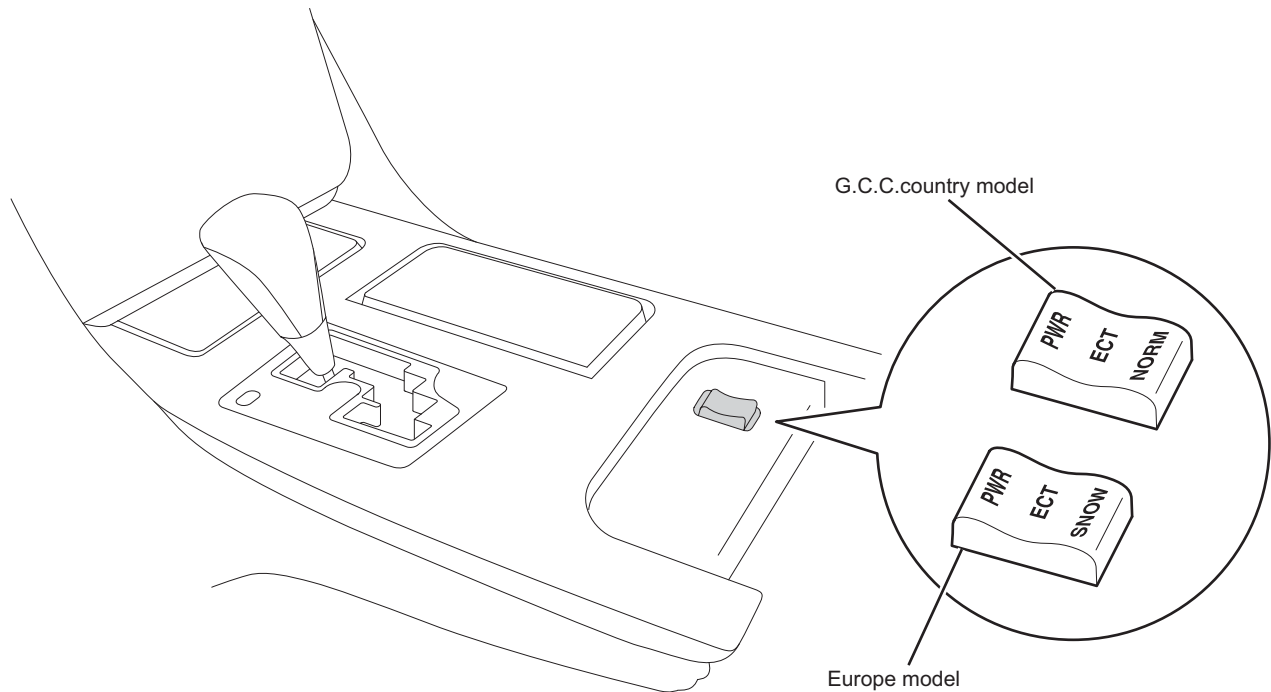

T

A4270311P